 


Yealink

MB-FS-Lift

Quick Start Guide (Floor Stand) V1.0

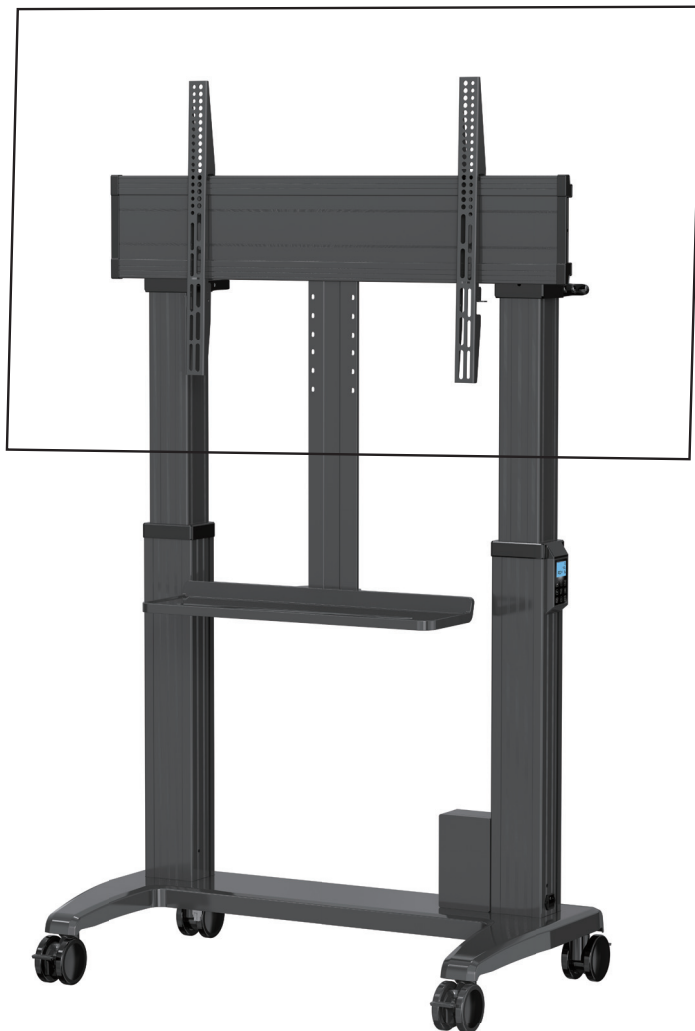

English | Deutsch | Français | Español | Nederlands |

Package Contents

i A-I accessories are used to install the host bracket. Please select according to your needs. See the chapter on installing the bracket for details.

A



M10x15 mm 4x

B



M5x25 mm 4x

C



M6x25 mm 4x

D



M8x25 mm 4x

E



M8x40 mm 4x

F



16x ϕ 6.2x1.5mm

G



ϕ 8.2x10mm 4x

H



ϕ 10.2x5mm 8x

I



ϕ 9x15mm 4x

K



M6x15 mm 4x

L



M8x12 mm 14x

* 6 for bracket installation

* 8 for tray installation

N



M8x40 mm 4x

O



6mm 1x

Illustration of Icons

Tighten	Unscrew	Use screwdriver	Use tape measure	Adjust	Manually	Use hex key	+ Tighten - Unscrew

Cautions

- The appearance of the main unit and accessories in this guide is for reference only. Please refer to the actual model and items.
- Please use the accessories included in the packaging for installation. Yealink shall not be held liable for any damage resulting from alternative installation methods.
- Please handle all items carefully to avoid damage.



 
 
At least two people are required to carry and install the host that is below 86 inches.




At least four people are required to carry and install the host that is 86 inches and above.

Installation Steps

1 Install base

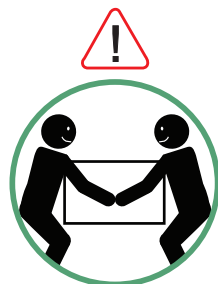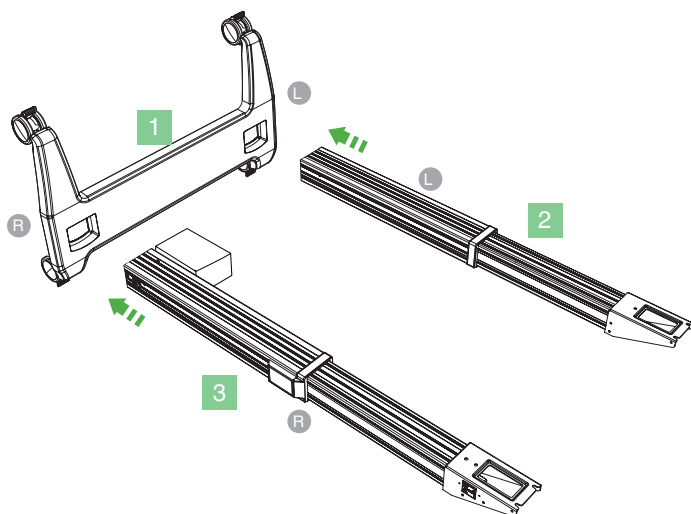




Handle with care.

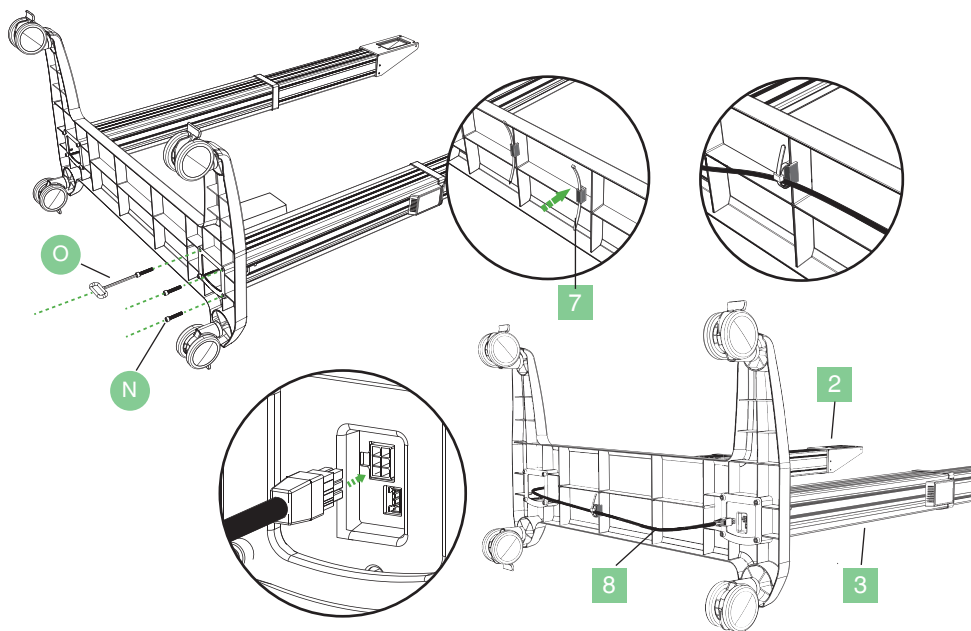 


Pull the power cord (8) out from the bottom of the left stand (2) and connect it to the bottom of the right stand (3). Secure the power cord (8) with cable ties (7).

Installation Steps

   2 Install plate

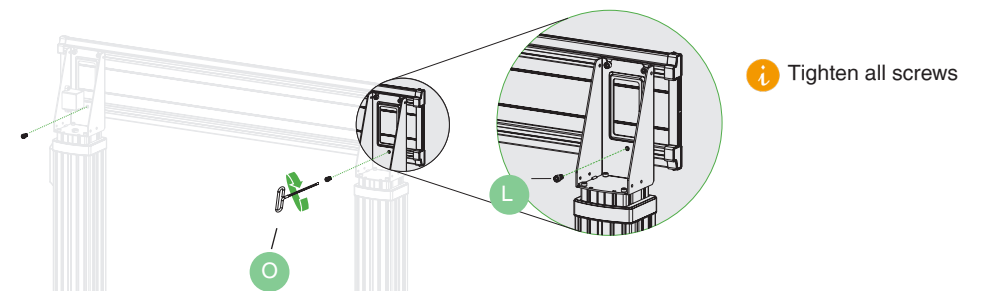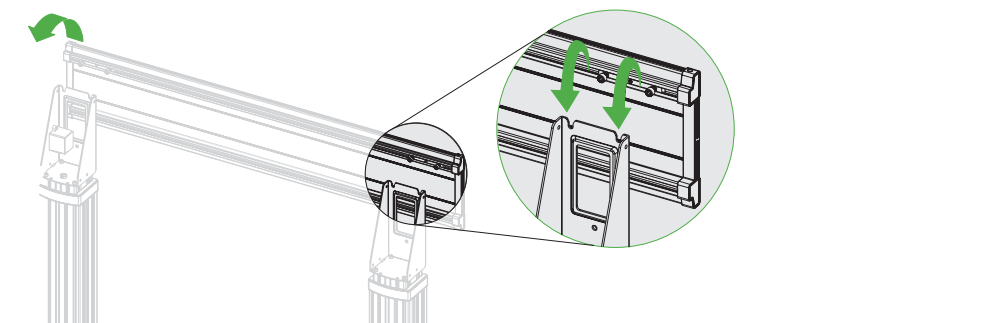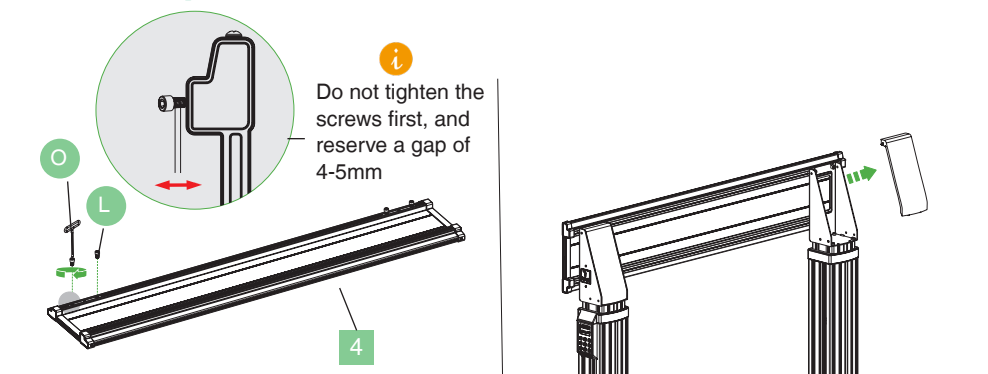


3 Install handle

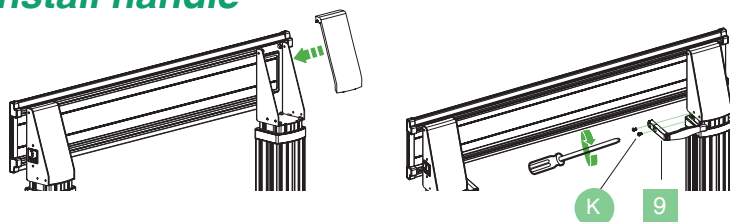 


Installation Steps

 4 Install tray

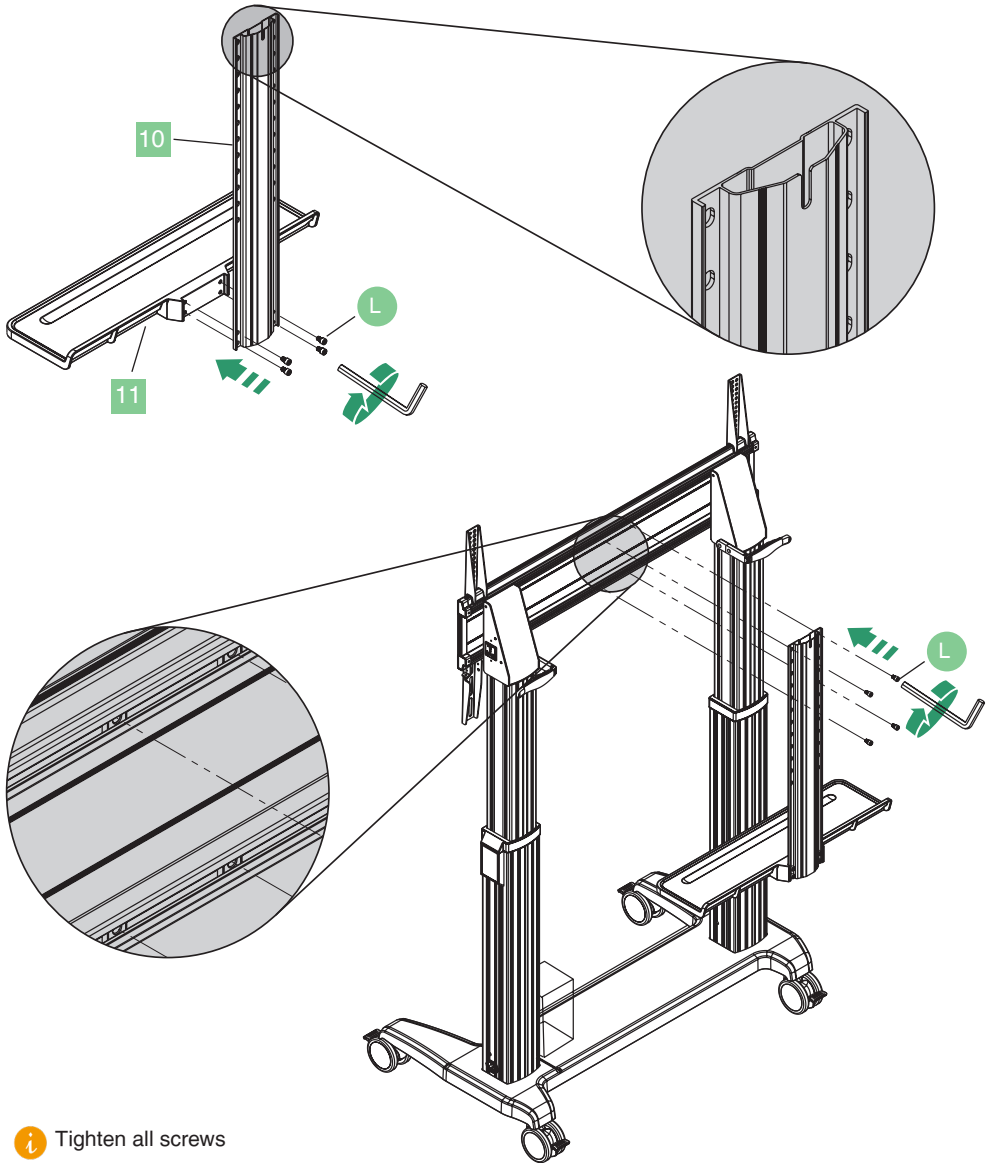

Touch Control Panel

 5 Initialize the product

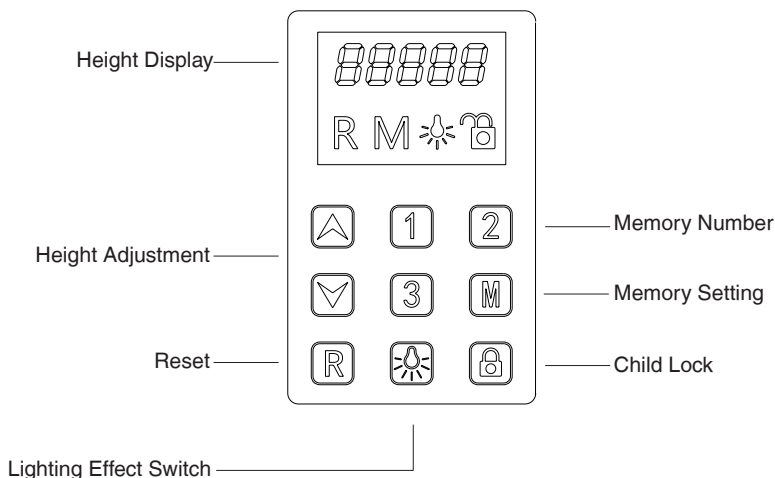

Please initialize the product in no-load state before host mounting. Please connect the power (100-240 V), unlock the touch control panel, and long press the **R** Key to initialize the setting until "1100" is displayed. Please see the Initialize Settings below for details.

Initialize Settings	Press and hold the R button until "----" flashes. This indicates that the device is being initialized. When the display shows "1100," the stand has reached its minimum height, and the initialization is complete.
Memory Settings	You can save up to three commonly used heights for quick recall. Press ▲ / ▼ to move the stand to the desired height. Press M button, M lights, and then the "S ----" flashes. Press 1, 2, or 3 button to assign the current height to a number. Memory setting is complete. To activate a saved height, press and hold the assigned number for two seconds. The stand will automatically move to the preset height.
Lighting Effect Switch Settings	ON: Press and hold 💡 until the effect light is on. OFF: Press and hold 💡 until the effect light is off.
Child Lock Settings	Lock: Press and hold 🔒 until the 🔒 icon is displayed (locked by default). Unlock: Press and hold 🔒 until the 🔓 icon is displayed.
To Raise	Press and hold ▲ , the stand will rise at a steady speed. Release the button to complete the height adjustment.
To Lower	Press and hold ▼ , the stand will lower at a steady speed. Release the button to complete the height adjustment.

 
Installation Steps

6 Install bracket


Prepared by user



Before mounting the host, ensure that you have initialized the floor stand (see Step 5 for details).

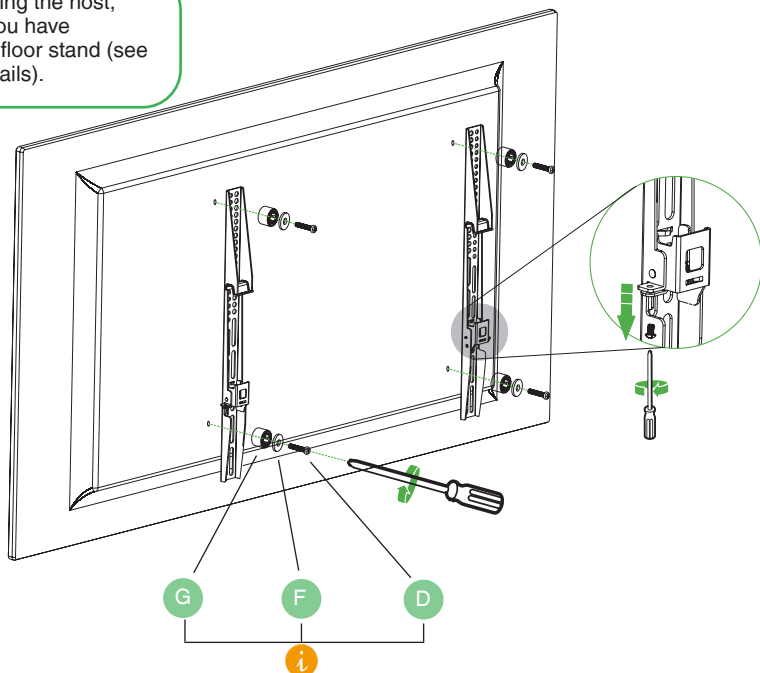


 Please select screws according to your host model. M8 is recommended for Yealink host.


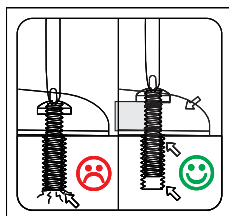


All screws must be securely tightened.


 
M10x15 mm (A)



M8x25 mm (B)
M8x40mm (E)

  


M5x25 mm (D)
M6x25mm (C)

  


Installation Steps

 7 Mount the host

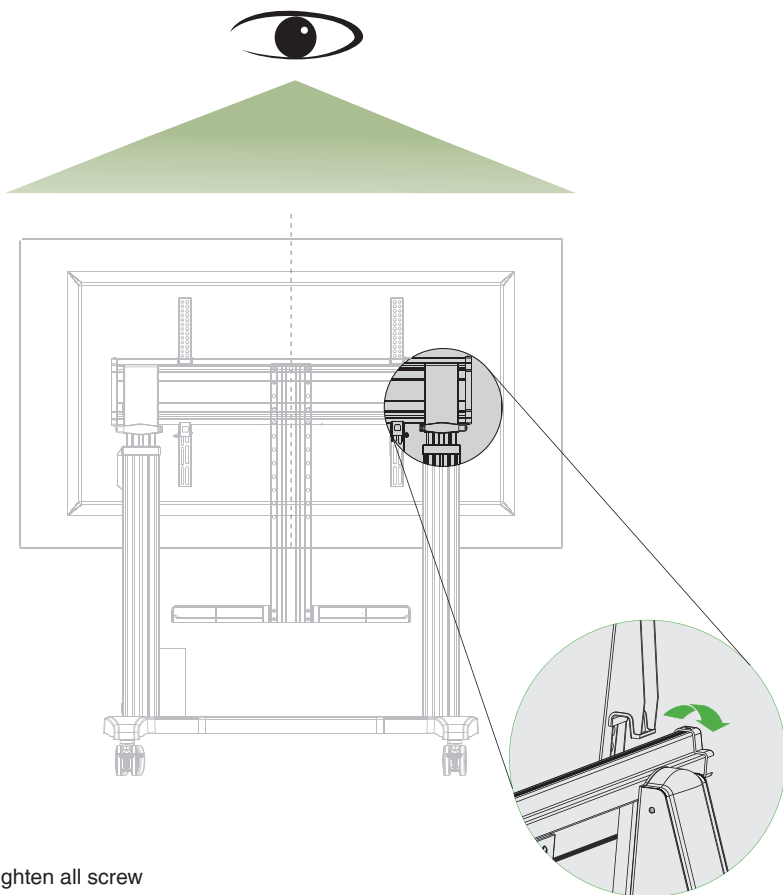


 Tighten all screw

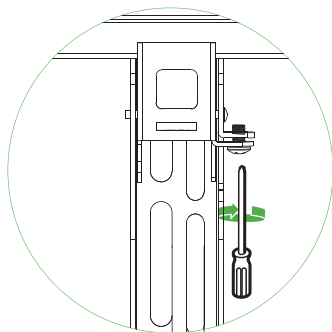 

Installation Steps



8 Power on

  Output: 100-240V 5A

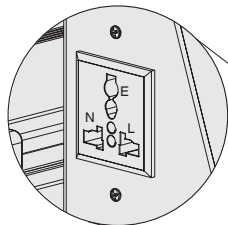

The host power cord can be connected to this interface.

   Input: 100-240V 5A

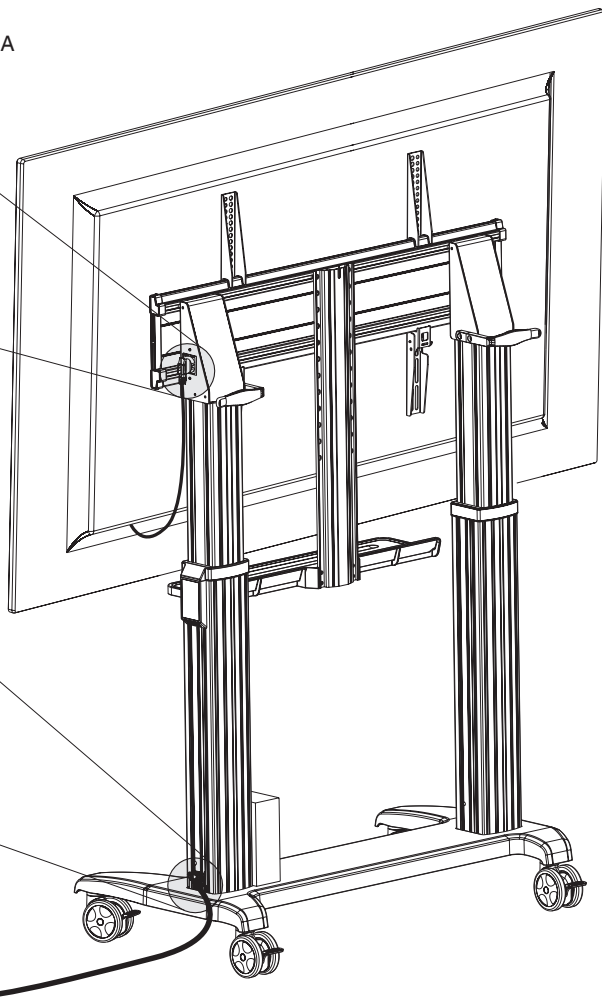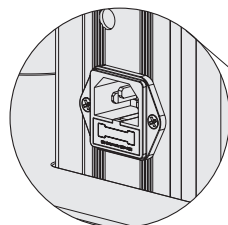


Ensure there are no obstructions at both ends during operation; otherwise, injury, loss, or damage may occur.

Troubleshooting Error Code

Error Codes	Issues	Solutions
E00	Abnormal communication between the stand and the touch control panel	Contact us or local distributors for repair service.
E01	Left or right motor short circuit	1. Check if the left and right motors are properly connected. 2. Contact us or local distributors for repair service.
E02	Motor overcurrent	1. Adjust the load distribution or reduce the load. 2. Contact us or local distributors for repair service.
E03	Motor overheated	1. Wait 18 minutes for cooling. 2. Power off the unit and plug it in again.
E04	Abnormal balance	There is a 4 mm height difference between the two stands, perform the reset procedure.

Packungsinhalt

 1

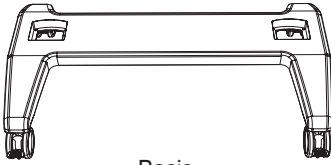

Basis

2

L



Stehen

* Eingebautes Netzkabel am Boden

3

R



Stehen

 
4



Teller

5


R

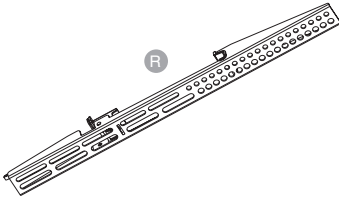

Konsole

6

 L

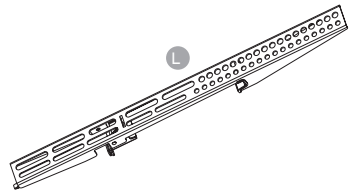


Konsole

7




Kabelbinder x 4

 8

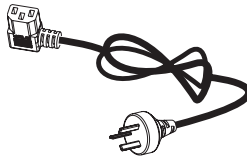


Stromkabel

 9

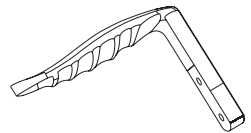


Griff X 2

 10

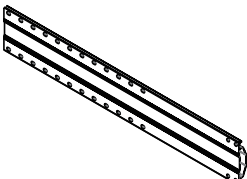

Halterung für Tablett

 11

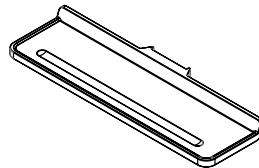

Tablett

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C) for the products with Li-ion Battery or Lens, +14 to 122°F (-10 to 50°C) for other products
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

DC symbol

⎓ is the DC voltage symbol.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.

Environmental Requirements

- Place the product on a stable, level and non-slip surface.
- Do not place the product close to heat sources, in direct sunlight or next to any house hold appliance with strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.
- Do not allow the product to come into contact with water, dust and chemicals.
- Protect the product from aggressive liquids and vapors.
- Do not place the product on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Do not install the product in rooms with high humidity, for example, in bathrooms, laundry rooms and wet basements.

Safety Notes During Operation

- Use only spare parts and accessories supplied or authorized by Yealink. The operation of non-authorized parts cannot be guaranteed.
- Do not place heavy objects on top of the handset or the base station in case of damage and deformation caused by the heavy load.
- Do not open the handset or the base station by yourself for repair purpose, which could expose you to high voltages. Have all repairs carried out by authorized service personnel.
- Do not let a child operate the product without guidance.
- Keep the small accessories contained in your product out of reach of small children in case of accidental swallowing.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not hold the handset up to your ear when speakerphone is on or when the ringer is ringing as the volume can be very loud, which may be harmful to your hearing.
- During a thunderstorm, stop using the product and disconnect it from the power supply to avoid lightning strike.
- If the product is left unused for a rather long time, disconnect the base station from the power supply and unplug the power adapter.
- When there is smoke emitted from the product, or some abnormal noise or smell, disconnect the product from the power supply, and unplug the power adapter immediately.
- Remove the electrical cord from an outlet by pulling gently on the power adapter, not by pulling the cord.

Products with Li-ion Battery or the Li-ion Battery

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Notices of Cleaning

- Before cleaning the base station, stop using it and disconnect it from the power supply.
- Remove the battery before cleaning the handset to reduce risk of electric shock.
- Only clean your product with a piece of slightly moist and anti-static cloth.
- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.

ENVIRONMENTAL RECYCLING



Never dispose of the device with domestic waste

Ask your Town Council about how to dispose of it in an environmentally friendly way. The cardboard box, plastic packaging and player components may be recycled in accordance with prevailing recycling regulations in your country.

Always adhere to prevailing regulations

Those who fail to do so may be fined or prosecuted in accordance with the law. The crossed out garbage can that appears on the device means that when it has reached the end of its useful life, it should be taken to a special waste disposal center and treated separately to general urban waste.

Li-ion Battery: Be sure that the batteries have been placed in the right position. This phone uses rechargeable batteries only.

Compulsory information according to regulations for battery-operated devices.

Caution: Risk of explosion if battery is replaced with a battery of a wrong kind.

Dispose of batteries in accordance with the instructions.

Troubleshooting

The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.

2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.

2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement

1. This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference; and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. NMB-3(B)

2. This device meets CS03 Part V. (only for the products with handset.)

"This device meets the applicable Innovation, Science and Economic Development Canada technical specifications. / Ce produit répond à la innovation, des sciences et de Développement économique Canada spécifications techniques applicables."

Radiation Exposure Statement (only for the products with wireless function, such as Wi-Fi/Bluetooth /DECT etc.)

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R.C

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Strawinskylaan 3127, Atium Building, 8th floor, 10772X Amsterdam, The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

About Yealink

Yealink (Stock Code: 300628) is a global brand that specializes in video conferencing, voice communications and collaboration solutions with best-in-class quality, innovative technology and user-friendly experience. As one of the best providers in more than 140 countries and regions, Yealink ranks No.1 in the global market share of SIP phone shipments (Global IP Desktop Phone Growth Excellence Leadership Award Report, Frost & Sullivan, 2019).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



430104002891

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Copyright©2024 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO.,LTD.All rights reserved.