



1 Minimum Requirements

- A display connected to MCore 4 (not included).
- A Zoom Rooms account (not included).
- Wired network environment (not included).


2 Package Contents

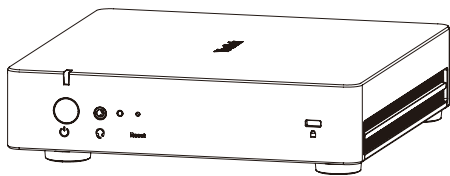

MCore 4 Package

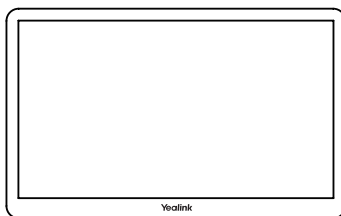

MTouch Plus Package

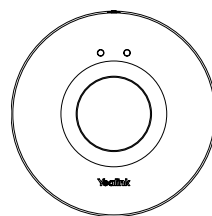


RoomSensor Package

3 Installation

- MCore 4 supports mounting on the wall, mounting on the TV, or putting on a table.
- MTouch Plus supports putting on a table, pasting on a table, fixing on a table, or mounting on the wall.
- RoomSensor supports mounting on the ceiling or mounting on the wall.

4 Connection

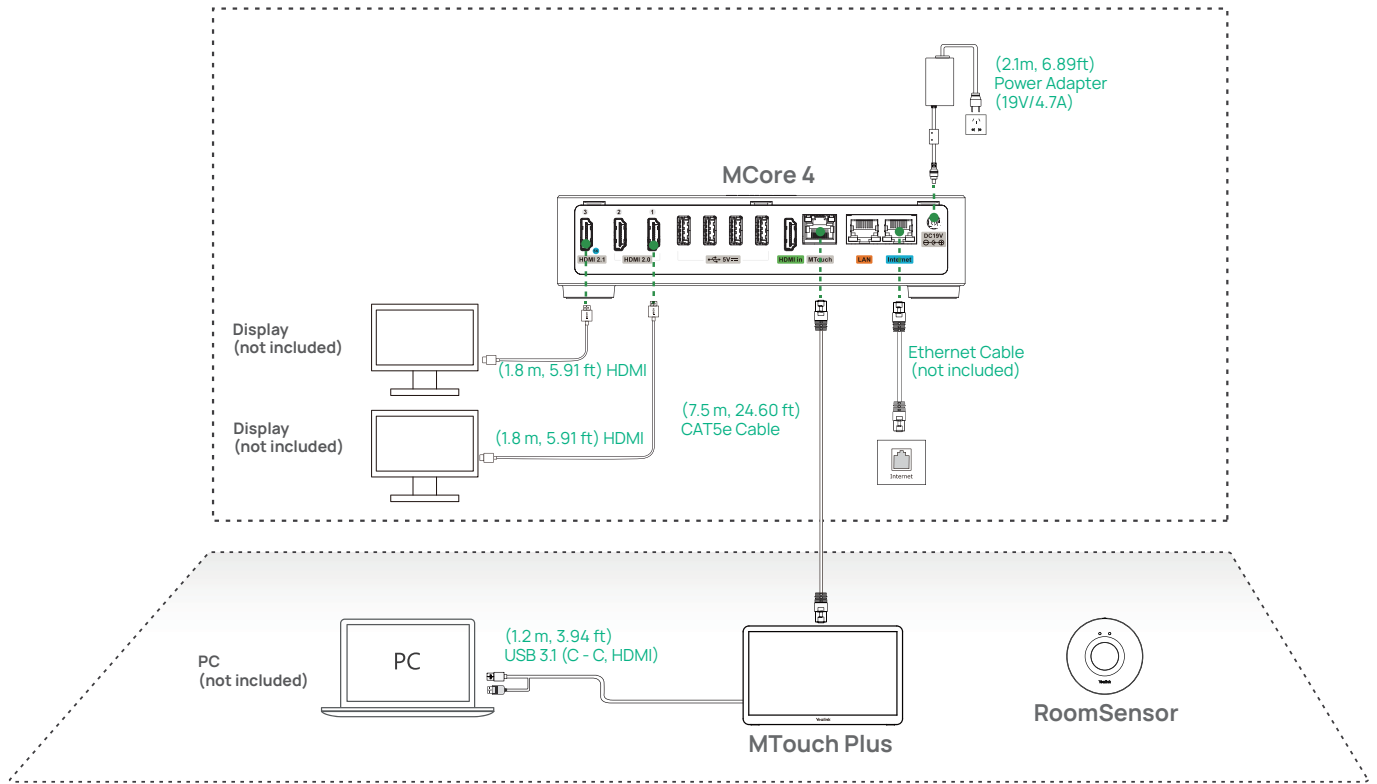

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - » Display: Resolution of 1080p or higher and with an HDMI port.
 - » PC: Equipped with HDMI or USB-C (support DP protocol) port.
 - » Ethernet cable: CAT5e or higher ethernet cable.
 - » HDMI: Standard HDMI cable.
 - » PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.


5 Initial Setup

1. Press the power button on the left of MCore 4, and the Microsoft Windows IoT Enterprise Edition operating system will be automatically loaded after starting MCore 4.
After the system is initialized, you can use MTouch Plus to complete the system login and settings, and the device will automatically start the Zoom conference system application and enter the setting page.
2. Log in to your Zoom Rooms account.
 - Tap **Sign In** on the start meeting screen.
 - Enter your email address and password.
 - Tap **Sign In**

6 Features

Wireless Sharing

1. Connect the WPP30 to the USB port of the MTouch Plus. When pairing, the LED indicator of WPP30 is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired WPP30 to the USB-A/USB-C port on your PC.
3. On the WPP30, press the presentation button to share the full screen.

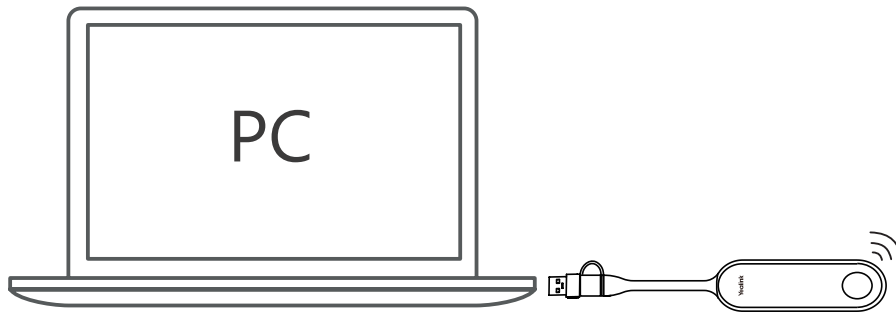

Pair with a RoomSensor

1. Switch the account to Admin.
2. Open Yealink RoomConnect.
3. Tap **MTouch Plus** > **Sensor**.
4. Select **Add device** and follow the on-screen instructions to pair.

- An MTouch Plus can be paired with only one RoomSensor.
- The distance between the MTouch Plus and RoomSensor must be within 20m.