

Quick User Guide for General Mode (BYOM)

Yealink MeetingBar Home Interface



No.	Description
1	Device name and status.
2	Time and date.
3	Casting code. Enter this code in the YeaCast app to start casting.
4	Share your screen via the hardware endpoint.
5	Use the MeetingBoard Pro's display as a peripheral for third-party UC meetings through the BYOD feature.
6	Select to view other apps.
7, 8	Select More to enter the following options: Enter the following options: • Shortcut Tools ◦ : View device IP, change device settings, and configure other basic device settings. ◦ Help Center: Select to enter Help Center. It provides guides and FAQs to help you get started quickly and master using the Yealink device.

	◦ Home: Return to the home screen. ◦ Camera Control: Adjust the camera manually, or use camera AI features such as auto framing. ◦ Issue feedback: Select to submit QR code feedback or device feedback. • Application ◦ Cast Screen: Share your screen via the endpoint. ◦ BYOD: Use Yealink MeetingEye as a peripheral for third-party meetings through the BYOD feature. ◦ Digital Signage: Enter the digital signage interface.
--	---

CTP Home Interface



No.	Description
1	Select  to enter the following options: • Shortcut Tools ◦ : View device IP, change device settings, and configure other basic device settings.

- Help Center: Select to enter Help Center. It provides guides and FAQs to help you get started quickly and master using the Yealink device.
- Home: Return to the home screen.
- Power: Select to make Yealink MeetingEye enter the sleep state or reboot Yealink MeetingEye.
- Camera Control: Adjust the camera manually, or use camera AI features such as auto framing.
- Issue feedback: Select to submit QR code feedback or device feedback.

- **Application**

- Cast Screen: Share your screen via the endpoint.
- BYOD: Use Yealink MeetingEye as a peripheral for third-party meetings through the BYOD feature.
- Digital Signage: Enter the digital signage interface.