 




MeetingBar A25

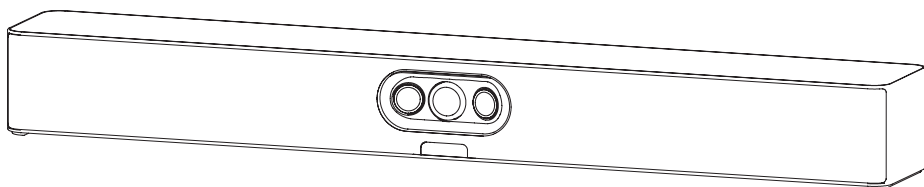


Quick Start Guide V1.1

English | Deutsch | Français | Español


CONTENT

English.....	1
Deutsch.....	11
Français.....	21
Español.....	31

 
1 Package Contents




MeetingBar A25

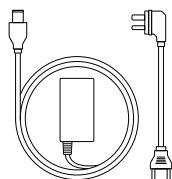 

 
Power Adapter
(48 V/0.7 A)
(3.5 m, 11.48 ft)



 
CAT5e UTP
(RJ45 - RJ45) Cable
(3 m, 9.84 ft)




HDMI 2.0 Cable
(1.8 m, 5.91 ft)

 

USB 3.1(C-C)
Cable
(1.8 m, 5.91 ft)

 


USB 3.1(A-C)
Cable
(3 m, 9.84 ft)

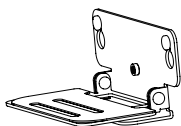 

Mounting Bracket



 
Cable Cover



Screw x 2
φ 6*30 mm
Polyamide



 Screw x 2
T4 × 30 mm,
FAHOZN3+



Screw x 2
1/4 inch × 12 mm



 
Screw
1/4 inch × 13 mm



Screw x 2
M2 × 4 mm,
CMH0ZN3+



Cable Tie x 5
(20 × 200 mm)



Quick Start Guide

Optional Packages

A

VCR11 and
AAA Battery x 2

B

CTP25 Package

C

TV-Clip Mount

D

Table-top Stand

E

i

We recommend that you use these three accessories together.

MeetingDisplay

MD-WallMount


MD-AVBracket-S

NOTE

- We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.
- Put the magnetic ring on the HDMI cable to prevent electromagnetic interference.

WARNING: Operation of this equipment in a domestic environment may cause radio interference.

2 Hardware Interface Instructions

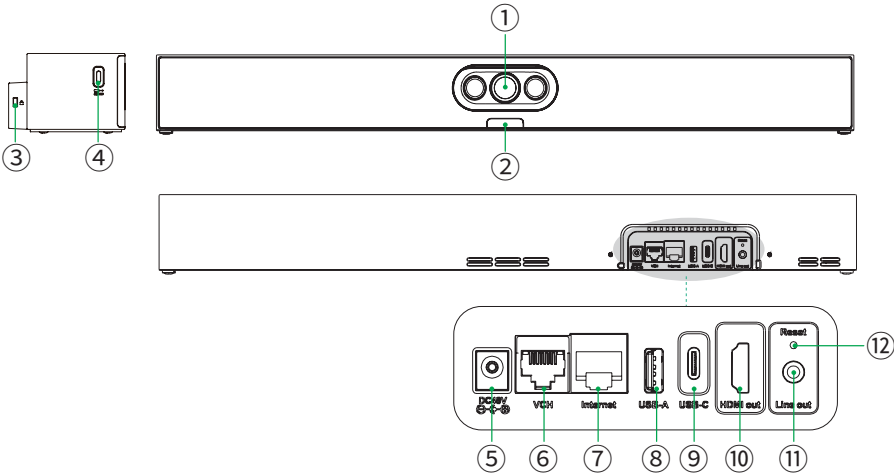


No.	Item	Description
1	Camera	• Camera with an electric privacy shutter.
2	LED Indicator	• Indicate the device status.
3	Security Slot	• Connect a universal security cable to the device so that you can lock it down.
4	USB-C 2.0 (side)	• Connect to a Yealink Wireless Presentation Pod for pairing.
5	DC48V	• Connect to a power adapter.
6	VCH	• Connect to a Yealink CTP Touch Panel. • Connect to a PoE switch.
7	Internet	• Connect directly to the network for internet access. • Connect to a Yealink MeetingDisplay's LAN port to access the network, provided that the MeetingDisplay is connected to the Internet.
8	USB-A 2.0	• Connect to a Yealink MeetingDisplay to synchronize configurations and integrate features. • Connect a USB accessory, such as a mouse.
9	USB-C 3.0 (back)	• Connect to PC for content sharing.
10	HDMI-out port	• Connect to a display for video image output.
11	Line out	• Connect to an hearing aid device via a 3.5mm audio cable.
12	Reset	• Reset to factory defaults.

3 Connection


MTRoA connection

MeetingBar A25

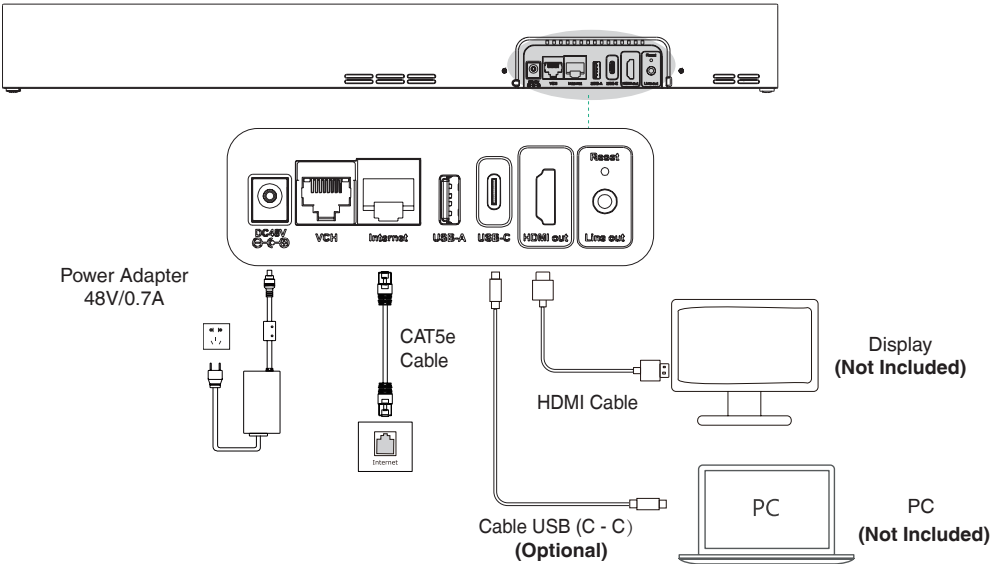


MTRoW connection

- Yealink MCore4 and Mtouch Plus must be purchased additionally.
- To switch back from MTRoW to MTRoA (Android) mode, disable the **USB Mode** configuration in the Yealink RoomConnect software.

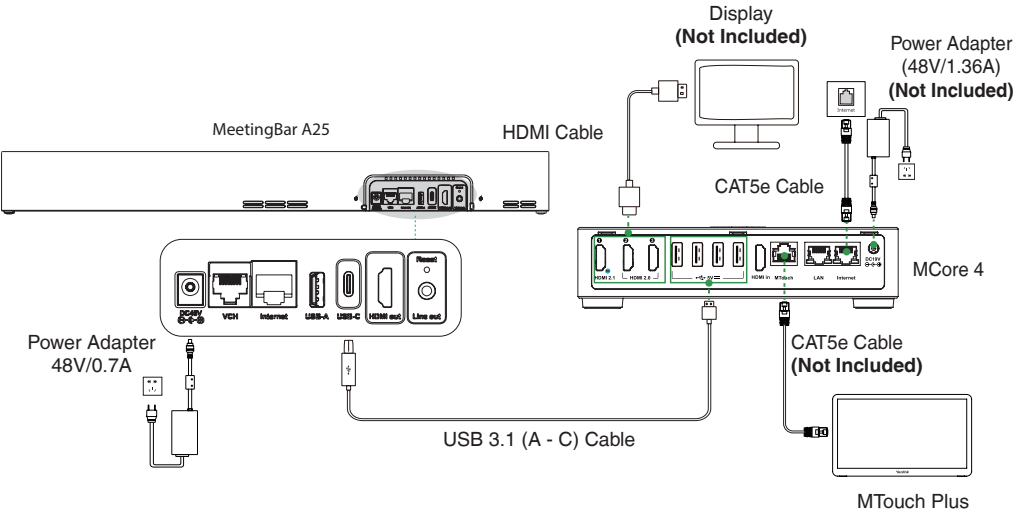


4 Connect MeetingDisplay with MeetingBar A25 (Optional)



- USB 2.0 (A-B) cable is included in MD-AVBracket-S's package.
- If the CAT5e cable from MeetingBar A25 is not connected to the LAN port of MeetingDisplay, then it should be connected to an external network port.

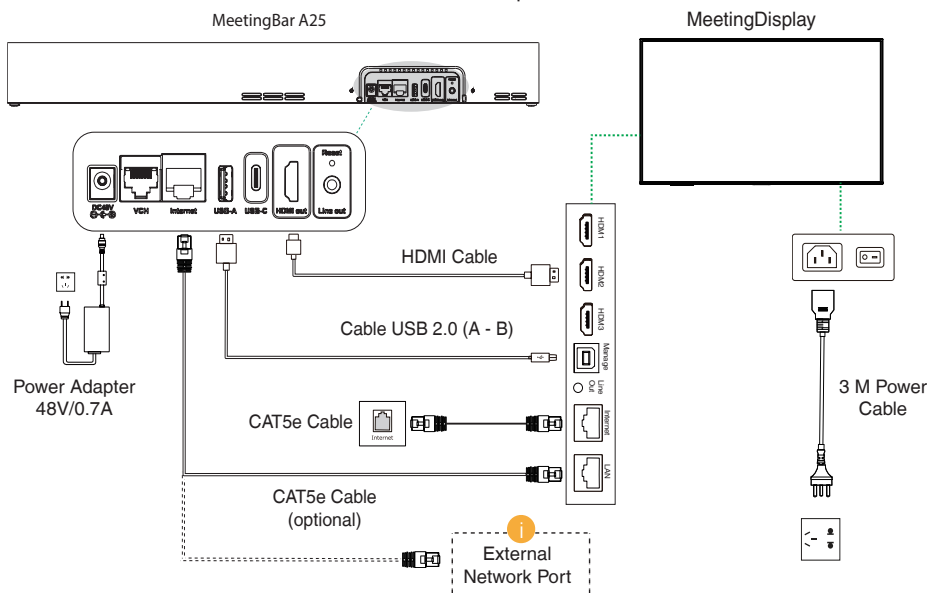


5 Assemble Cable Cover

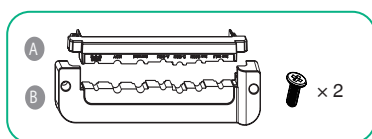


- 1 Find the two slots on the back of A25.

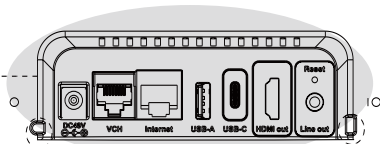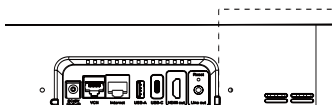

- 2 Fit part A of the cable cover into the slots.

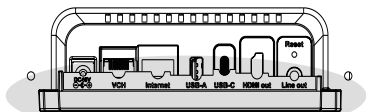

- 3 Assemble part B and fix the screws.

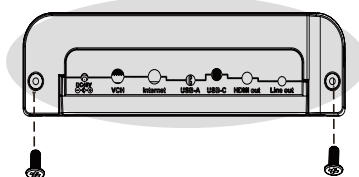


6 Installation

Option 1: Mount on a wall

- i** Before placing the A25, please ensure that the wiring is completed (it is recommended to pass through the Mounting Bracket).

Step 1: Determine MeetingBar A25 position

The mounting height affects your camera view. The recommended installation height is 100 cm above the ground, and the reserved distance between A25 and TV should be greater than 1 cm.


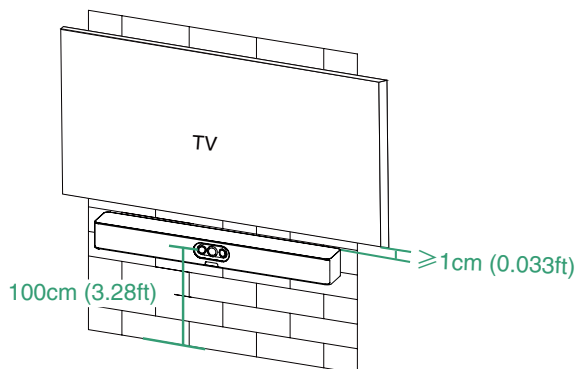


- i** It is recommended to maintain the A25 camera at 10-20 cm above desk height.

Step 2: Mount the A25 to the wall.


Hole depth: 30 mm (0.098ft)

Hole diameter: 6 mm (0.02ft)

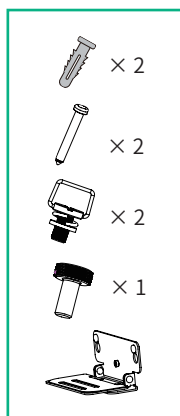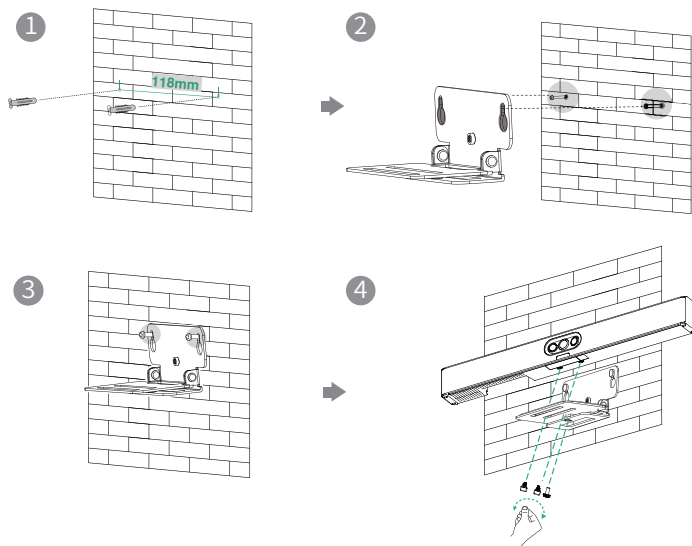


Option 2: Mount on Yealink MeetingDisplay

- You need to purchase MeetingDisplay and MD-AVBracket-S separately. For installation, please refer to the **MD-AVBracket-S Quick Start Guide** included in the corresponding package.
- Another 6 screws (1/4 inch × 12 mm) are included in the MD-AVBracket-S's package.

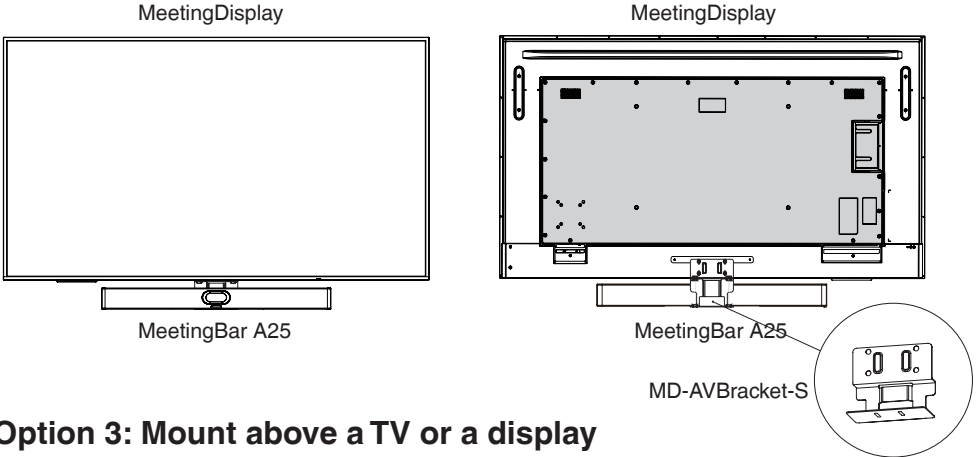


Option 3: Mount above a TV or a display

- The M-2 bracket can be inserted into the M-1 in two directions. Here, we will focus on one direction for illustration.
- Due to device weight, it is advisable to avoid mounting the device on slim TVs to prevent potential falls or damage to the screen.

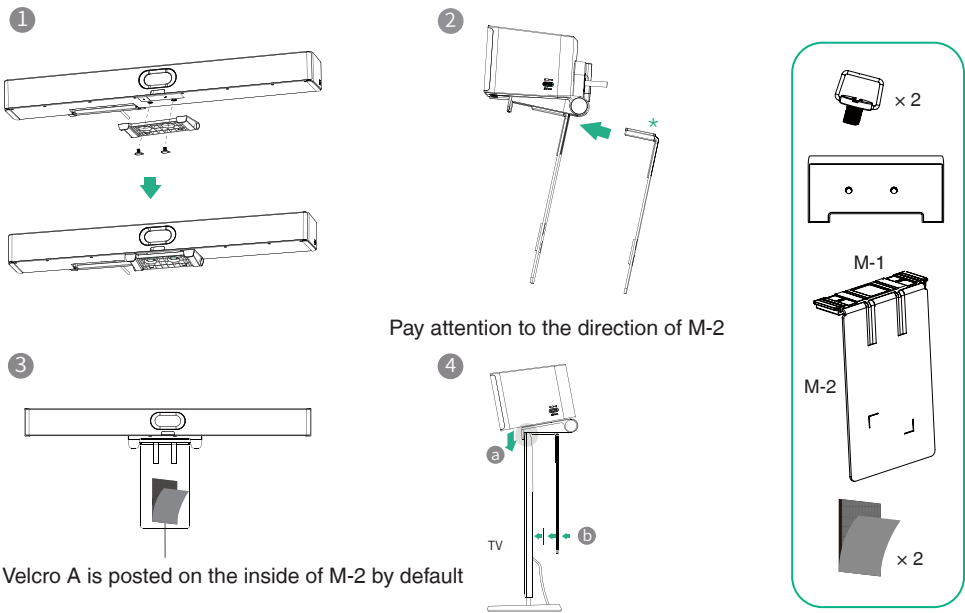


Option 4: Mount on the table-top stand

i Refer to the **7 Adjust the Camera Tilt** section for bracket adjustment.

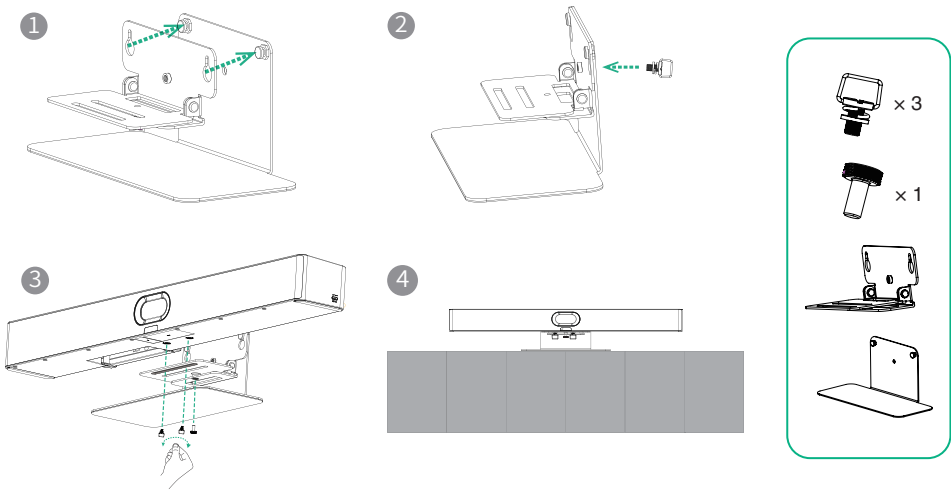


7 Adjust the Camera Tilt

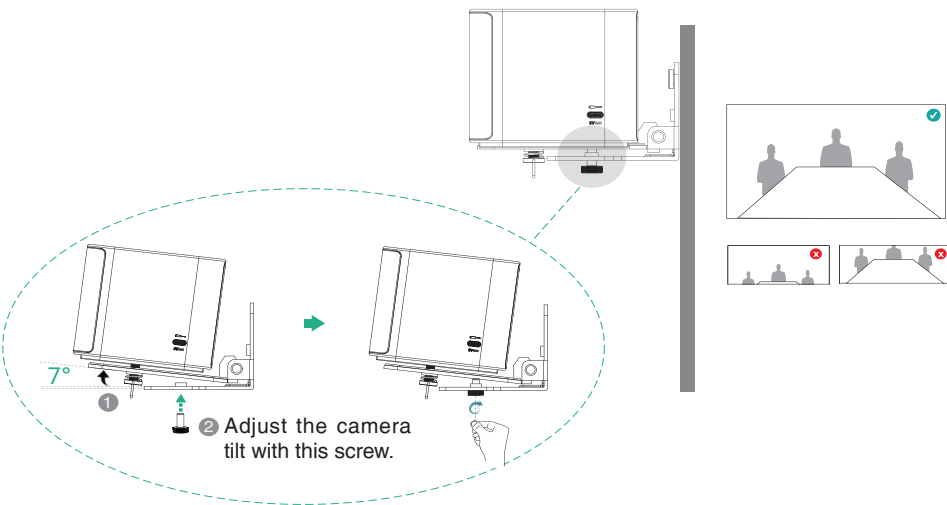

8 VCR11 (Optional)

i You can use the remote control or CTP25 to operate the A25. If a touch display device is connected, you can also operate the A25 directly on the touch screen .

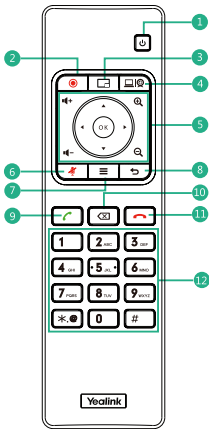

- 1 Power Key*
- 2 Record Video Key*
- 3 Layout Key: Adjust the layout during the meeting*
- 4 Custom Key*: Can be customized as camera control or screen projection (must be supported by the conference platform).
- 5 Volume Key: Zoom In/Out: OK Key: Navigation Key:
- 6 Mute Key
- 7 Home Key: Return to the home screen when not on a call. Open the menu bar during the call.*
- 8 Return Key
- 9 Dial Key
- 10 Delete Key
- 11 Hang up Key
- 12 Character Keys

*** Coming Soon**
The supported keys in different modes may be various.


9 Pair with the CTP25 (Optional)

i For a better pairing experience, we recommend starting the A25 first and then the CTP25.


Pair manually

i If you purchased a bundle kit or connected CTP25 to A25 via a network cable, A25 and CTP25 would be paired automatically. You can go to **Initialization** directly.

On the CTP25, enter the IP address and paring code of the A25 on display.

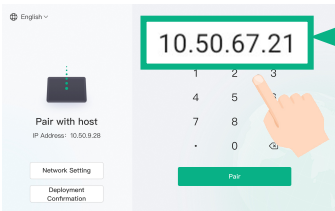

CTP25

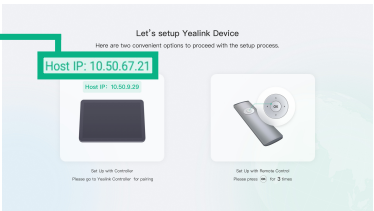

MeetingBar A25

Initialization

1. If the CTP25 is restored to factory settings, you need to change the default password (0000) of the CTP25.
2. Initialize **Language**, **Network**, **Date&Time** and **Device Mangement**, and select the desired platform. If you select **General Mode (BYOM)**, refer to the **10 General Mode (BYOM)** section.
3. Change the default password (0000) of the A25.

Account login

-  Contact the corresponding service provider to obtain an account.


Follow the prompts on A25 and CTP25 to sign in to the same account.

10 General Mode (BYOM)

1. Do one of the following to select **General Mode (BYOM)**:
 - When selecting a platform during power-on initialization, select **General Mode (BYOM)**.
 - After logging in, reset to factory to switch platforms.
2. Refer to the **11 Content Sharing and BYOD** section to share content or use the BYOD function.

11 Content Sharing and BYOD (Optional)

Content Sharing

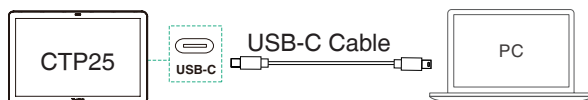

BYOD

-  Go to the web interface, and enter **System > UC Provider** to enable **BYOD Enable**.

Use the USB-C cable to connect the CTP25 to the PC, and follow the prompts to enter BYOD mode.

12 Update the Firmware

Auto Update

Do one of the following:

- During power-on initialization, turn on **Yealink Cloud Service** > turn on **Auto Update**.
- In settings, turn on **Auto Update**.

Manual Update

 Update the firmware of MeetingBar A25 and CTP25 separately.

1. Obtain the IP address.
2. Open a web browser and enter the device's IP address in the address bar. For example, <https://10.82.24.11/>, and press **Enter**.
3. Enter the administrator username and the password, and click **Login**. (The default user name is "admin", the password is "0000").
4. Go to **System** > **Update**.
5. On the right side of **Device Firmware**, click **Select File** to upload the desired firmware.
6. Click **Update**.

Please get the latest firmware at <https://support.yealink.com/>.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



430104003469

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R.
China

Copyright©2025 Yealink Inc. All right reserved.