 


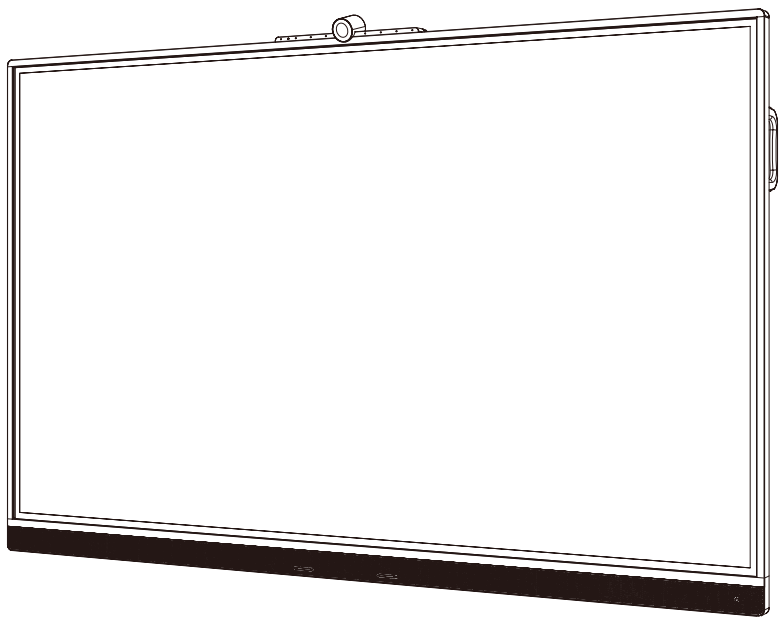

MeetingBoard C (65/75-inch)

Quick Start Guide V 1.0



PRECAUTIONS

EN

- Please read this guide before installation to avoid unnecessary personal injury and damage to the endpoint.
- The pictures of the endpoint and accessories in this guide are for reference only.
- Please use the accessories in the package, and follow the guide for installation. Yealink assumes no responsibility for any damage caused by improper installation.
- Take and place all components gently to avoid damage.
- At least 2 people are required to transport and install the 65/75-inch host.

DE

- Lesen Sie diesen Installationsleitfaden vor der Installation, um unnötige persönliche Verletzungen und Schäden am Endgerät zu vermeiden.
- Die Bilder des Endgeräts und der Zubehörteile in diesem Installationsleitfaden dienen nur der Orientierung.
- Verwenden Sie bitte die Zubehörteile in der Verpackung und installieren Sie das Gerät gemäß dem Installationsleitfaden. Yealink übernimmt keine Verantwortung für Schäden, die durch unsachgemäße Installation verursacht werden.
- Nehmen und legen Sie alle Komponenten vorsichtig auf, um Schäden zu vermeiden.
- Zum Transport und zur Installation des 65/75-Zoll-Hosts sind mindestens zwei Personen erforderlich.

FR


- Veuillez lire ce guide avant l'installation pour éviter les blessures personnelles inutiles et les dommages à l'équipement final.
- Les images de l'équipement final et des accessoires dans ce guide sont données à titre indicatif seulement.
- Veuillez utiliser les accessoires fournis dans l'emballage et suivre le guide pour l'installation. Yealink ne prend pas en charge les dommages causés par une installation incorrecte.
- Manipulez avec soin tous les composants pour éviter tout dommage.
- Au moins deux personnes sont requises pour transporter et installer le poste principal de 65/75 pouces.

CONTENTS


English	1
Deutsch	9
Français	17
Español	25
Nederlands	33



 For more function documents, please tap the left or right sidebar on the MeetingBoard homepage, and tap **Help Center**.

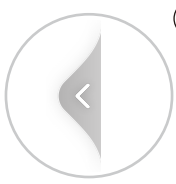



①

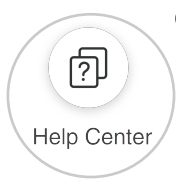 

②

Help Center

  
1 PACKAGE

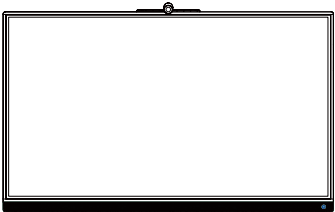


MeetingBoard



 
Pen × 2

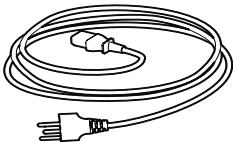

3 m Power Cable
(220 V)

 

Cable Tie × 2
(20 * 200 mm)

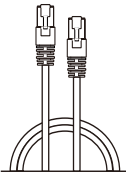 


3 m CAT5e UTP
(RJ45, RJ45)
Cable




Quick Start Guide

 
* Optional Accessories

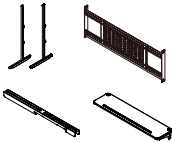


VESA Floor Stand Kit

 

Wall Mount Bracket Kit

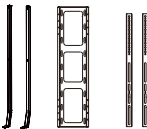 


Wall Stand Kit

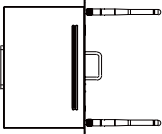 

Windows OPS

 2 HARDWARE & WIRING

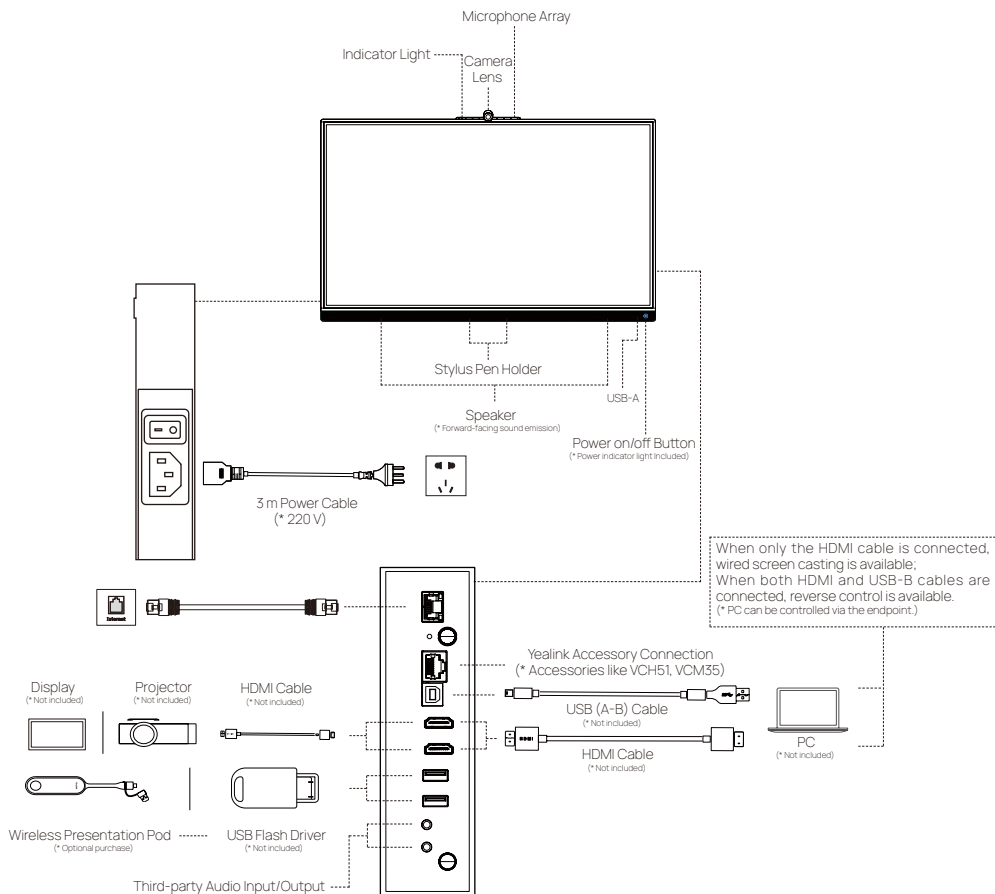


Requirements for the accessories (not included):


- Display: 1080p and above; HDMI interface included.
- PC: HDMI or USB-A interface included.
- USB Flash Driver: USB-A interface included.
- HDMI: Standard HDMI cable.
- USB-B Cable: USB 2.0 (A - B) cable.

3 *INSTALLATION*

 MeetingBoard 65C:

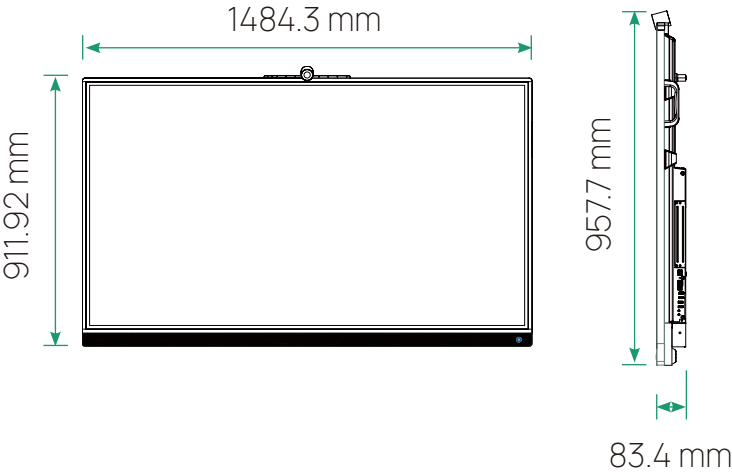

MeetingBoard 75C:

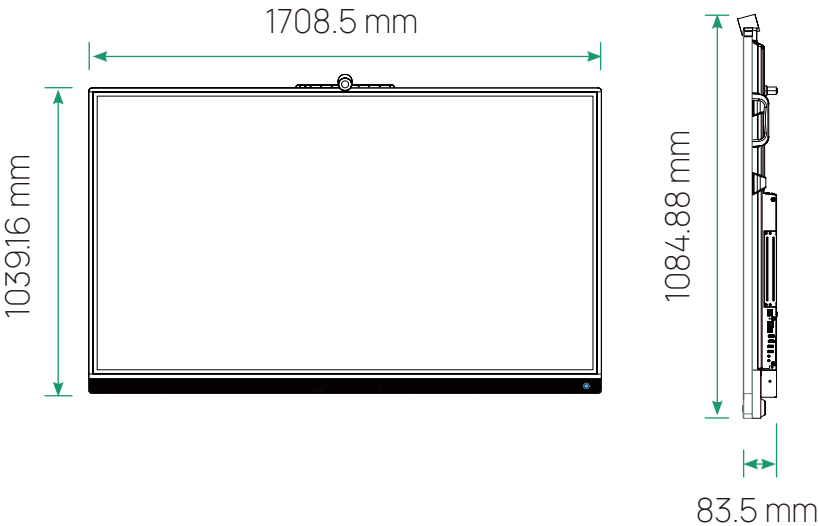 

Install Wall-Mounted Bracket (Optional)




- You need to purchase an additional bracket to install the equipment. You can choose either the Yealink standard wall mount bracket or a third-party bracket.
- If you use the Yealink standard wall mount bracket, please refer to the **Wall-Mounted Bracket Installation**.

Recommended Size of Yealink Wall-Mounted Bracket

Model	Wall-Mounted Bracket Model	Bracket Installation Height (from the ground)	Recommended Screw Hole Position for Vertical Rod
65C	MB-WallMount-650	1487 mm	It is recommended that the screw be locked to the 3th hole of the wall mount
75C	MB-WallMount-860	1475 mm	It is recommended that the screw be locked to the 5th hole of the wall mount




The following is the installation diagram of height and hole position. Users can install according to the recommended installation height and screw hole position.If the installation height is slightly inappropriate, it can also be adjusted according to actual needs.

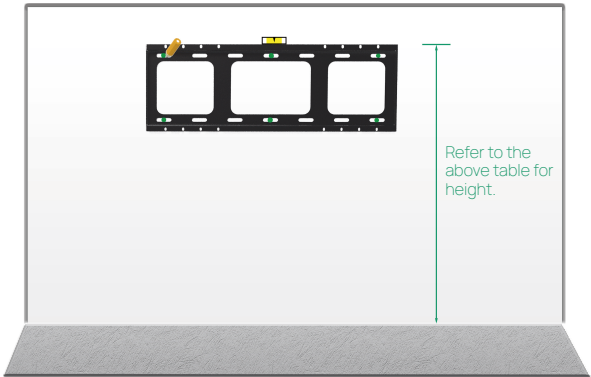 

Install VESA Floor Stand (Optional)



 
- You need to purchase an additional floor stand to install the equipment. You can choose either the Yealink VESA floor stand or a third-party stand.
- If you use the Yealink VESA floor stand, please refer to the **VESA Floor Stand Installation**.

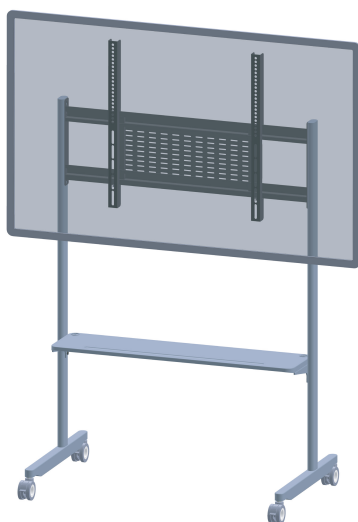

Install Wall Stand (Optional)



 
- You need to purchase an additional wall stand to install the equipment. You can choose either the Yealink standard wall stand or a third-party stand.
- If you use the Yealink standard wall stand, please refer to the **Wall Stand Installation**.

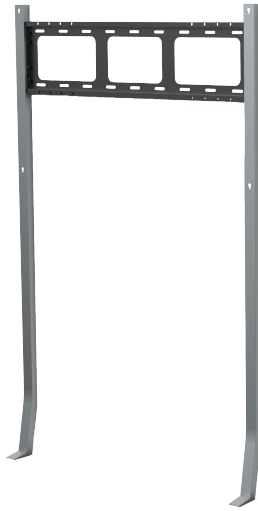

Install Windows OPS (Optional)



 - You need to purchase Windows OPS separately. For installation, please refer to the **MCore-OPS Quick Start Guide** included in the corresponding package.
- It is recommended that the OPS antenna be placed as follows, with the highest signal strength.

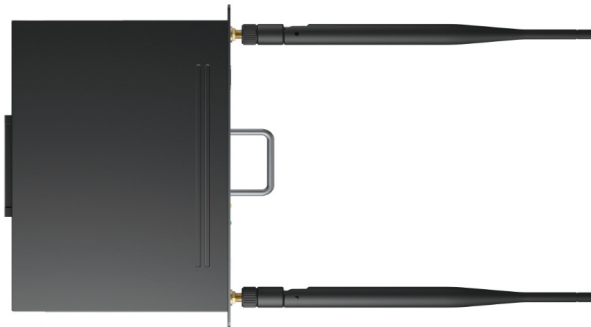

Precautions for Purchase and Installation of Third-Party Bracket



If a third-party wall bracket is used, the following items should be paid attention to when purchasing and installing:

- VESA hole size of **MeetingBoard 65C** is **600 mm** (horizontal) × **400 mm** (Vertical).

 
VESA hole size of **MeetingBoard 75C** is **800 mm** (horizontal) × **600 mm** (Vertical).

- The load of the wall bracket of MeetingBoard series equipment shall be more than three times of its own weight, that is, the load capacity of the wall bracket for **MeetBoard 65C** shall be greater than **120 KG**.

The load of the wall bracket of MeetingBoard series equipment shall be more than three times of its own weight, that is, the load capacity of the wall bracket for **MeetBoard 75C** shall be greater than **156 KG**.

- During installation, the recommended distance from the bottom of **MeetingBoard 65C** equipment to the ground is **940 mm**.
During installation, the recommended distance from the bottom of **MeetingBoard 75C** equipment to the ground is **880 mm**.

4 POWER ON

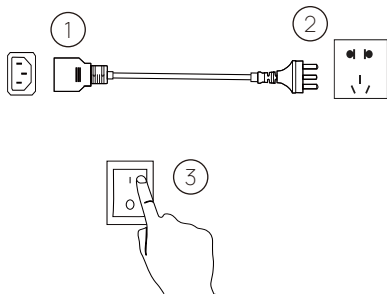

1. Insert the end of the power cable into the power port of the endpoint.

2. Insert the power cable plug into the outlet.

3. Turn the rocker switch button on the left rear of the endpoint to "I" to turn on the endpoint.




- Upon first power-on of the endpoint, follow the on-screen setup wizard to initialize configuration like language, time, and network. The initialization operations vary with software versions.
- After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password.

LED Indicator Status



Status	Description
Power indicator light	• Quick flashing red: Powering on. • Slow flashing red: Sleeping. • Solid red: UI off, muted during a call.
Indicator light	• Solid red: Muted during a call. • Off: Powered off, not in a call.

 5 POWER OFF

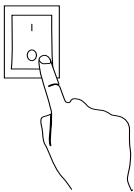

Turn the rocker switch button on the left rear of the endpoint to "O" to turn off the endpoint.

  
1 PAKETINHALT

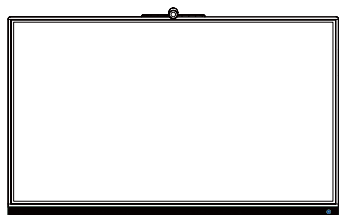


MeetingBoard



 
Stift × 2

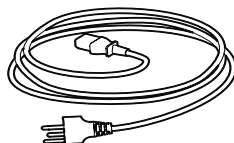


3 m Stromkabel
(220 V)

 

Kabelbinder × 2
(20 × 200 mm)

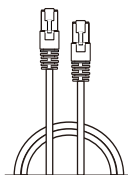 


3 m CAT5e UTP
(RJ45, RJ45)
Kabel

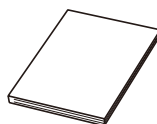 


Kurzanleitung

 
* Optional Zubehör

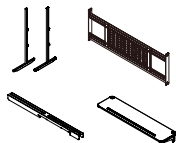


VESA Bodensockelkit

 


Wandhalterungsset

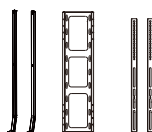 

Wandhalterungskit

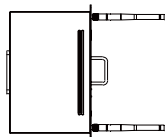 


Windows OPS

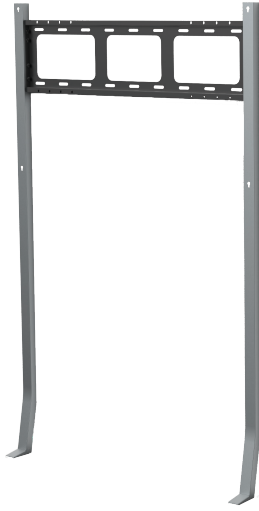 

Installez l'OPS Windows (Facultatif)



 - Vous devez acheter séparément l'OPS Windows. Pour l'installation, veuillez vous référer au **Guide de Démarrage Rapide MCore-OPS** inclus dans le paquet correspondant.
- It is recommended that the OPS antenna be placed as follows, with the highest signal strength.

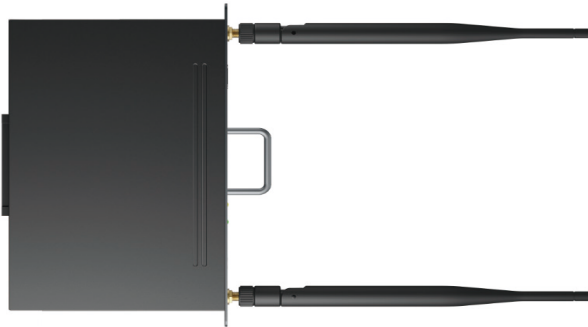

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +14 to 113°F (-10 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

— is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.

General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- The main plug is used as disconnect device, the socket-outlet should be near the Switching Adapter and it should be easily accessible.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.



Cleaning Requirements

- Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

EU Regulatory Information

Support Frequency Bands and Power:

Bluetooth 2.4GHz < 20 dBm

WLAN 2.4 GHz < 20 dBm;

WLAN 5150-5250 MHz < 23 dBm;

WLAN 5250-5350 MHz < 20 dBm;

WLAN 5470-5725 MHz < 27 dBm;

WLAN 5745-5825 MHz < 14 dBm;



AT	BE	CY	CZ	DK	EE	FI
FR	DE	EL	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR

In all EU member states, operation of 5150 -5250 MHz is restricted to indoor use only.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.



Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

No.666 Hu'an Rd, Huli District Xiamen City, Fujian, P.R. China

support@yealink.com

Made in China

Yealink (Europe) Network Technology B.V.

Keizersgracht 62, 1015CS Amsterdam

EUROPE@yealink.com

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

Suite 160, 5445 legacy drive, Plano, Texas, 75024, United States

Made in China



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

 
About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.

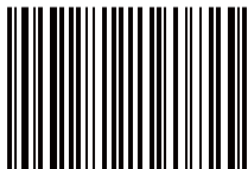

430104003238



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink.com.cn
Addr: No.666 Hu'an Rd, Huli District Xiamen City, Fujian, P.R.
China
Copyright©2022 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO.,LTD.All rights reserved.