



Hardware Introduction

Front View

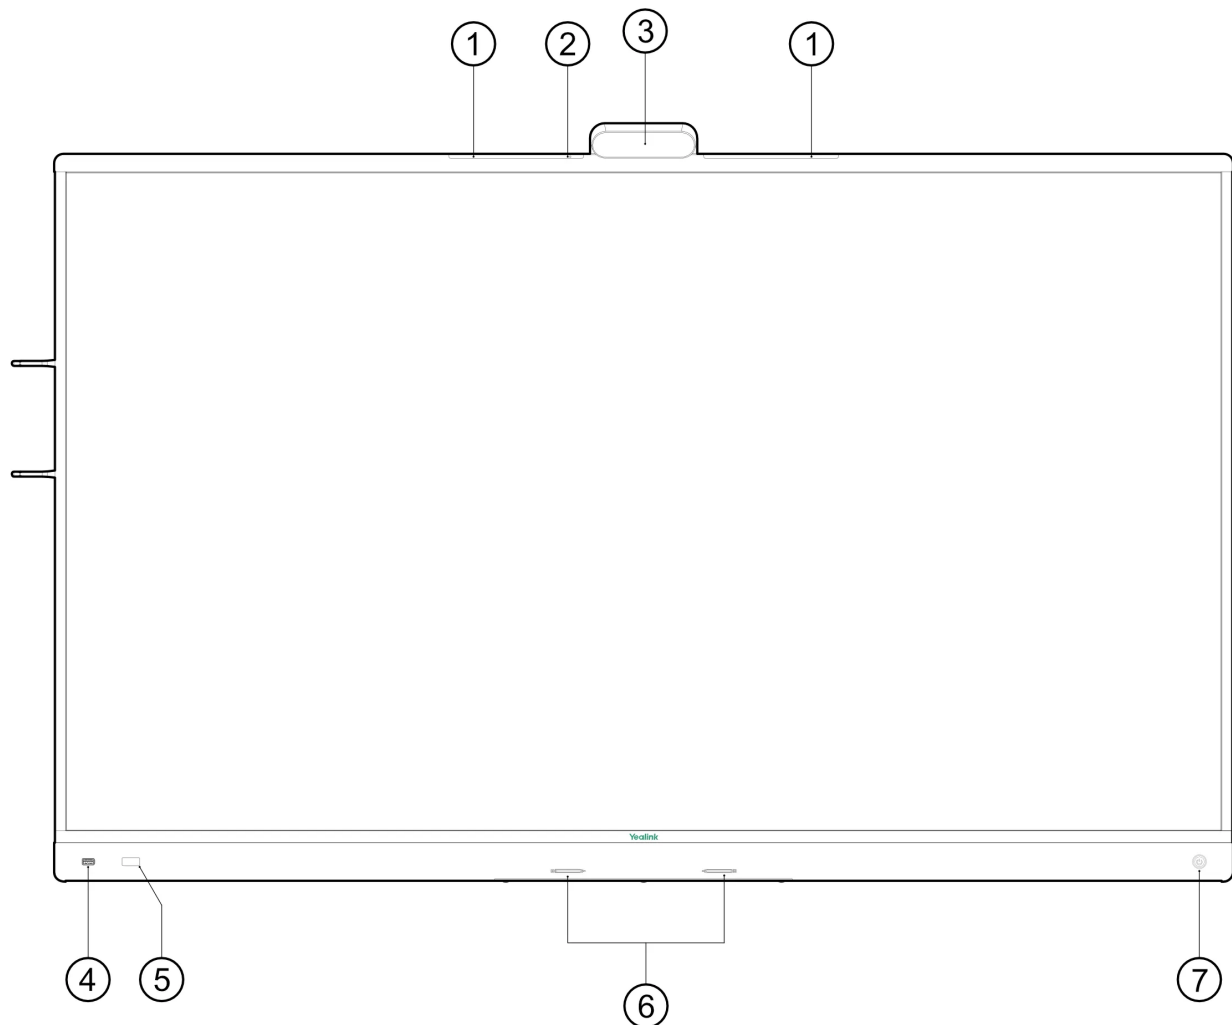

Side View

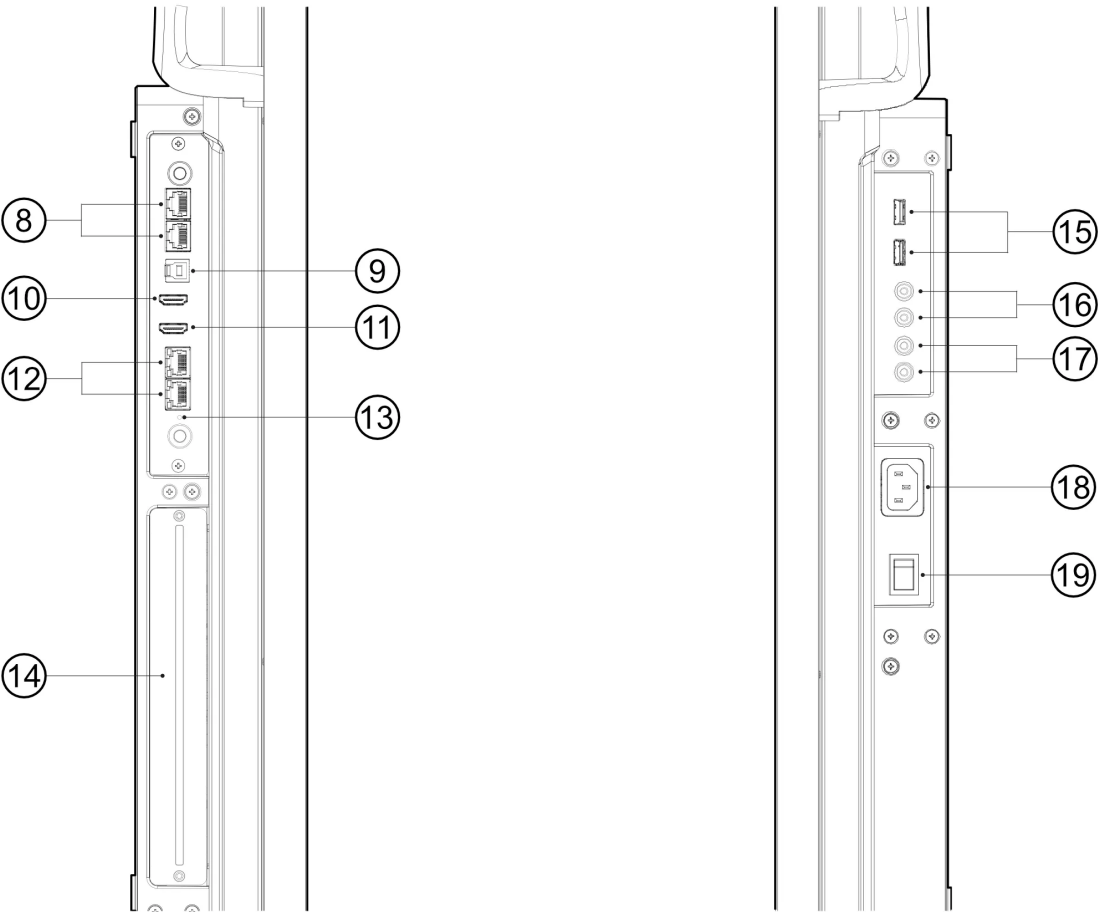

序号	名称	描述
1	Microphone	Built-in 16-microphone MEMS array.
2	Microphone Mute Status Light	Indicates the microphone mute status. • Solid red: Microphone muted during a call. • Off: All other states.
3	Built-in Camera	50 MP triple-camera system.
4	USB-A 2.0 Port	• Connect a Yealink WPP wireless presentation pod for wireless content sharing. • Connect a USB flash drive.
5	Sensor	Automatically wakes the screen when a person is detected nearby.
6	Stylus Holder	Magnetically attaches the stylus.
7	Power Button	Press once to open the power menu or wake the device. Includes a power status indicator. • Solid red: Powered on but shut down.

		• Off: Powered on and operating normally.
8	VCH Port	To connect Yealink accessories, such as CTP25 and VCH51, etc.
9	USB-B 触控输出接口	Enables reverse control when both the USB-B cable and HDMI cable are connected between the Yealink MeetingBoard and a computer.
10	HDMI In	• Connect an HDMI cable for wired content sharing. • Reverse control is supported when both the USB-B cable and HDMI cable are connected between the Yealink MeetingBoard and a computer.
11	HDMI Out	Connect a projector or external display.
12	LAN 1/LAN 2	• Connect to the network. • LAN 1 provides network access for both Android and Windows OPS. • LAN 2 provides network access for Android only.
13	Reset Key	Press and hold for 5 seconds to restore factory settings.
14	Windows OPS Slot	For details, refer to MCore-OPS/MCore-OPS (Gen 2) .
15	USB-A 2.0 Port	• Connect a Yealink WPP wireless presentation pod for wireless content sharing. • Connect a USB flash drive.
16/17	RCA In/RCA Out	Third-party audio input/output port.
18	Power Port	To connect to the power supply.
19	Power Switch	• “I” : Power on. • “O” : Power off.