


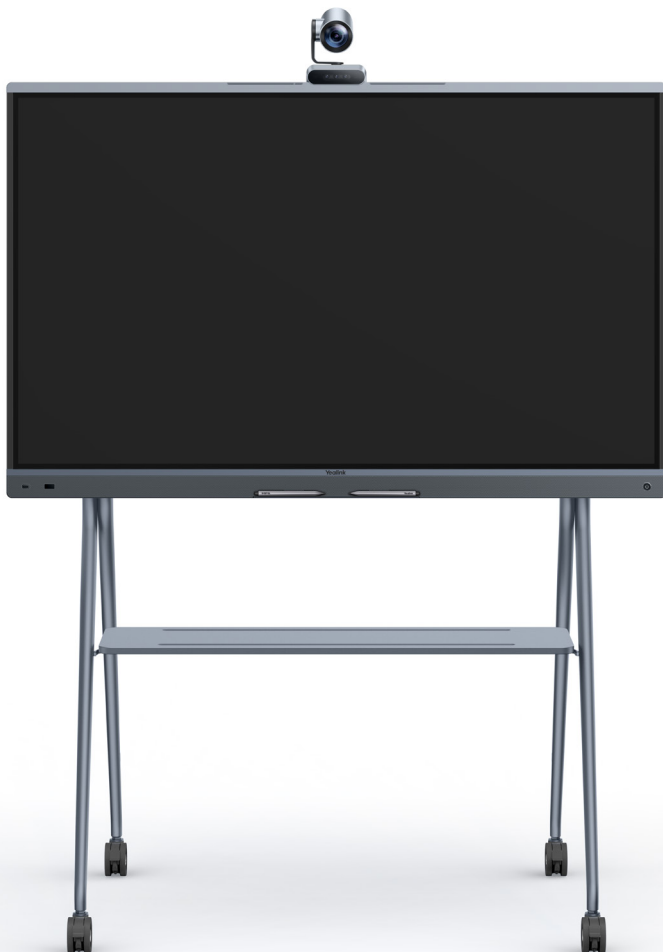

MeetingBoard 65 Pro/MeetingBoard 75 Pro/ MeetingBoard 86 Pro

Quick Start Guide V1.0




Please read this guide before installation to avoid unnecessary personal injury and damage to the endpoint.

Table of Contents

English.....	1
Deutsch.....	8
Français.....	15
Español.....	22
Nederlands.....	29

On the MeetingBoard homepage, tap **Sidebar > Help Center** to view more function documents.

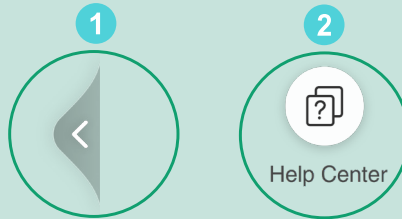

1 Package Contents

The pictures of the endpoint and accessories in this guide are for reference only. Please use the accessories in the package, and follow the guide for installation. Yealink assumes no responsibility for any damage caused by improper installation methods.


Standard Accessories




MeetingBoard Pro




Pen x 4

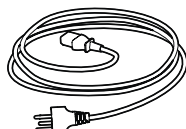

3M Power Cable
(220V)

 

Cable Tie x 3
(20*200mm)

 


3M CAT5e UTP
(RJ45, RJ45)
Cable




Quick Start Guide


Optional Accessories

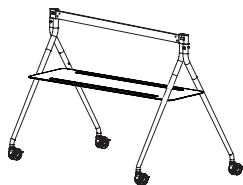

Floor Stand Kit

 


Wall Mount Bracket Kit

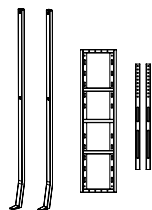

Wall Stand Kit



PTZ Camera
MB-6X Pro/MB-12X Pro

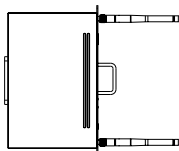

Windows OPS

2 Endpoint Installation



Take and place all components gently to avoid damage.



MeetingBoard 65&75&86 Pro

At least 2 people are required to transport and install
65-inch and 75-inch hosts.

At least 4 people are required to transport and install
86-inch hosts.




Install Wall-Mounted Bracket (Optional)


Recommended Size of Yealink Wall-Mounted Bracket

Model	Suitable for wall rack models	Installation height of wall rack (from the ground)	Recommended screw hole position for Vesa vertical rod
65 Pro	MB-WallMount-650	1487mm	It is recommended that the screw be locked to the 3rd hole of the wall mount
75 Pro	MB-WallMount-860	1475mm	It is recommended that the screw be locked to the 5th hole of the wall mount
86 Pro	MB-WallMount-860	1528mm	It is recommended that the screw be locked to the 2nd hole of the wall mount

 The following is the installation diagram of height and hole position. Users can install according to the recommended installation height and screw hole position. If the installation height is slightly inappropriate, it can also be adjusted according to actual needs.

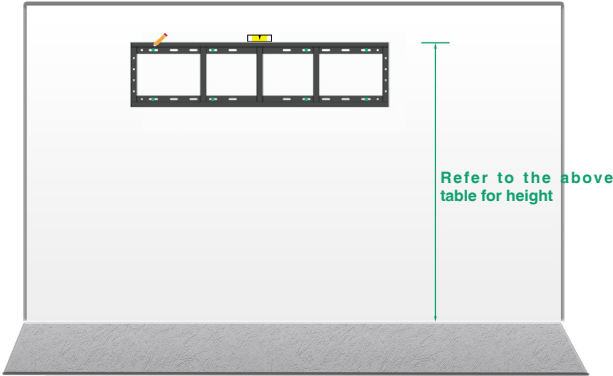

Installation Video

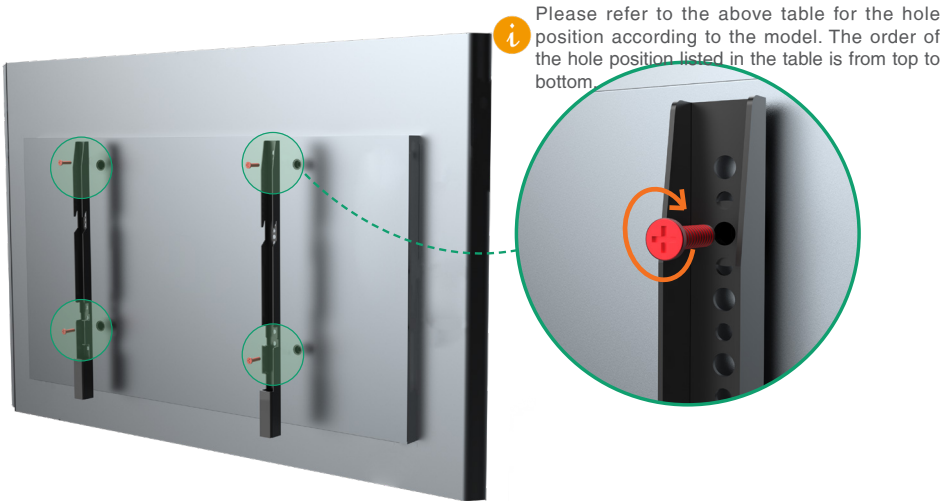

Precautions for Purchase and Installation of Third-Party Bracket

-  If a third-party wall bracket is used, the following items should be paid attention to when purchasing and installing:
- VESA hole size of MeetingBoard 65 Pro body is 600 mm (horizontal) × 400 mm (vertical); VESA hole size of MeetingBoard 75 Pro body is 800 mm (horizontal) × 400 mm (vertical); The MeetingBoard 86 Pro body VESA hole size is 800 mm (horizontal) × 600 mm (vertical).
 - The load of the wall rack of MeetingBoard series equipment shall be more than three times of its own weight, that is, the weight of MeetingBoard 65 Pro shall be more than 120 KG, and the weight of MeetingBoard 75 Pro shall be greater than 156 KG; MeetingBoard 86 Pro needs to weigh more than 197 KG.
 - During installation, the recommended distance from the bottom of MeetingBoard 65 Pro equipment to the ground is 94 cm; the recommended distance from the bottom of MeetingBoard 75 Pro equipment to the ground is 88 cm; The recommended height from the bottom of the MeetingBoard 86 Pro device to the floor is 84 cm.



Install Floor Stand (Optional)

-  You need to purchase additional brackets to install the equipment. You can choose to purchase Yealink standard Floor Stand.
- If you are using the Yealink standard Floor Stand, please refer to the **Quick Start Guide (Floor-Mounted)** included in the corresponding bracket package.



Installation Video

Install Wall Stand (Optional)

-  You need to purchase additional stand to install the equipment. You can choose to purchase Yealink standard Wall Stand. If you are using the Yealink standard Wall Stand, please refer to the **Quick Start Guide (Wall Stand)** included in the corresponding package.



Installation Video

Install MB-CAM (Optional)

-  You need to purchase an PTZ camera separately. For installation, please refer to the **MB-6X/12X Pro Quick Start Guide** included in the corresponding package.



Installation Video


Install Windows OPS (Optional)

-  You need to purchase Windows OPS separately. For installation, please refer to the **MCore-OPS Quick Start Guide** included in the corresponding package.



Installation Video


3 Hardware Component Instructions

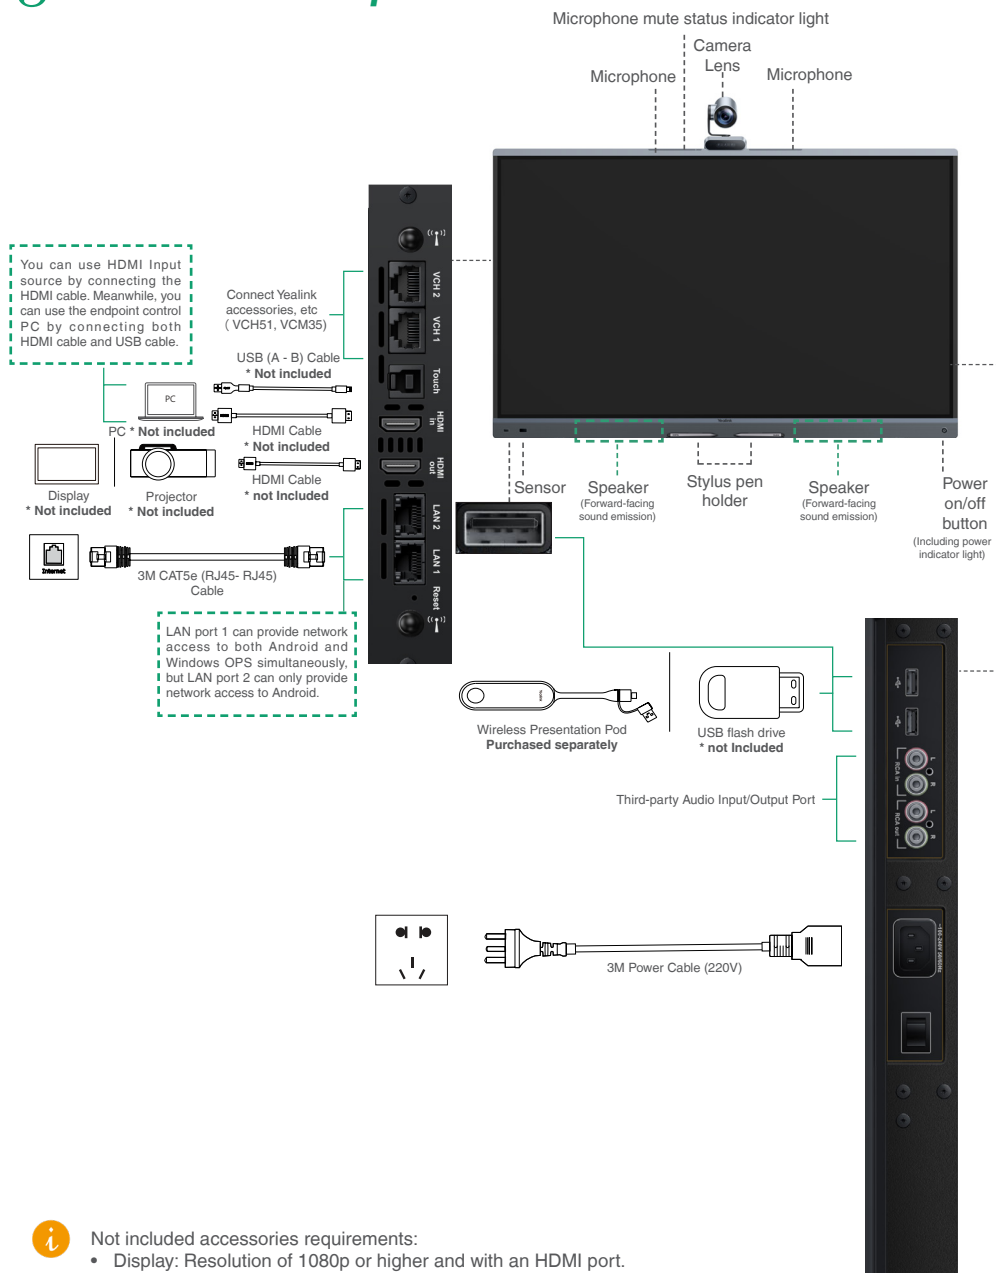

Not included accessories requirements:

- Display: Resolution of 1080p or higher and with an HDMI port.
- PC: Equipped with HDMI or USB-A port.
- USB flash drive: With USB-A port.
- HDMI: Standard HDMI cable.
- USB-B cable: USB 2.0 (A - B) cable.

4 Power on

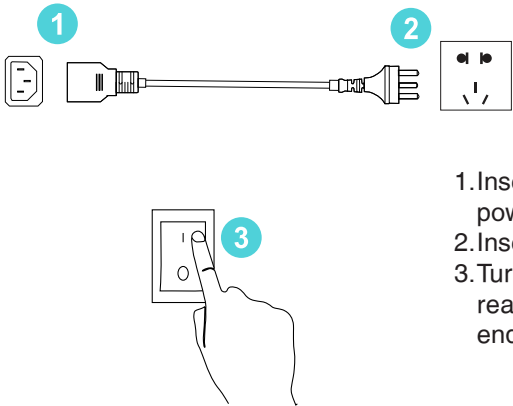

1. Insert the end of the power cable into the power port of the endpoint.
2. Insert the power cord plug into the outlet.
3. Turn the rocker switch button on the right rear of the endpoint to "I" to turn on the endpoint.


Upon first power-on of the endpoint, follow the on-screen setup wizard to configure language, time, network, etc., to initialize the configuration. The initialization operations vary with software versions.

 After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password (default password:0000).

5 LED Indicator Status


LED Indicator	Power indicator light	Microphone mute status indicator light
Description	• Solid red: Power on but turned off. • Off: Power on and turned on.	• Solid red: Muted during a call. • Off: Other status.

6 Power outage

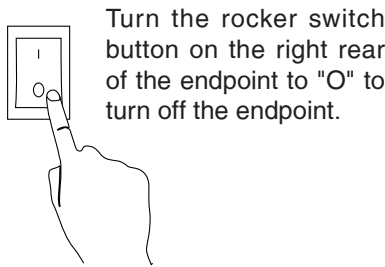

Turn the rocker switch button on the right rear of the endpoint to "O" to turn off the endpoint.

We recommended placement of the OPS antenna is as follows, with the highest signal strength:

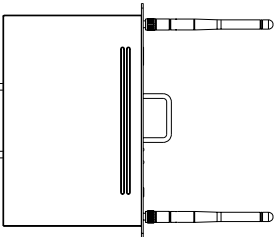

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +14 to 113°F (-10 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

— is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.



General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- The main plug is used as disconnect device, the socket-outlet should be near the Switching Adapter and it should be easily accessible.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.



Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.



Cleaning Requirements

- Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

EU Regulatory Information

Support Frequency Bands and Power:

Bluetooth 2.4GHz < 20 dBm

WLAN 2.4 GHz < 20 dBm

WLAN 5150-5250 MHz < 23 dBm

WLAN 5250-5350 MHz < 20 dBm

WLAN 5470-5725 MHz < 27 dBm

WLAN 5745-5825 MHz < 14 dBm



AT	BE	CY	CZ	DK	EE	FI
FR	DE	EL	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscrétions.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.



Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

No.666 Hu'an Rd, Huli District Xiamen City, Fujian, P.R. China
support@yealink.com

Made in China

Yealink (Europe) Network Technology B.V.

Keizersgracht 62, 1015CS Amsterdam

EUROPE@Yealink.com

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

Suite 160, 5445 legacy drive, Plano, Texas, 75024, United States

Made in China



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



430104002920



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R.
China

Copyright©2024 Yealink Inc. All right reserved.