

Yealink

MeetingBoard 65/86

Quick Start Guide (Wall-Mounted) V1.7

For more information
please scan



Video



Please read this guide before installation to avoid unnecessary personal injury and damage to the endpoint.

Table of Contents



English.....1

Deutsch.....9

Français.....17

Español.....25

  
On the MeetingBoard homepage, tap **Sidebar > Help Center** to view more function documents.

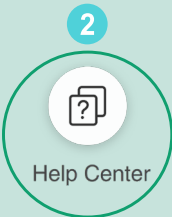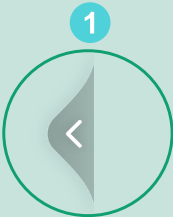

1 Package Contents

The pictures of the endpoint and accessories in this guide are for reference only. Please use the accessories in the package, and follow the guide for installation. Yealink assumes no responsibility for any damage caused by improper installation methods.

 Standard Accessories

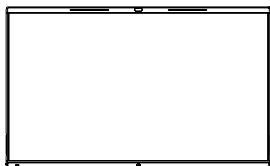

MeetingBoard 65/86



(a)



 
(b)

Wall-mounted bracket

*65-inch and 86-inch wall-mounted bracket are different in size and cannot be mixed.



Pen x 4

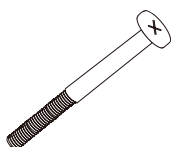

A

Security screw x 2 (M5*100mm)



B

Screw x 4 (M8*35mm)

 
*For locking the back of the endpoint



B

Rubber gasket x 5 (φ32)

*Pad on the back of the endpoint

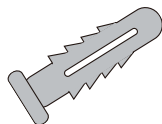

C

Expansion bolt x 8 (8*80mm)

*For vertical, load-bearing solid wall or concrete wall



D

Self-tapping screw x 8 (6*50mm)

 
**For planks or other reinforced walls



D


Metal gasket x 8 (φ8*1.6mm)

*For fixing self-tapping screws

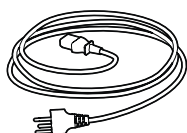


(3m, 9.84ft)

 Power Cable (220V)




(3m, 9.84ft)

 CAT5e UTP (RJ45 - RJ45) Cable



(20*200mm)

 Cable Ties

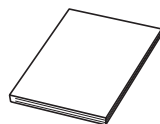



Quick Start Guide (Wall-Mounted)

Endpoint Installation

 If you are using a floor stand for installation, please refer to **Quick Start Guide (Floor-Mounted)**.




  Take and place all components gently to avoid damage.

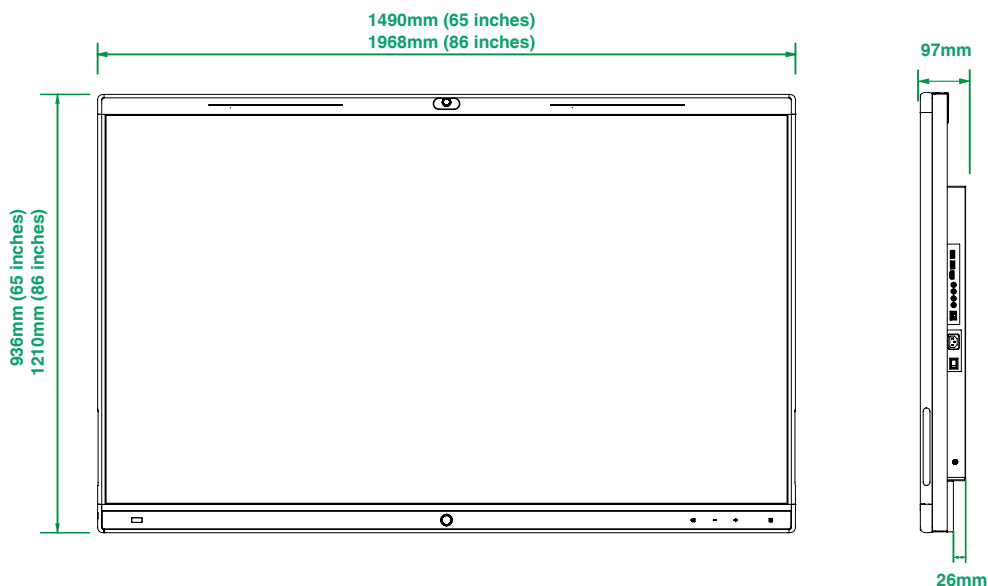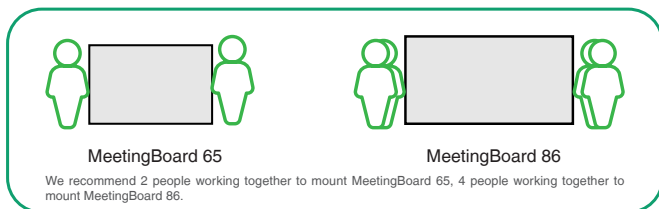




1 Determine wall-mounted bracket (a) installation position

 -  Please install on a vertical, load-bearing solid wall or concrete wall (use expansion screw) or planks, other reinforced walls (use self-tapping screws) with more than 20 cm thickness.
- For other type of walls, please reinforce the wall and verify the feasibility before installation. Verification method: Install a screw to carry out a single screw load test for 1 minute (MeetingBoard 65 load-bearing 35 kg, MeetingBoard 86 load-bearing 45 kg), and the installation can continue if the screw is not loose.
- The wall-mounted bracket for MeetingBoard 65 and MeetingBoard 86 are only different in size, and the installation method is the same.
- The installation height data is for reference only. You can choose a suitable position as needed.
- The VESA hole spacing for MeetingBoard 65 is 400×600mm, and for MeetingBoard 86, it is 600×800mm.

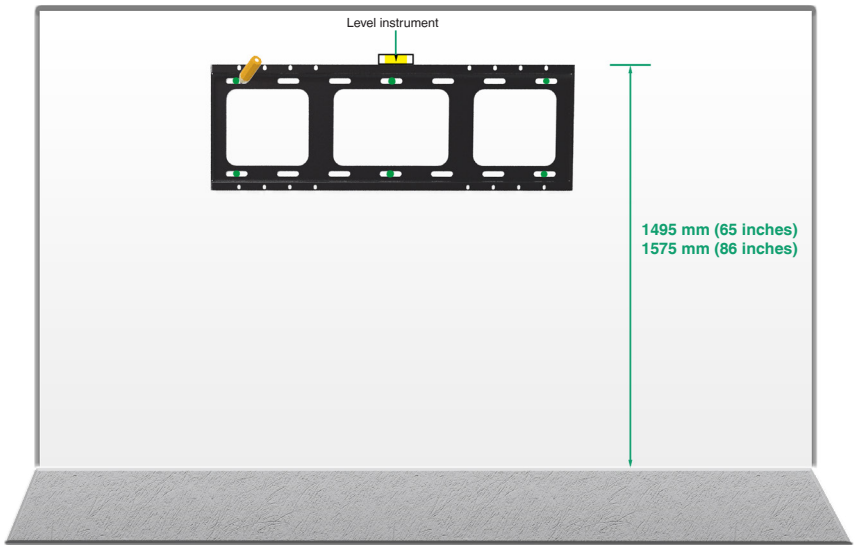

- At least 6 screws for MeetingBoard 65. At least 8 screws for MeetingBoard 86.
- In recessed wall mount scenarios, 200 mm should be reserved between the sides and bottom of the MeetingBoard and the wall frame, and at least 200 mm should be reserved at the top to avoid affecting the sound quality (if MB-Camera is installed, additional space is required).

   
2 Fix the expansion screws/self-tapping screws at the marked positions on the wall

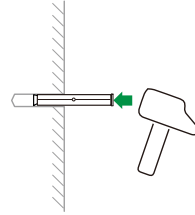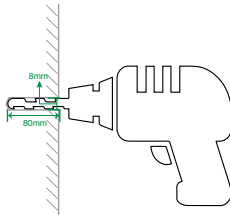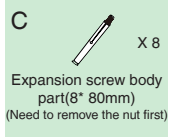

- If the wall is planks, other reinforced walls, install wall-mounted bracket with in-package self-tapping screws.


Methods: To install wall-mounted bracket, sleeve the self-tapping screw (6*50mm) into the metal gasket, then drill it into the wall.

 3 Install the wall-mounted bracket (a) to the wall

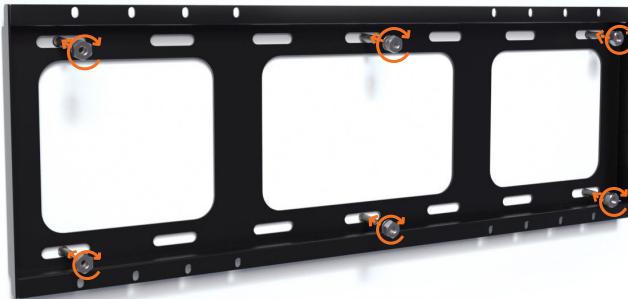


4 Install Windows OPS (Optional)

 
-  1. The endpoint has a built-in Android OS and supports installing OPS modules to use both Windows and Android OS.
- 2. Windows OPS is optional. If you have not purchased, skip this step.
- 3. When installing or uninstalling OPS, make sure that the endpoint is powered off. Otherwise, OPS may be abnormal.

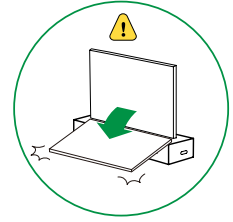

Remove the OPS cover

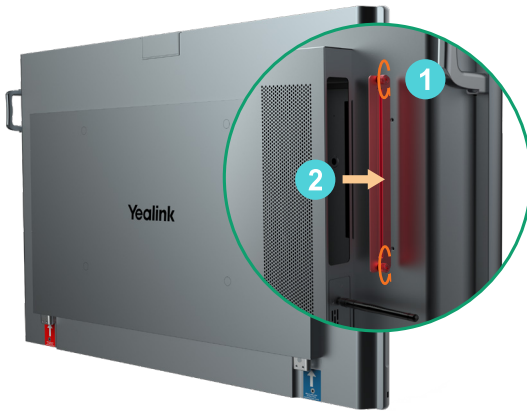 


Insert the OPS and tighten the screws

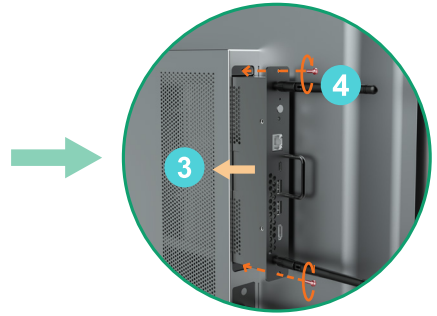 


5 Install MB-CAM (Optional)

 
-  MB-CAM is optional. If you have not purchased, skip this step.

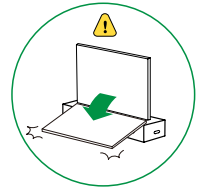

Remove the top cover of the endpoint

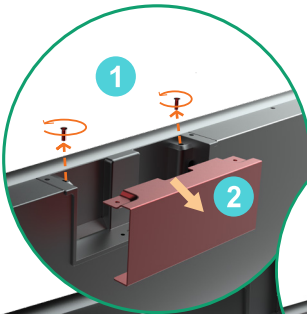 

Insert camera


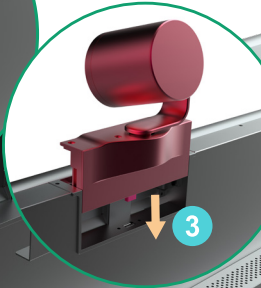 


Mount screws




6 Install wall-mounted bracket (b) on the back of the endpoint

  Tear the patch and remove the screws on the back of the endpoint

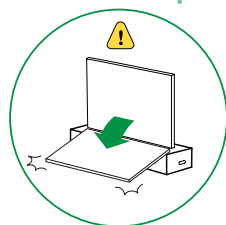


Put the rubber gasket on the back of endpoint, install the wall bracket (b) and lock the screws and gaskets

 We recommended that the screw be installed to the third hole of the wall-mounted bracket (b)

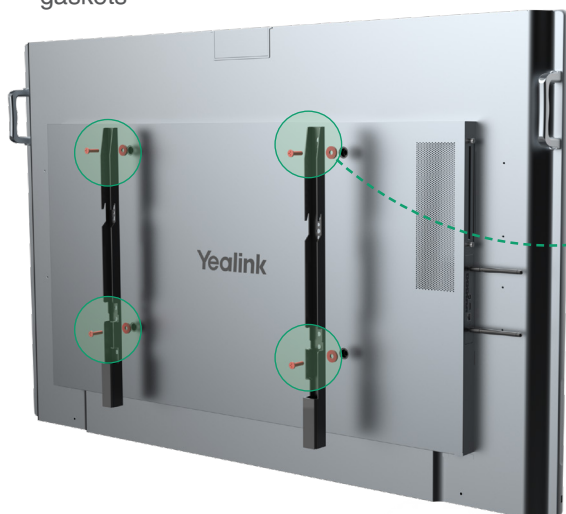

 If the installation height is slightly inappropriate, you can adjust the installation hole position to meet your needs.

 7 Mount the endpoint and lock the security screw on the back of the endpoint

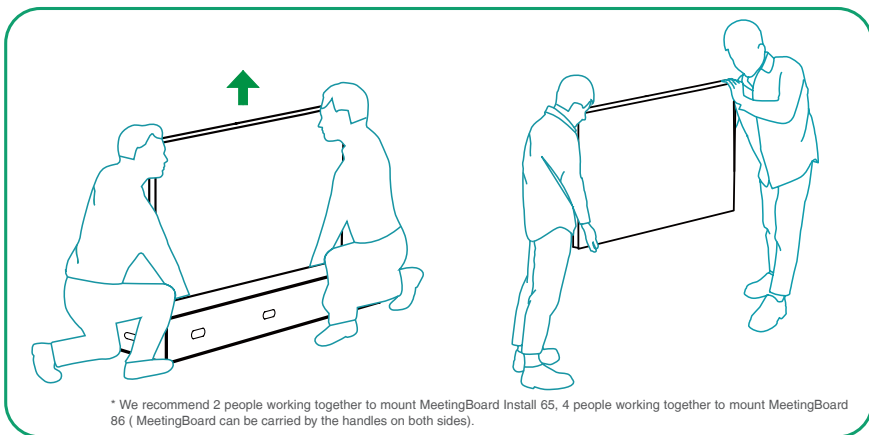


If the power port and network port of the conference room are located on the back wall of the endpoint to be installed, connect the cables first before installing the endpoint.




The wall-mounted bracket (b) on both sides need to be snapped into the slots at the same time.

 
A

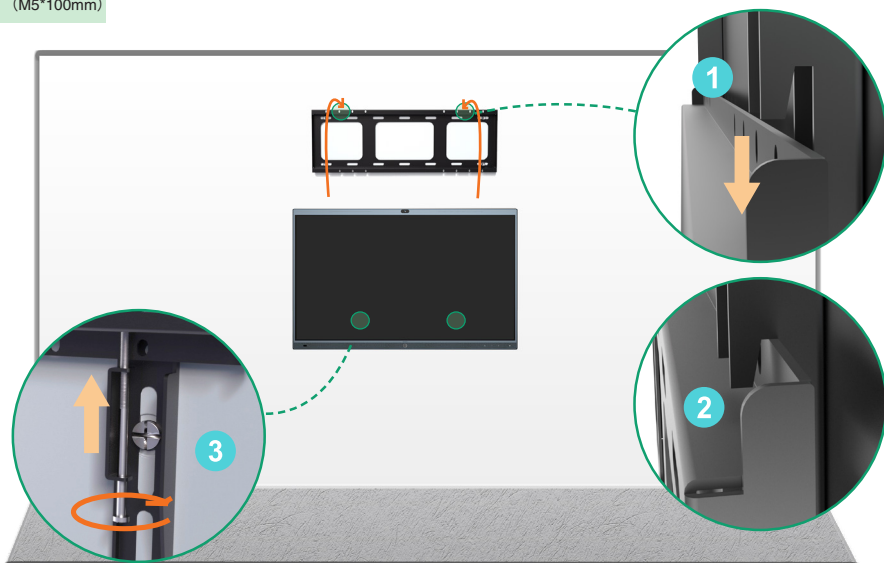

Hardware Component Instructions

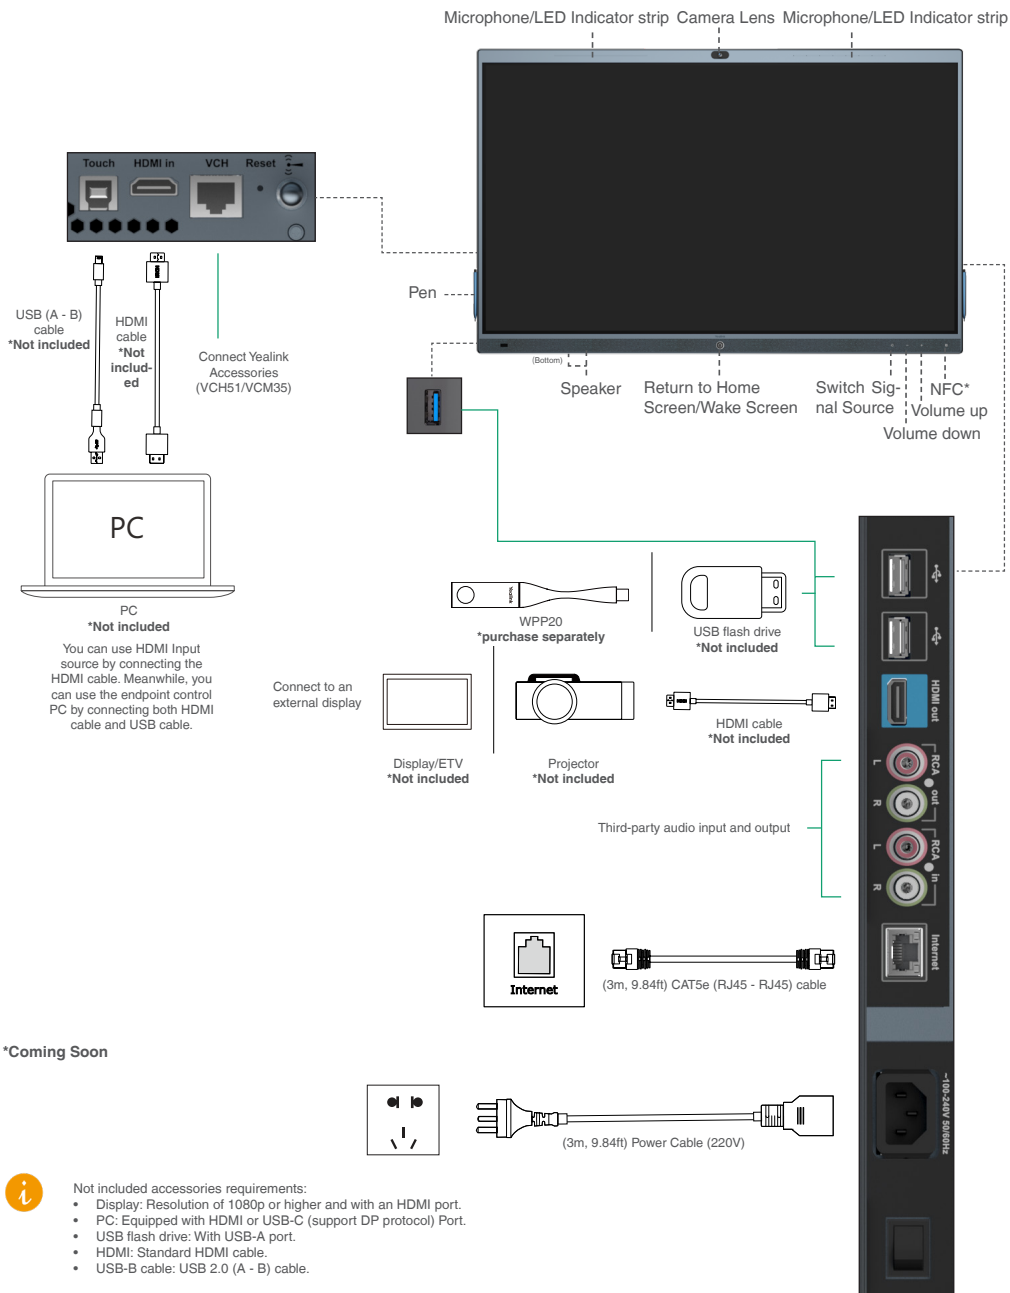 

4 Power on

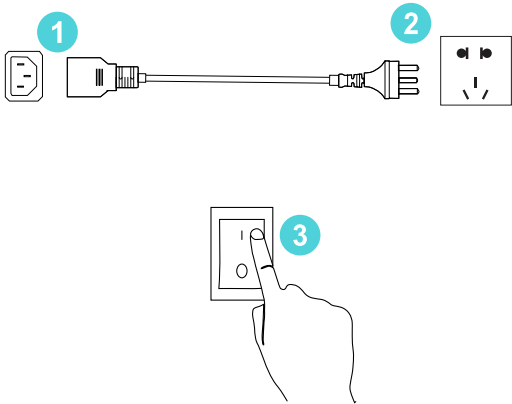 

1. Insert the end of the power cable into the power port of the endpoint.
2. Insert the power cord plug into the outlet.
3. Turn the rocker switch button on the right rear of the endpoint to "I" to turn on the endpoint.


Upon first power-on of the endpoint, follow the on-screen setup wizard to configure language, time, network, etc., to initialize the configuration. The initialization operations vary with software versions.

 After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password (default password:0000).

5 LED Status


Status	Roll green light from inside to outside at the same time	Slowly-flashing green	Rolls green light from left to right	Flashing red	Off	Solid green	Solid red
Description	• Booting • Shutting down	Sleep mode	• Firmware upgrading • Factory resetting	Abnormal	• Power off • Not in a call	Unmuted during a call	Muted during a call

 6 Power outage

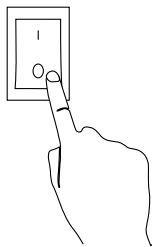


Turn the rocker switch button on the right rear of the endpoint to "O" to turn off the endpoint.

 We recommended placement of the OPS antenna is as follows, with the highest signal strength:

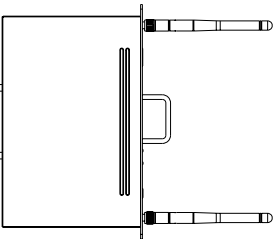

 We recommended placement of the OPS antenna is as follows, with the highest signal strength:

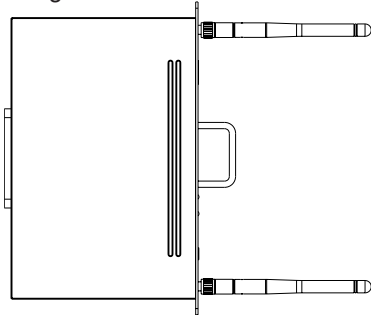

HDMI™ HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



YEALINK (XIAMEN) NETWORK TECHNOLOGY CO.,LTD
WWW.YEALINK.COM

Declaration of Conformity

 
We,
YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD
Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China
Manufacturer: YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD
Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China
DATE: 28th /September/2022
declare that the product
Type: Collaboration Board
Model: MeetingBoard 65

meets the essential requirements and other relevant provisions according to the following EC directive
Directive: 2014/30/EU, 2014/35/EU,RED 2014/53/EU
Conformity

The product complies with the following standards:

- Safety: EN IEC 62368-1:2020+A11:2020
- EMC: EN 55032:2015+A11:2020
EN 55035:2017+A11:2020
EN61000-3-2: 2019+A1:2021
EN61000-3-3: 2013+A1:2019
- Radio:ETSI EN 301 489-1 V2.2.3(2019-11),
ETSI EN 301 489-3 V2.1.1(2019-03)
ETSI EN 301 489-17 V3.2.4(2020-09),
ETSI EN 300 328 V2.2.2(2019-07):
ETSI EN 301 893 V2.1.1(2017-05)
ETSI EN 300 440 V2.2.1(2018-07)
ETSI EN 300 330 V2.1.1(2017-02)

Health :EN 62311:2020.
Harmonized: UN-EN62321
Directive 2011/65/EU and (EU)2015/863 of the European Parliament and of the Council of 8 June 2011 and 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment(RoHS 2.0)
Directive 2012/19/EU of the European Parliament and of the Council of 4,july,2012 on Waste electrical and electronic equipment(WEEE)
Regulation (EC) No.1907/2006 of the European Parliament and of the Council of 18.December.2006 on Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH)
The declaration of conformity is issued under the sole responsibility of the manufacturer

NAME: Huahu Wang
DATE: 
TITLE: Manager 
28/Sep/2022



Declaration of Conformity

We,

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

Manufacturer: YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD

Address: No.666 Hu'an Rd. Huli District Xiamen City, Fujian, P.R. China

DATE: 28th /September/2022

declare that the product

Type: Collaboration Board

Model: MeetingBoard 86

meets the essential requirements and other relevant provisions according to the following EC directive

Directive: 2014/30/EU, 2014/35/EU, RED 2014/53/EU

Conformity

The product complies with the following standards:

Safety : **EN IEC 62368-1:2020+A11:2020**

EMC.: **EN 55032:2015+A11:2020**

EN 55035:2017+A11:2020

EN61000-3-2: 2019+A1:2021

EN61000-3-3: 2013+A1:2019

Radio:ETSI EN 301 489-1 V2.2.3(2019-11),

ETSI EN 301 489-3 V2.1.1(2019-03)

ETSI EN 301 489-17 V3.2.4(2020-09),

ETSI EN 300 328 V2.2.2(2019-07);

ETSI EN 301 893 V2.1.1(2017-05)

ETSI EN 300 440 V2.2.1(2018-07)

ETSI EN 300 330 V2.1.1(2017-02)

Health :EN 62311:2020;

Harmonized: UN-EN62321

Directive 2011/65/EU and (EU)2015/863 of the European Parliament and of the Council of 8 June 2011 and 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment(RoHS 2.0)

Directive 2012/19/EU of the European Parliament and of the Council of 4.July.2012 on Waste electrical and electronic equipment(WEEE)

Regulation (EC) No.1907/2006 of the European Parliament and of the Council of 18.December.2006 on Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH)

The declaration of conformity is issued under the sole responsibility of the manufacturer

NAME: Huahu Wang

DATE:

TITLE: Manager

Huahu Wang

28/Sep/2022

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +14 to 113°F (-10 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

— — — is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Read these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce risk of fire, electrical shock, and other personal injury.

General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- The main plug is used as disconnect device, the socket-outlet should be near the Switching Adapter and it should be easily accessible.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.



Cleaning Requirements

- Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

EU Regulatory Information

Support Frequency Bands and Power:

Bluetooth 2.4GHz < 20 dBm

WLAN 2.4 GHz < 20 dBm;

WLAN 5150-5250 MHz < 23 dBm;

WLAN 5250-5350 MHz < 20 dBm;

WLAN 5470-5725 MHz < 27 dBm;

WLAN 5745-5825 MHz < 14 dBm;



AT	BE	CY	CZ	DK	EE	FI
FR	DE	EL	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR

In all EU member states, operation of 5150 -5250 MHz is restricted to indoor use only.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des interceptions.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.

This product qualifies for ENERGY STAR® in the default mode setting and this is the setting in which power savings will be achieved. Changing the default mode picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR® rating. Refer to EnergyStar.gov for more information on ENERGY STAR® program.



Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

No.666 Hui'an Rd, Hui District Xiamen City, Fujian, P.R. C

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

Eye Protection Mode

Concerns on blue light affecting eye health have risen over the years. Blue light have wavelength between 300 nm to 500 nm, TÜV Rheinland Low Blue Light is a certification for products which meet requirements for lower blue light levels.

When using Eye Protection mode, the blue light will decrease, and it will provide an optimum picture quality suitable for eye relaxation. At the same time, the blue light level is lower than in the default settings, and it was tested by TÜV Rheinland and certified as it met the requirements of TÜV Rheinland Low Blue Light (Software Solution) standards. At the same time, we also recommend that you take regular breaks and look at distant objects for eye relaxation to protect your eyes.

Setting

On the endpoint: Go to **Settings** > **Display** > **Display Mode** > **Eye Protection**.

On the Web interface: Go to **System** > **Display** > **Display Mode** > **Eye Protection**.