


Hardware Interface

Before using, you can refer to the [Deployment](#) to configure. After the deployment is complete, you can refer to this chapter.

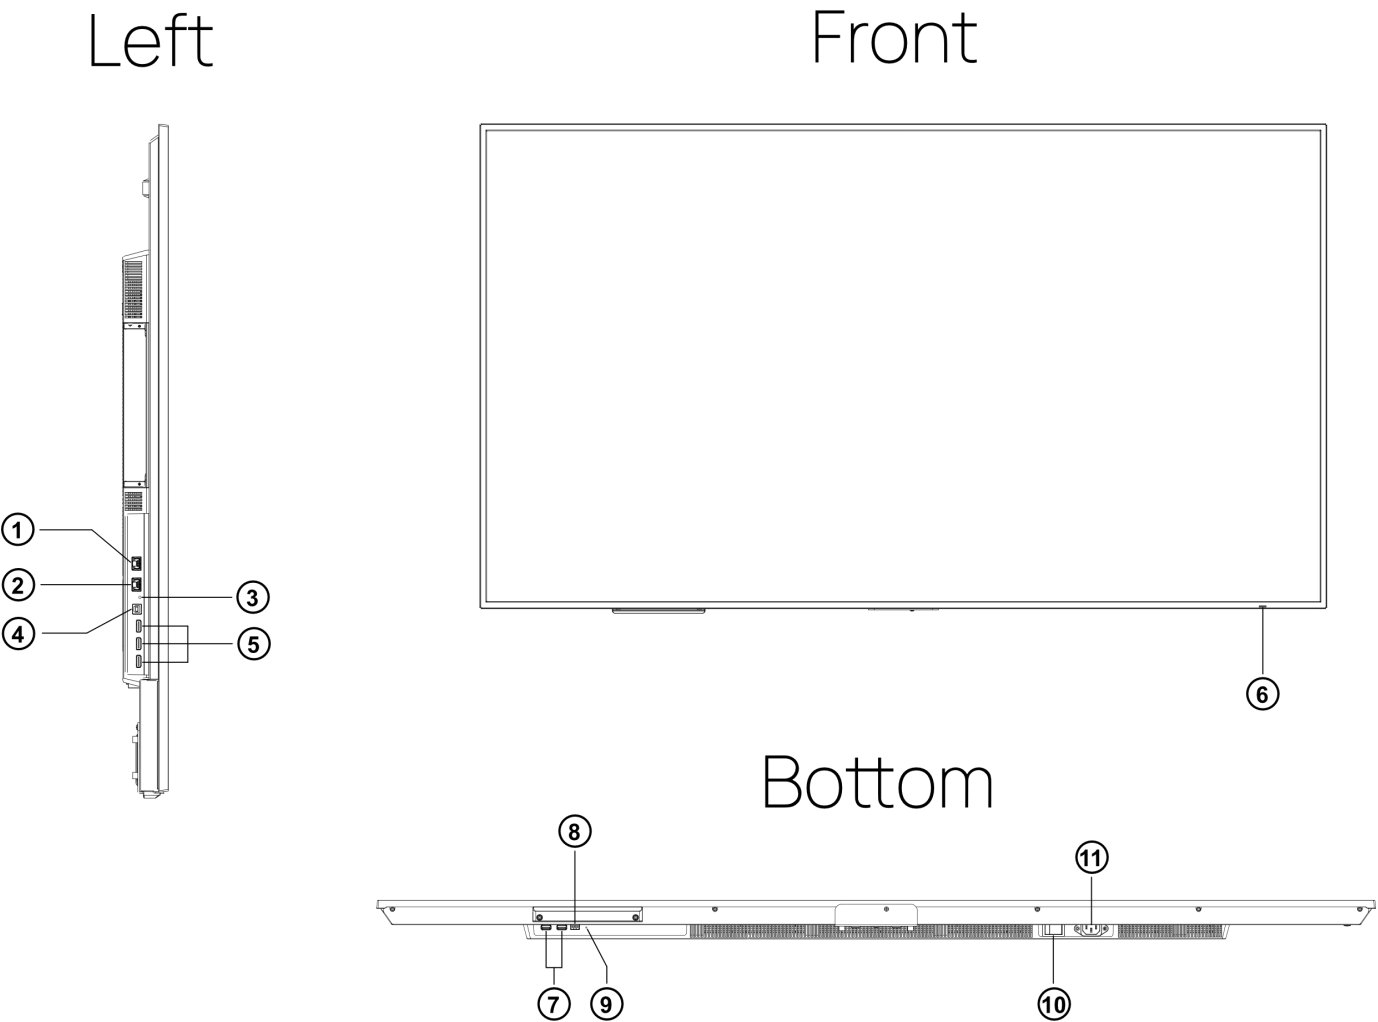

No.	Name	Description
1	LAN port	A network port used to connect Yealink MTR device and provide network access.
2	Internet port	A network port used to connect Yealink MeetingDisplay to the internet.
3	Line out port	An audio output port used to send sound to external speakers or systems.
4	USB-B port	A USB port used to connect devices like Yealink MeetingBar/Yealink MVC for control.
5	HDMI IN	A port used to receive audio and video signals from external sources.

	port	
6	Infrared sensor	A component that receives signals from Yealink MD-Remote.
7	USB-A port	A standard USB port used to connect peripherals like Yealink Wireless Presentation Pod.
8	RS232 port	A port used for serial communication with an external control system.
9	Reset button	A small button used to restore the device to factory default settings.
10	Switch button	A button used to power the device on or off.
11	Power port	A port used to connect the device to a power source.