

Homepage Overview



No.	Description
1	Date and time.
2	Source switching. Select to open the source selection interface and choose the desired input source.
3	Screen casting.
4	Digital Signage. Select to enter the digital signage interface.
5	Settings.
6	Applications.
7	Prompt. You can press the prompted buttons on the MD-Remote to open Control Center.
8	You can use the MD-Remote to select the button to open the side menu.



No.	Description
1	Settings.
2	Source switching. Select to open the source selection interface and choose the desired input source.
3	Brightness adjustment. You can press the left or right button on the MD-Remote to adjust the brightness.
4	Screen casting.
5	Digital signage. Select to open the source selection interface and choose the desired input source.