 
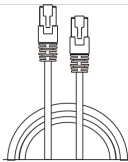
 
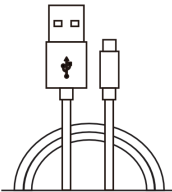
 
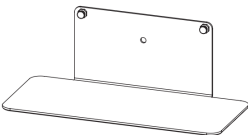
 


MeetingBar A50

Package Contents

Standard

				
MeetingBar A50	(3.5 m, 11.48 ft) Power Adapter (48V/1.36A)	(3 m, 9.84 ft) CAT5e UTP (RJ45 - RJ45) Cable	(1.8 m, 5.91 ft) HDMI 2.0 Cable	
				
(2.5m,8.20ft) USB 3.0 (A - B) Cable	×2 φ 6*30 mm Polyamide	×2 T4*30 mm	×3 1/4 inch*12 mm	×1 1/4 inch*13 mm
				
Mounting Bracket (VB-WallMount-02)	Table-top Stand (VB-TabletopMount-02)	Cable Cover	(20 * 200 mm) Cable Ties	Quick Start Guide


Optional



VCR11 and
AAA Battery × 2




CTP25

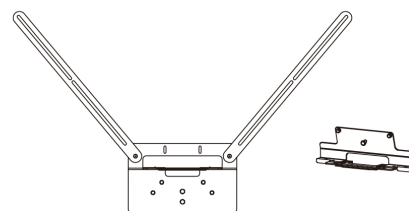


VB-TVMount-01



MeetingDisplay

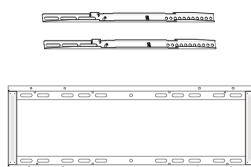


MD-Wallmount

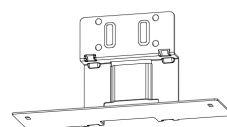

MD-AVBracket-L

- VB-TVMount-01 is exclusively designed for MeetingBar A50, compatible with most displays.
- It is recommended that MeetingDisplay be used with the MD-Wallmount and the MD-AVBracket-L bracket.
- The MD-AVBracket-L is compatible only with the Yealink MeetingDisplay 75/86.


Connector Panel

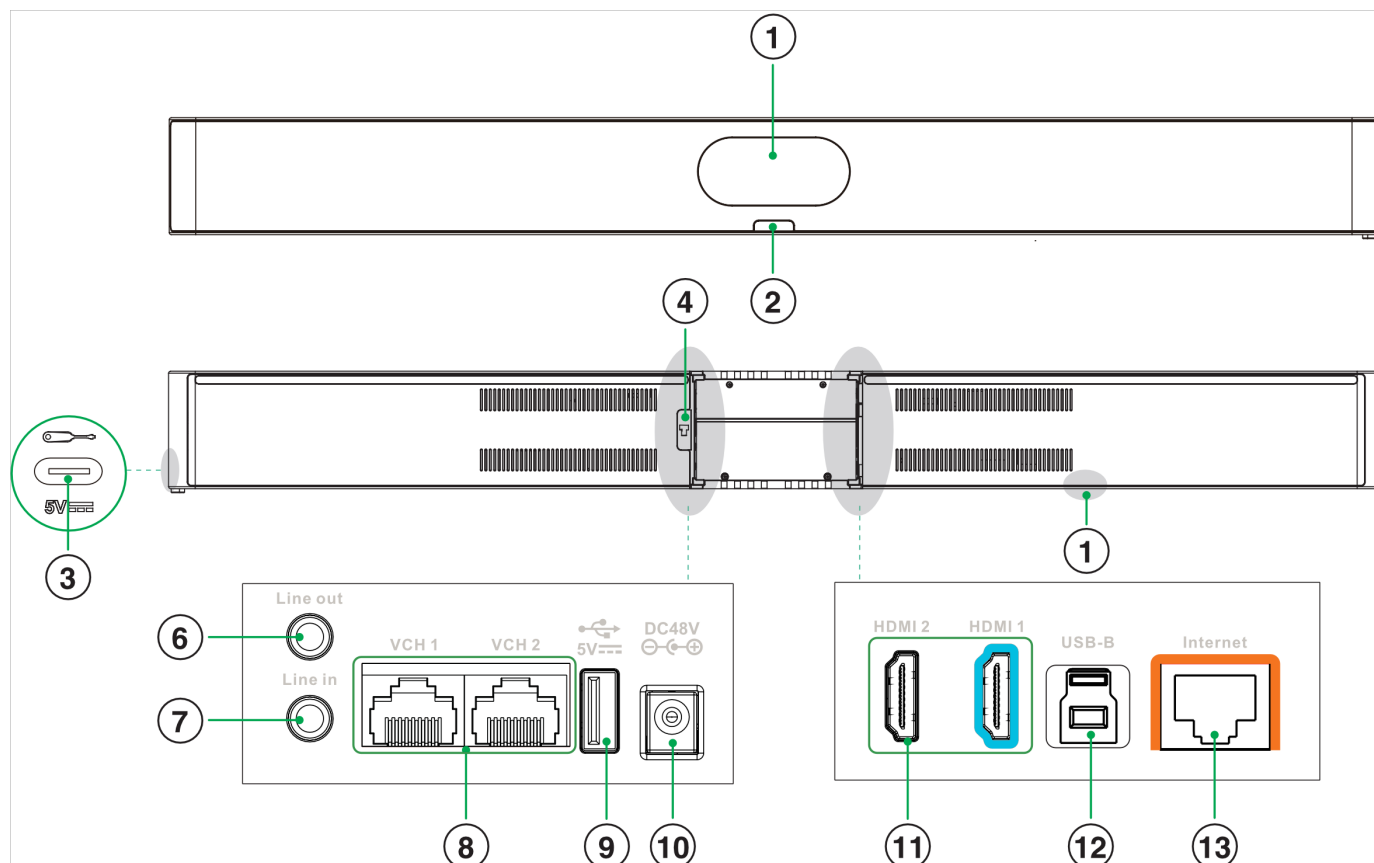

No.	Item	Description
1	Camera	A camera with an electric privacy shutter.
2	LED Indicator	Indicate the device status.
3	USB-C 2.0 (Side)	Connect to a Yealink Wireless Presentation Pod for pairing.
4	Security Slot	Connect a universal security cable to the device so that you can lock it down.
5	Reset	Reset to factory defaults.
6/7	Line-in/Line-out	Connect to an audio output/input device via a 3.5 mm audio cable.
8	VCH	- Connect to a Yealink CTP Touch Panel. - Connect to a Yealink expansion mic. - Connect to a PoE switch.
9	USB-A 3.0	- Connect to a Yealink MeetingDisplay to synchronize A50 configurations and integrate features. - Connect a USB accessory, such as a mouse.
10	DC 48V	Connect to a power adapter.
11	HDMI 1 & HDMI 2	Connect to a display for video image output.

		You need to use HDMI 1 Port first when using only one display.
12	USB-B 3.0	Connect to a mini PC to use it as a video peripheral of MTRoW.
13	Internet	- Connect to a Yealink MeetingDisplay's LAN port to access the network, provided that the MeetingDisplay is connected to the Internet. - Connect directly to the network for Internet access.


Cable Connection

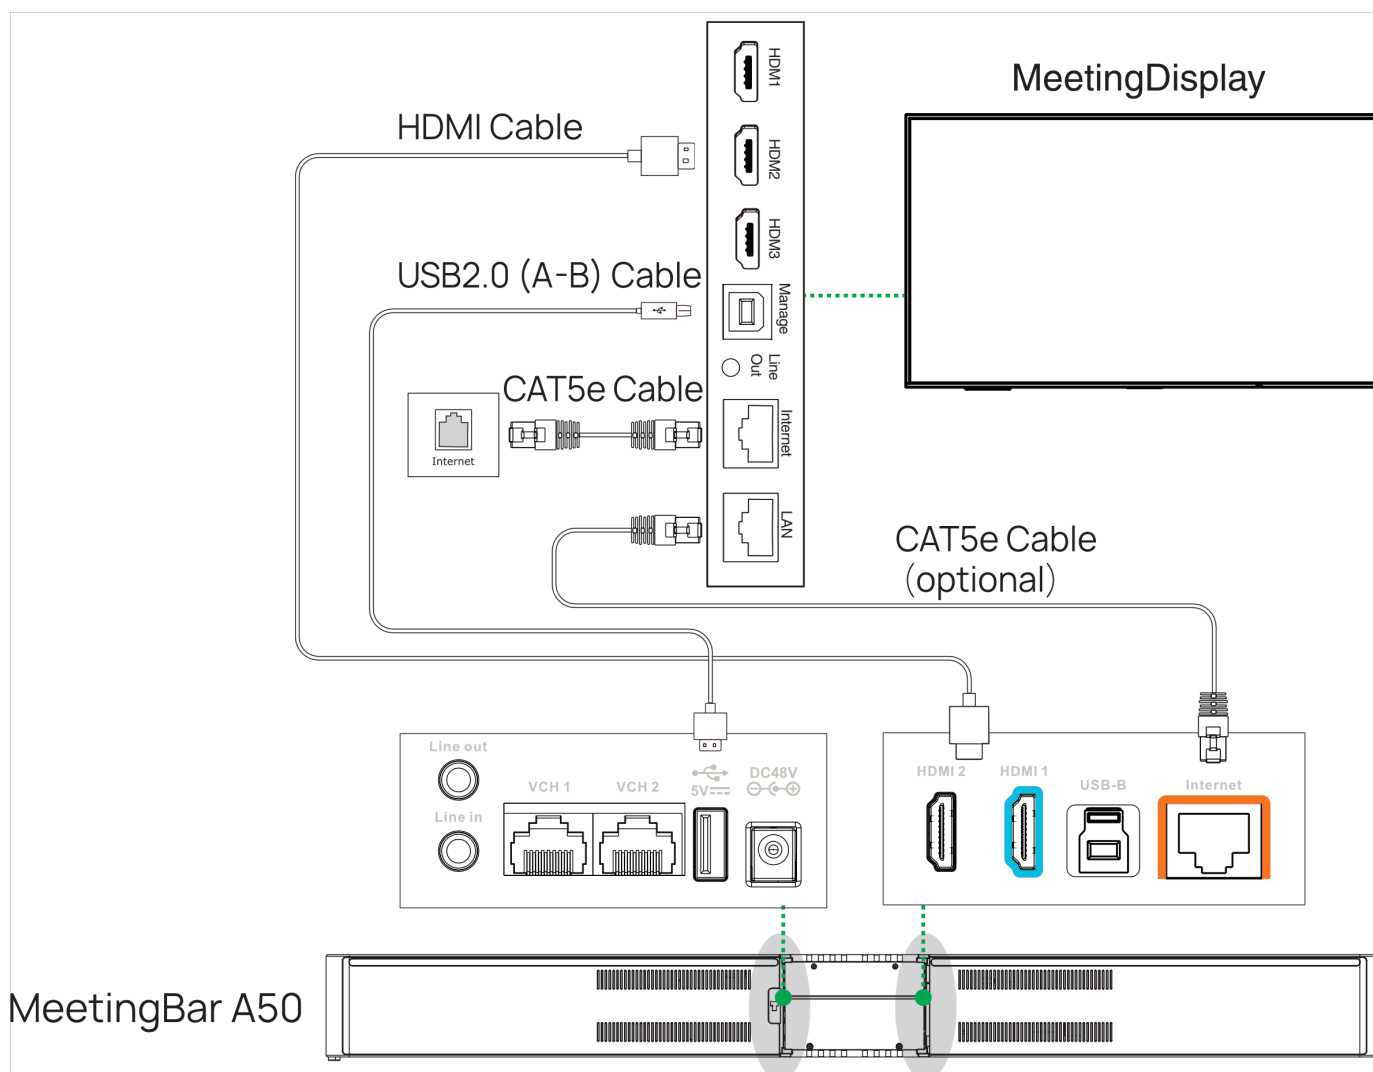


- USB 2.0 (A-B) cable is included in the MD-AVBracket-L's package.
- If the CAT5e cable from MeetingBar A50 is not connected to the LAN port of MeetingDisplay, then it should be connected to an external network port.

Installation


1. Install the MD-AVBracket-L

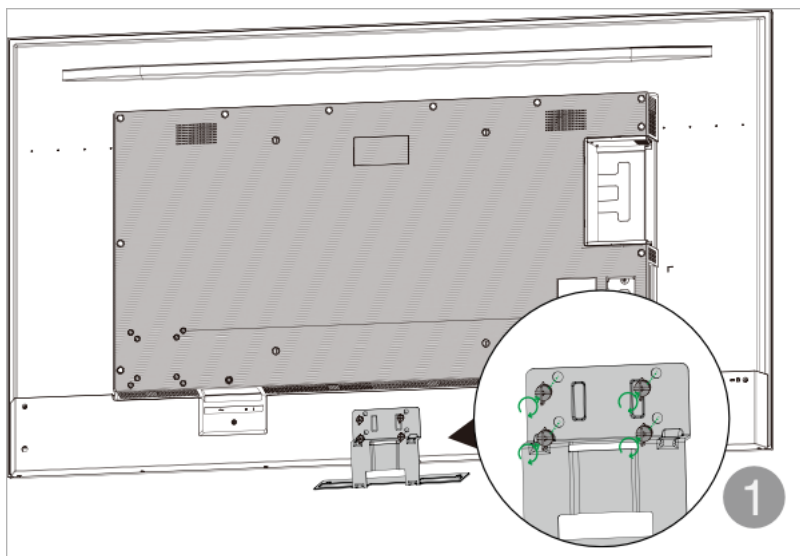


2. Place the MeetingBar A50

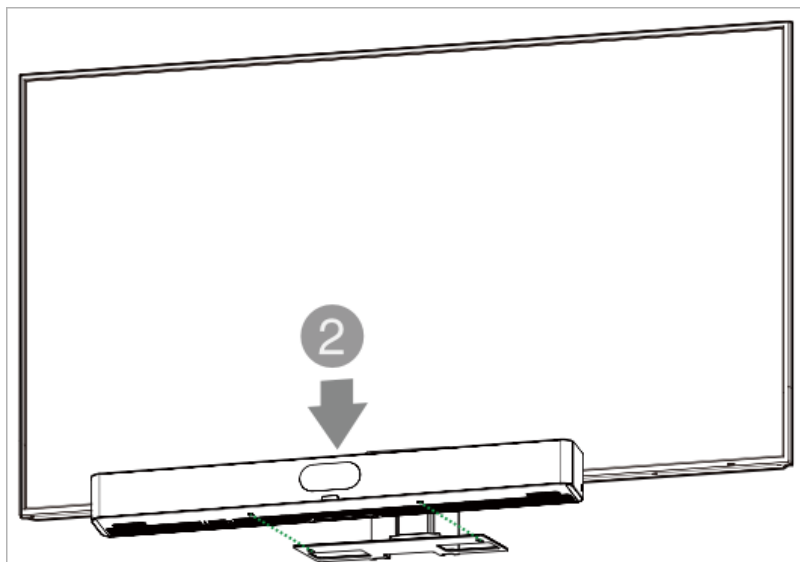

3. Fix the MeetingBar A50

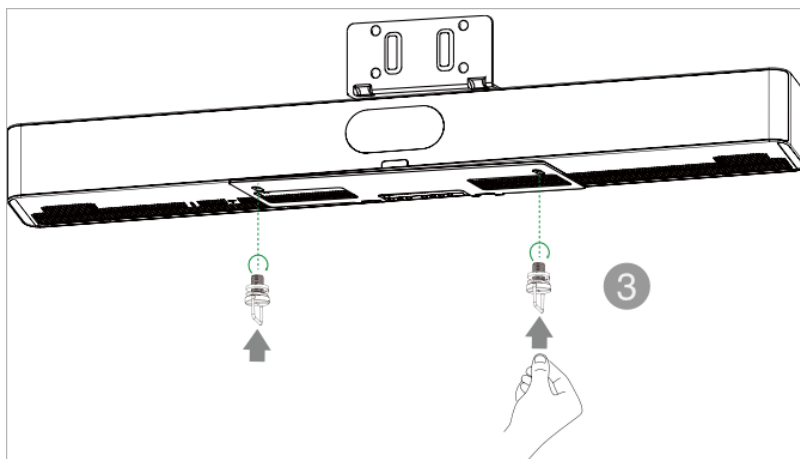

Effect Demonstration

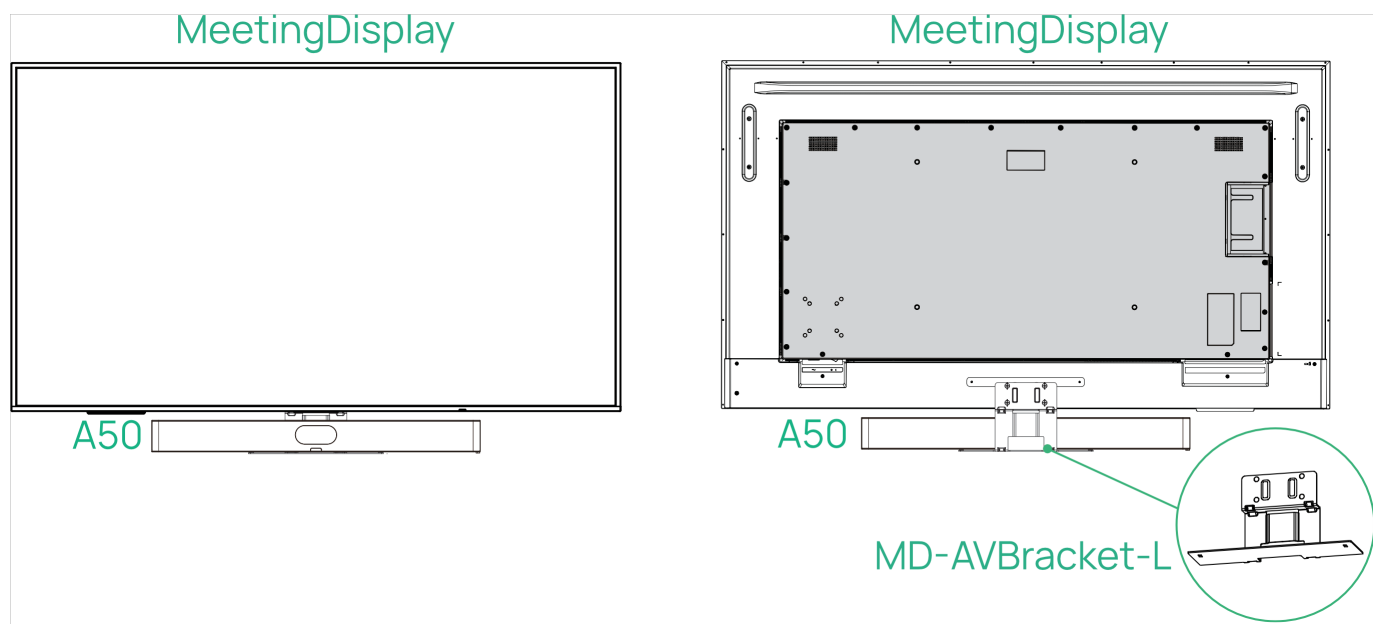

- ! You need to purchase MeetingDisplay and MD-AVBracket-L separately. For installation, please refer to the [MD-AVBracket-L Quick Start Guide](#) included in the corresponding package.