


Yealink

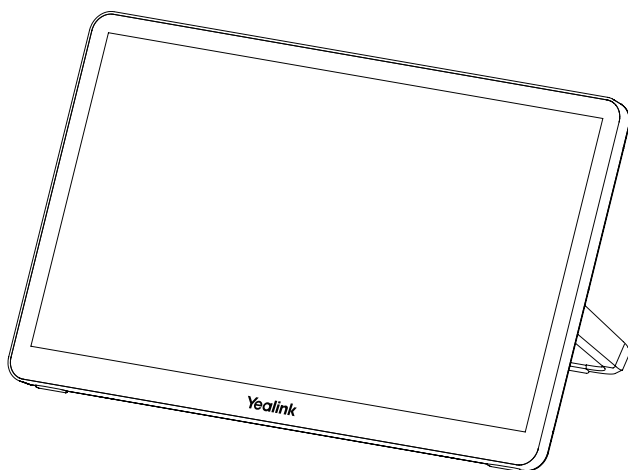

Unboxing Video



MTouch Plus Quick Start Guide V1.3

English | 简体中文 | DEUTSCH | ESPAÑOL | FRANÇAIS

Content


English.....	1
简 体 中 文	7
Deutsch.....	13
Español.....	19
Français.....	25

Package Contents

EN




 MTouch Plus




(7.5m, 24.6ft)

 CAT5e UTP (RJ45 - RJ45) Cable



(1.2m, 3.94ft)

USB 3.1 (C - C, HDMI) Cable

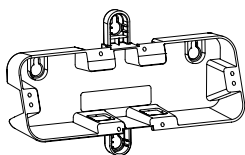

(207.44 mm * 126.99 mm)

Mounting Bracket



× 4

Φ6 * 30 mm, white, Polyamide



× 4

4*30 FAHOZN3+ (+)



× 2

M8*60mm,SUS304



(M8,Φ30*T2mm, SUS304)

Washer



 
× 2



(M8,SUS304)

× 2

Wing Nuts



Lock cable buckle



× 4

2.5*8.0PAHOZN3+(+)



× 4

2.5*9.0FMHZN(+)



 
(L200*W62.5*T1.2mm)

Double-Coating Tape




(WH-85*3.0mm)

Screwdriver



Quick Start Guide


Hardware Interface Instructions

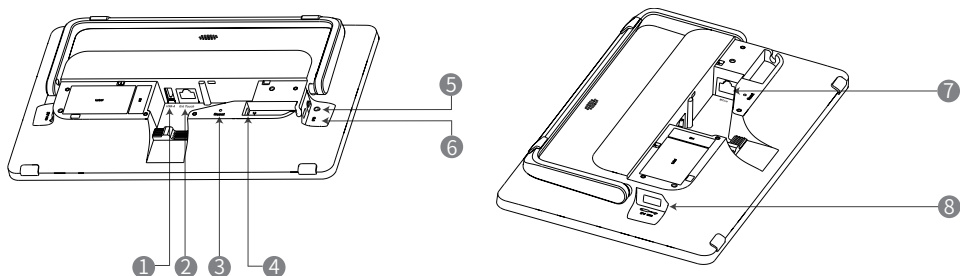


- ① USB-A Port: Connect to a USB audio device.
- ② Ext Touch: Reserved for dual touch panels control function.
- ③ Reset: Reset the MTouch Plus to factory defaults.
- ④ USB-C Port: Connect the PC for content sharing.
- ⑤ 3.5mm Headset Port: Connect to a headset.
- ⑥ PD Port (USB-C) :Connect the PD power supply (additional purchase) to power the PC.
- ⑦ MCore: Connect to the MCore pro, and the MTouch Plus is powered by the MCore pro.
- ⑧ USB-A Port: Connect to the USB dongle.

Connection

• Assemble your MTouch Plus

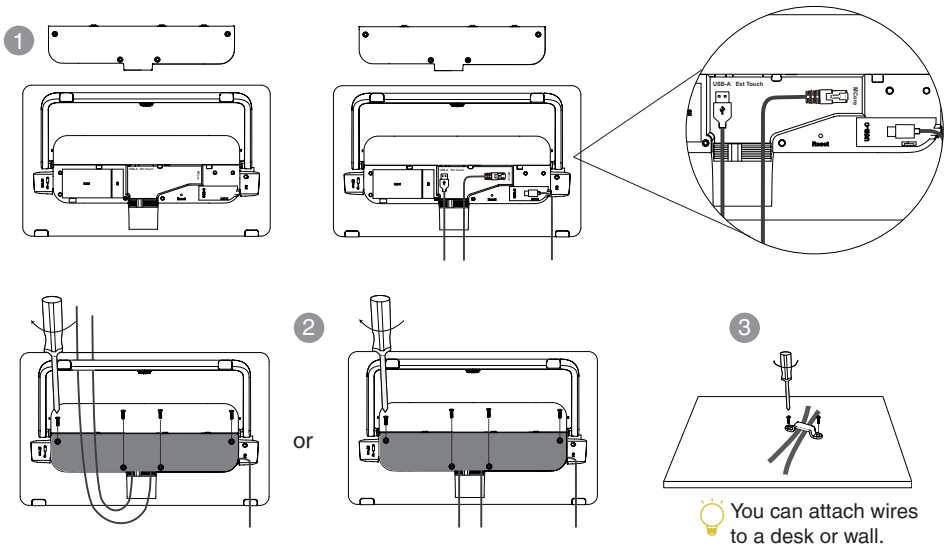


• Connect your MTouch Plus

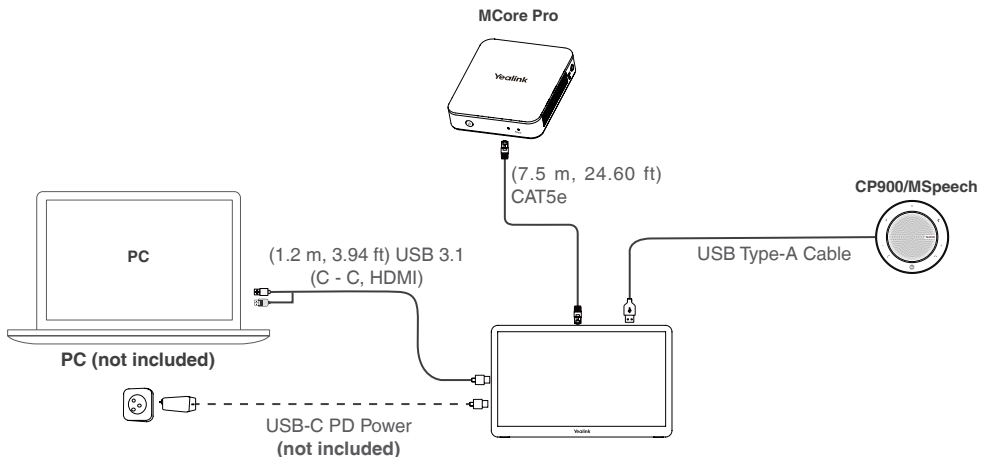


- You can purchase additional PD power supply to power the PC.
- Not included accessories requirements:
 - » PC: Equipped with HDMI or USB-C (support DP protocol) Port.
 - » USB-C PD Power: A PD power adapter with a power transmission greater than 45W, equipped with a USB-C cable.

Table installation

• Put on a table

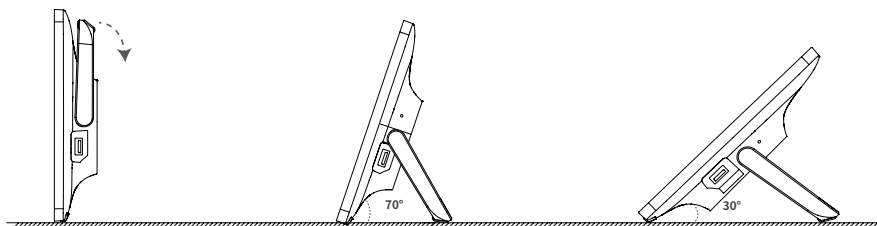


• Paste on a table

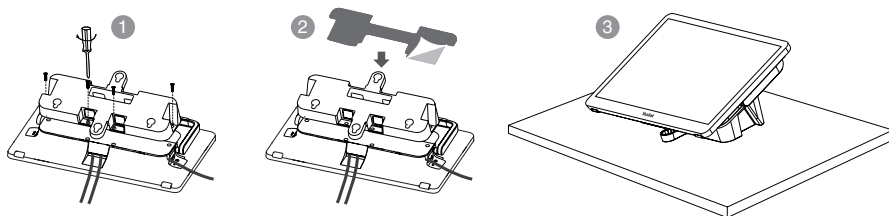

Please select the outlet hole according to your need.



• Fixed on a table

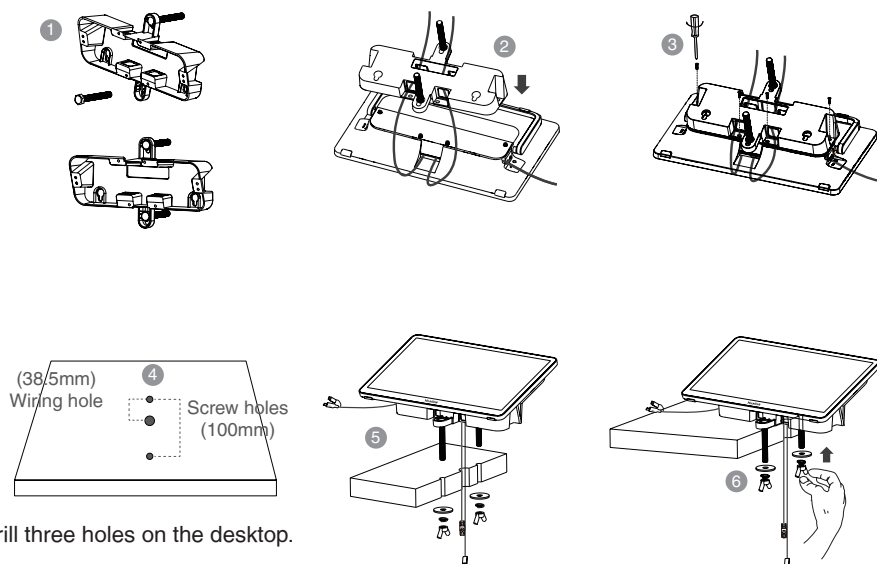

Drill three holes on the desktop.

Wall installation


The template is provided drill hole locations for MTouch Plus. Use the center reference hole to position the template. Get templates from support.yealink.com.

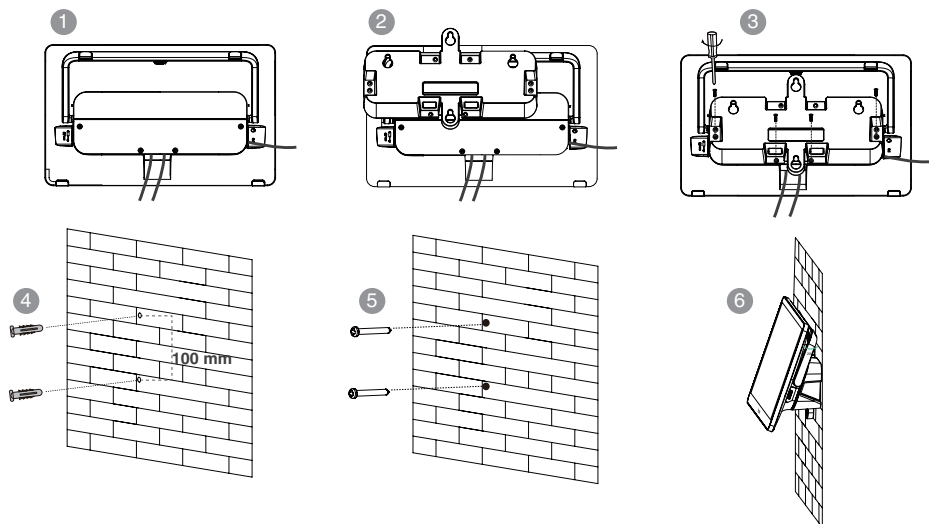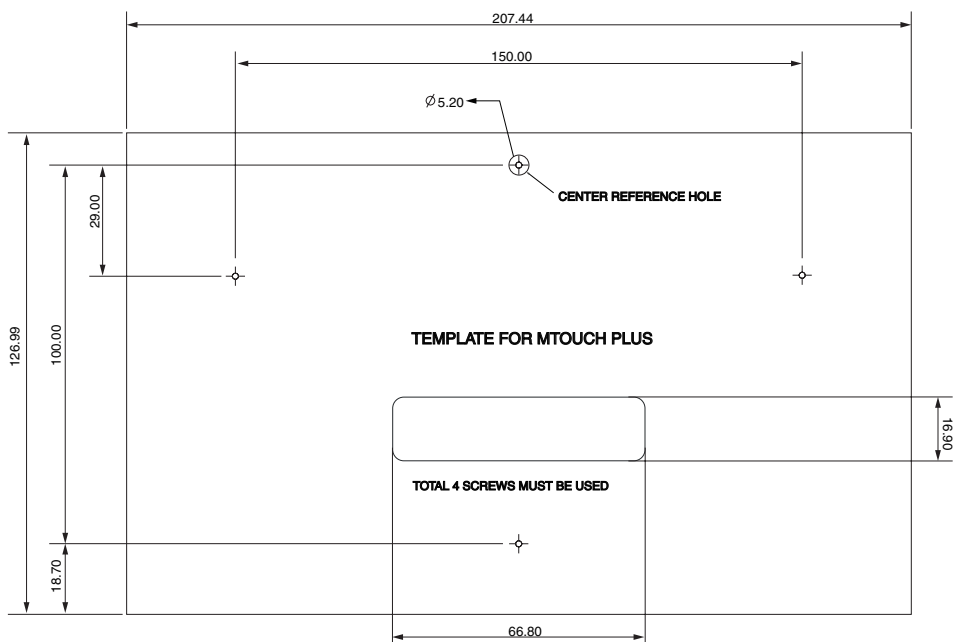

We recommend that the height of the wall installation is 1m~1.5m from the ground. Please select the outlet hole according to your need. If the conference room environment allows, you can also wire through the wall.

Pair with a Room Sensor

1. Switch account from Skype to Admin.
2. Open Yealink RoomConnect Software from Desktop.
3. Go to **MTouch Plus > Sensor**.
4. **Add sensor**. Select the right sensor to pair.
Remove the back cover of Room Sensor, you will see its name on the top. Then select accordingly.

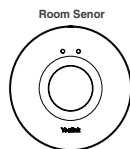


💡 Remember to install the battery of Room sensor before pairing.

Presentation

• Wired presentation

Connect MTouch plus and PC through USB Type-C, and you can share the screen.

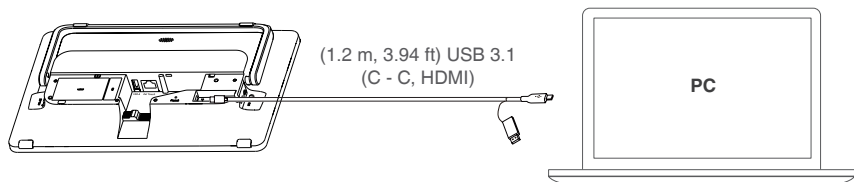

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

For more information about Yealink, click <https://www.yealink.com>.


Copyright

Copyright © 2026 Yealink(Xiamen) Network Technology CO., LTD.

Copyright © 2026 Yealink(Xiamen) Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink(Xiamen) Network Technology CO., LTD.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.

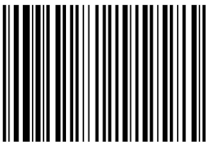

430104002427



YEALINK NETWORK TECHNOLOGY CO.,LTD.
No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R. C
Web: www.yealink.com
Copyright©2026 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO., LTD.All rights reserved.