



1 Minimum Requirements

- A display connected to MCore 4 (not included).
- A Zoom Rooms account (not included).
- Wired network environment (not included).


2 Package Contents

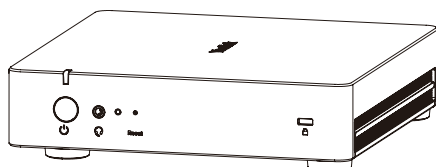


MCore 4 Package

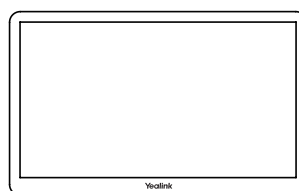

MTouch Plus Package

 


SmartVision 40 Package

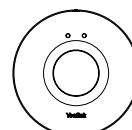


RoomSensor Package

 
Optional



MeetingDisplay 65/75/86 Package

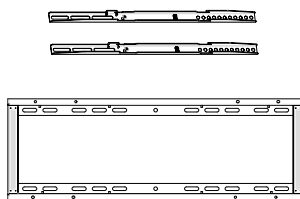

MD-WallMount Package

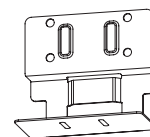

MD-AVBracket-S Package


 We recommend using MeetingDisplay 65/75/86, MD-Wallmount and MD-AVBracket-S together.

3 Installation

- MCore 4 supports: mount on the wall, mount on the TV, put on a table, mount on the MeetingDisplay (optional) .
- MTouch Plus supports: put on a table, paste on a table, fixed on a table, mount on the wall.
- SmartVision 40 supports: put on a flat surface, mount on the wall, embed in the wall, mount on the tabletop mount, mount on the tabletop mount and mount on the MeetingDisplay (optional) .
- RoomSensor supports: mount on the ceiling, mount on the wall.
- MeetingDisplay supports: Install on the MD-WallMount Bracket (optional), Install on the Electric Lift Stand MB-FS-Lift (optional) .


Install MCore 4 on MeetingDisplay (optional)

- i** You need to purchase MeetingDisplay separately. For installation, please refer to the **MeetingDisplay Quick Start Guide** included in the corresponding package.

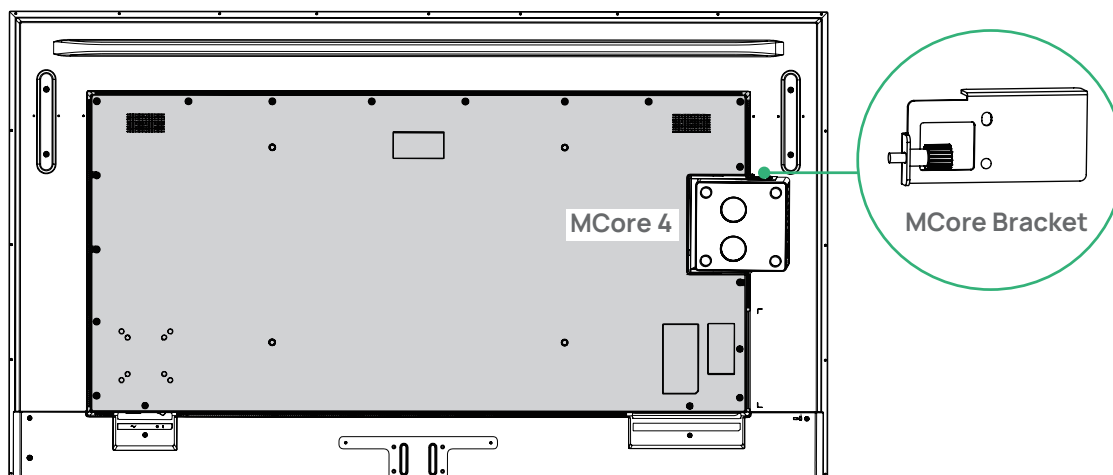


Install SmartVision 40 on MeetingDisplay (optional)

- i** You need to purchase MeetingDisplay and MD-AVBracket-S separately. For installation, please refer to the **MD-AVBracket-S Quick Start Guide** included in the corresponding package.

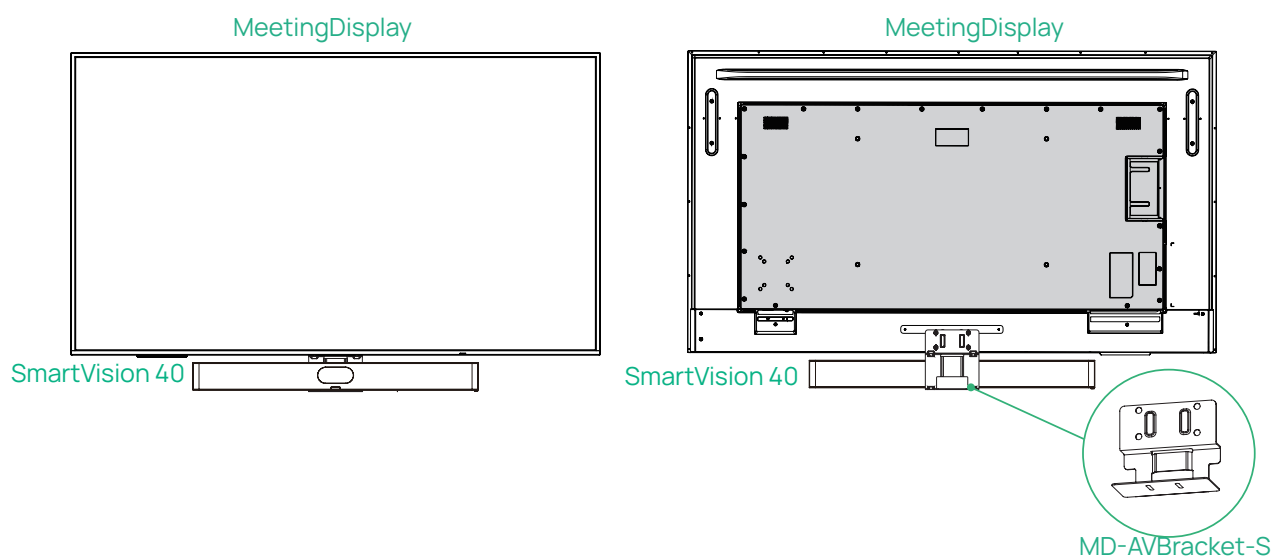

4 Connection


Optional 1: Basic Connection

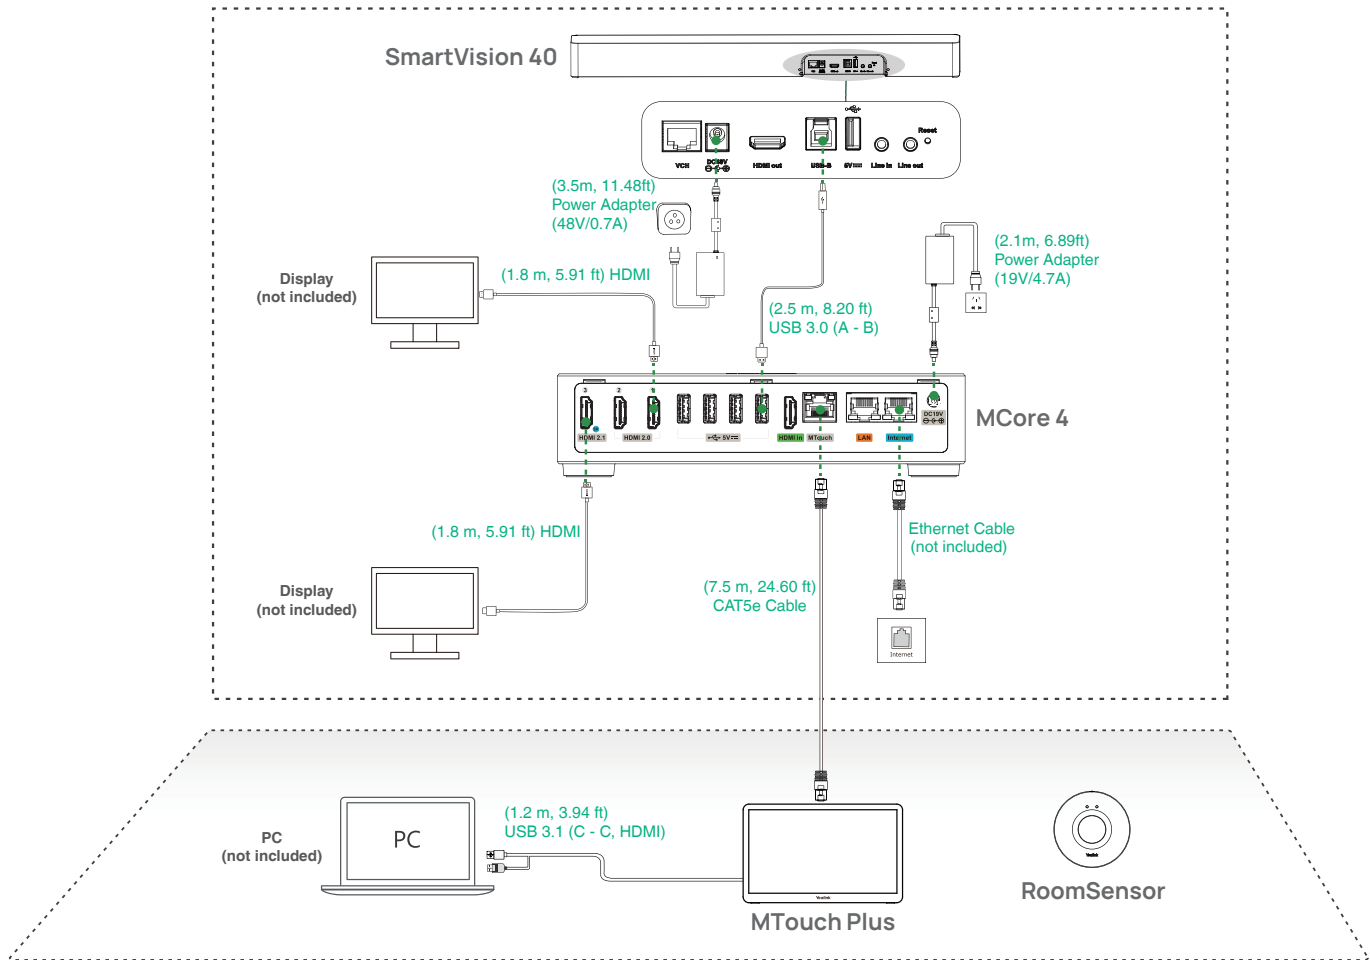

- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - » Display: Resolution of 1080p or higher and with an HDMI port.
 - » PC: Equipped with HDMI or USB-C (support DP protocol) Port.
 - » Ethernet cable: CAT5e or higher ethernet cable.
 - » PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.

Optional 2: Connect with MeetingDisplay

 If not connected to the LAN port of MeetingDisplay, please connect to the external network port.

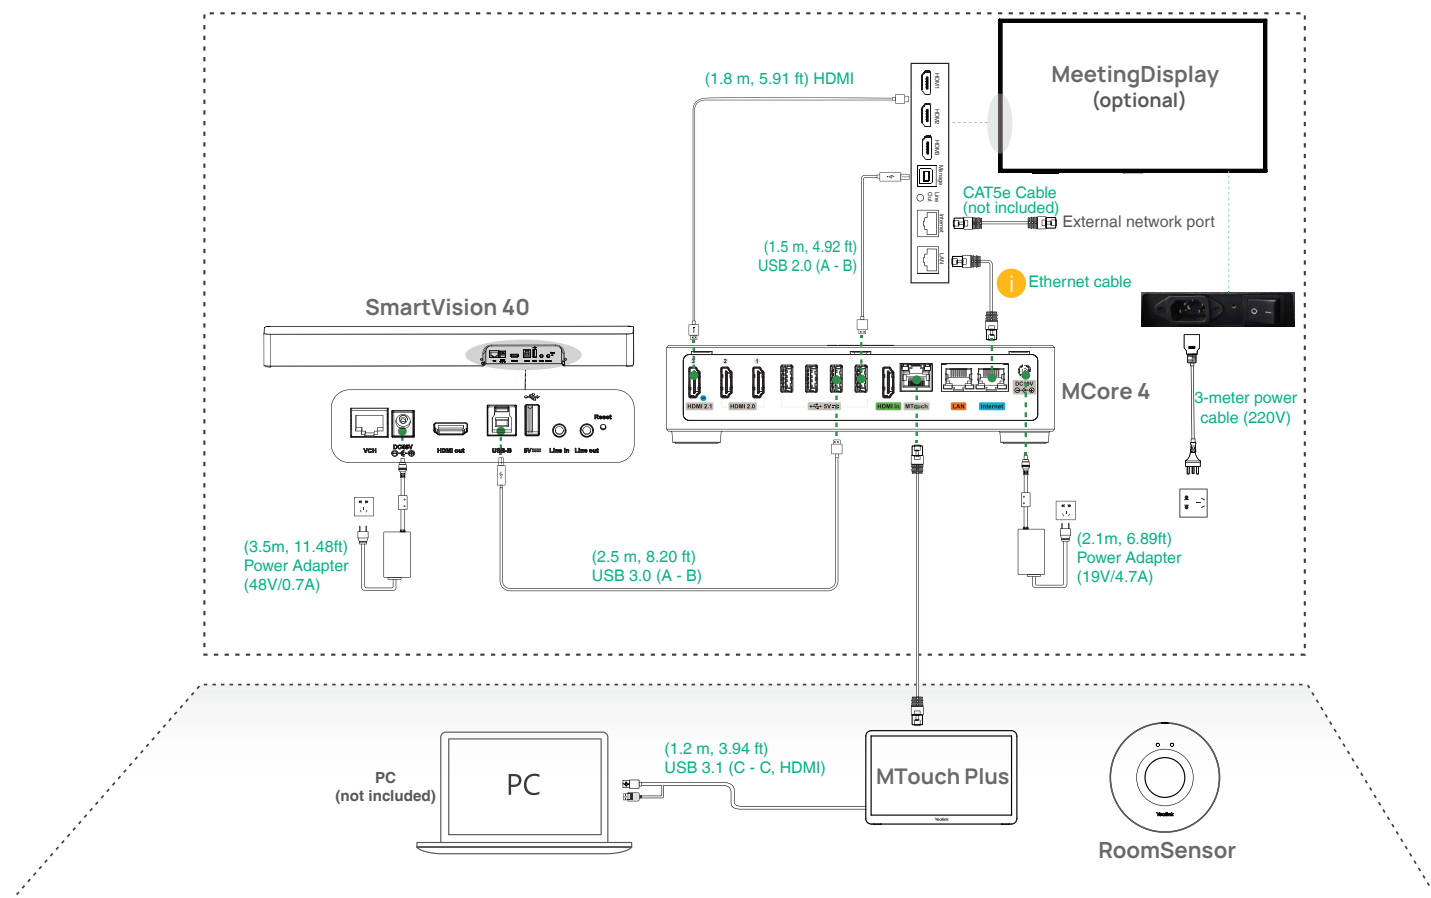

-  When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - » PC: Equipped with HDMI or USB-C (support DP protocol) Port.
 - » PoE switch: If you use PoE to connect speakers or cameras, you need to use PoE+.
 - » Ethernet cable: CAT5e or higher ethernet cable.


5 Initial Setup

1. Press the power button on the left of MCore 4, and the Microsoft Windows 11 IoT Enterprise Edition operating system will be automatically loaded after starting MCore 4. After the system is initialized, you can use MTouch Plus to complete the system login and settings, and the device will automatically start the Microsoft Teams conference system application and enter the setting page.
2. Select the check box on the **EULA** page, and then tap **Next**.
3. Enter the account, the password on the **Account** page, and then tap **Next**. Supports Microsoft Teams Rooms for Business accounts.
4. On the **Advanced** page, configure the domain and tap Next.
5. Tap **Finish** to complete the setup wizard.

6 Features

Wireless Sharing

1. Connect the WPP30 to the USB port of the MTouch Plus. When pairing, the LED indicator of WPP30 is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired WPP30 to the USB-A/USB-C port on your PC.
3. On the WPP30, press the presentation button to share the full screen.

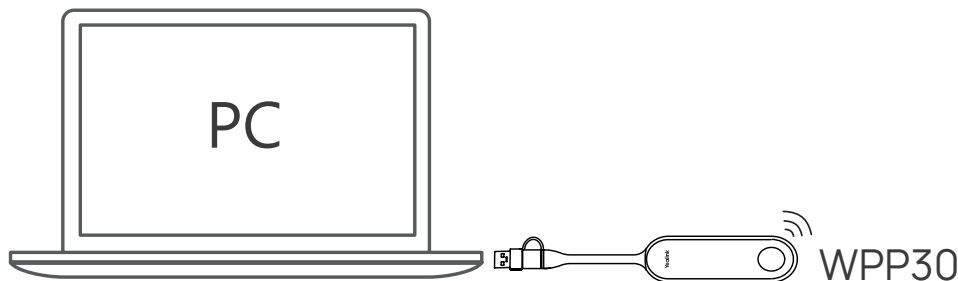

Pair with a RoomSensor

1. Switch account from Skype to Admin.
2. Open Yealink RoomConnect Software from Desktop.
3. Go to **MTouch Plus > Sensor**.
4. Add sensor. Select the right sensor to pair.
Remove the back cover of RoomSensor, you will see its name on the top. Then select accordingly.

- A MTouch Plus can be paired with one RoomSensor at most.
- The distance between MTouch Plus and RoomSensor needs to be within 20m.