AVHub Divisible Conference Room Deployment

Deployment Recommendations

Connect multiple systems' Yealink AVHubs using Ethernet cables, as shown in the deployment diagram below:

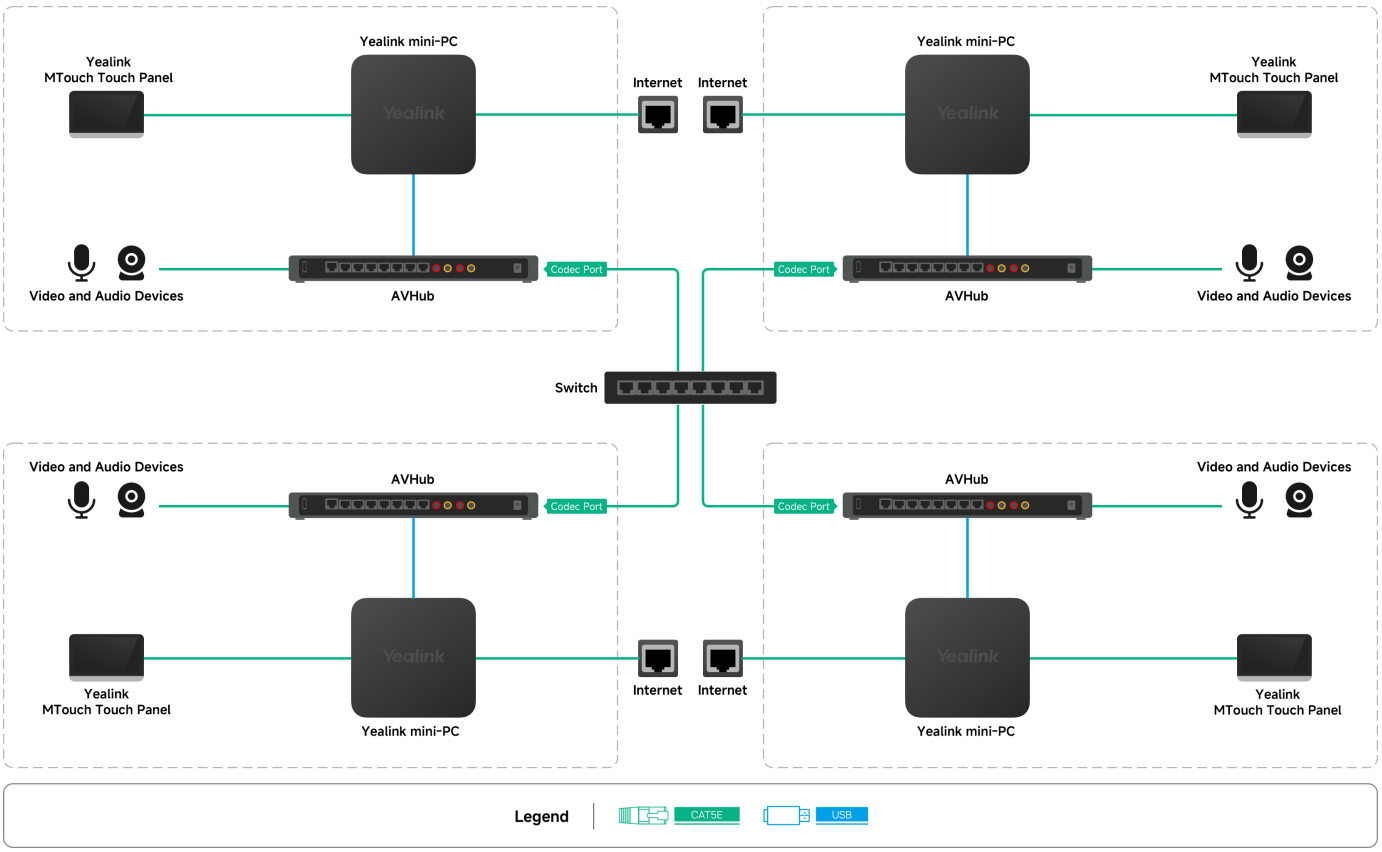

- If you need to merge more than two conference rooms, you should connect all the Yealink AVHubs' Codec interfaces from the rooms using Ethernet cables to the same switch (the switch should not be connected to the external network), and the switch should be a Gigabit switch.
- Yealink mini-PC needs to be on the same local area network (LAN).
- Conference room peripherals like cameras and microphones should be connected to Yealink AVHub via Ethernet cables and should not be connected to Yealink mini-PC via USB. Merging conference rooms means merging the devices under Yealink AVHub, and peripherals connected to Yealink mini-PC cannot be merged. For more information on the connection between Yealink AVHub and peripherals, refer to Connection.