


Yealink



Yealink Documentation
support.yealink.com

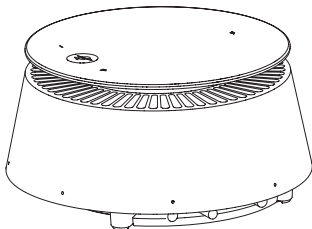

Video Conferencing Speakerphone CP50

English | Deutsch | Français | Español


Quick Start Guide V1.2

Table of Contents


English.....	1
Deutsch.....	10
Français.....	19
Español.....	28

Package Contents


EN



CP50



(7.5m, 24.60ft)
CAT5e UTP
(RJ45 - RJ45) Cable



(3.5m, 11.48ft)
Power Adapter
(48V/0.7A)




(20 * 200 mm)
Cable Ties



(1.2m, 3.94ft)
USB 3.1 (C - C) Cable



M2.0*5PWMHOZN3+
(W = 4.5)




Cable Management
Cover




Quick Start Guide

Hardware Interface Instructions

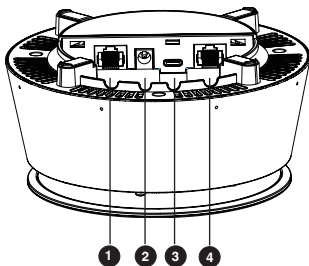

No.	Item	Description
1	Previous (Codec)	Connect to a UVC Camera (such as UVC85) or video conferencing endpoint (such as MeetingEye 500), please refer to the support website for the specific list of supported devices.
2	DC48V	Connect to the power adapter.
3	Type-C	Connect to PC.
4	Next (Audio)	Connect to CPE40. The standard power adapter(48V 0.7A) can support up to 3 CPE40. The optional power adapter (48V 2A) can support up to 7 CPE40.

LED Indicator Instructions

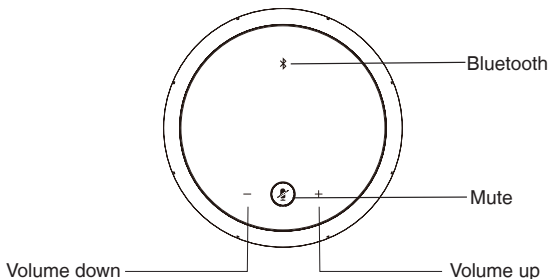


Mute LED Status	Description
Off	Non-call status
Solid red	Muted
Flashing red	Upgrade abnormality
Solid green	Call status/Outgoing call status
Flashing green	Incoming call status
Solid orange	Restart/Abnormality
Flashing orange	Upgrading

Bluetooth LED Status	Description
Off	Bluetooth function deactivated
Flashing blue	Entering pairing mode (pairing time limit: 10 minutes)
Flashing blue and then off	Pairing failed, Bluetooth turned off
Solid blue	Bluetooth connected


Cascading Mode

- **Standard power adapter(48V 0.7A):** supports cascading up to 3 CPE40 (optional power adapter(48V 2A): supports cascading up to 7 CPE40)

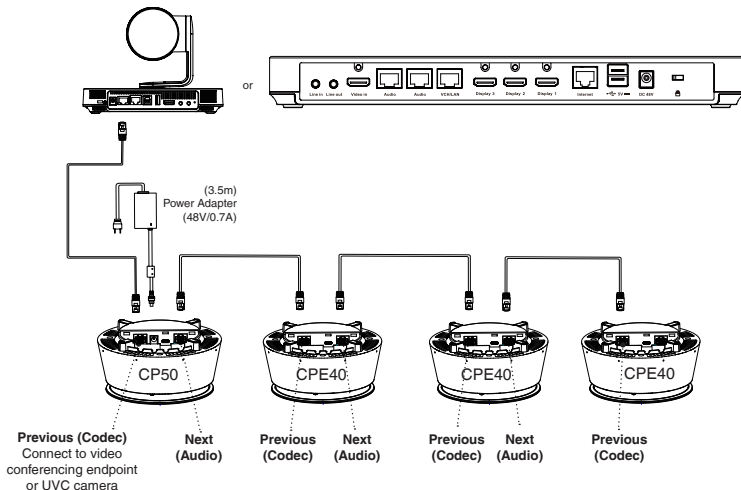


CP50 Connection

- **Connect to PC**

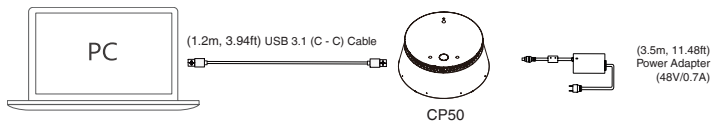


- **Connect to OPS**

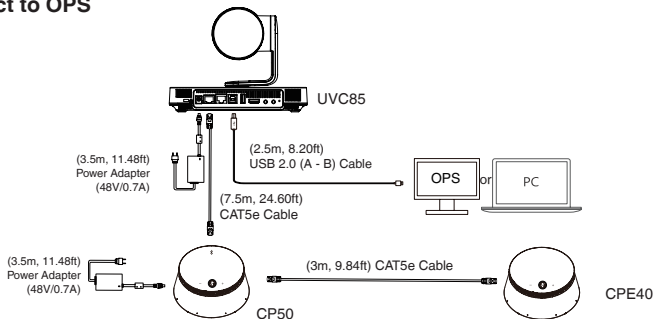


In this mode, additional connection of the CP50 to the PC for screen sharing is not supported.


- **Connect to PC and TV**

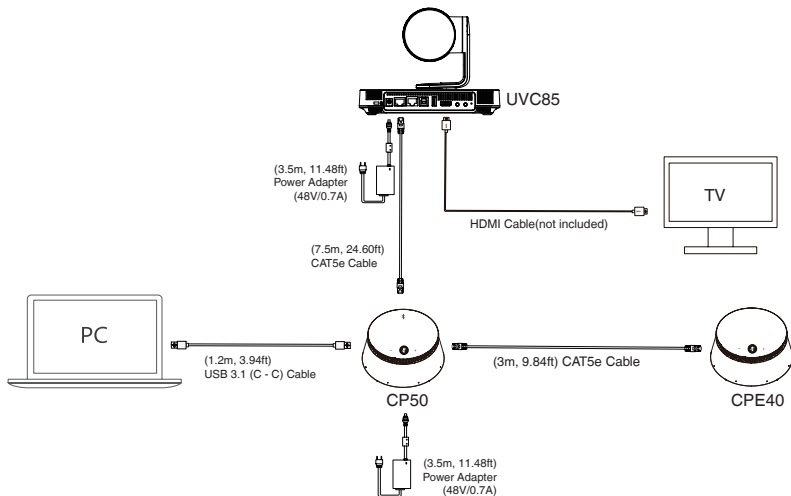

- **Connect to the video conferencing endpoint** (take MeetingEye 500 for example):

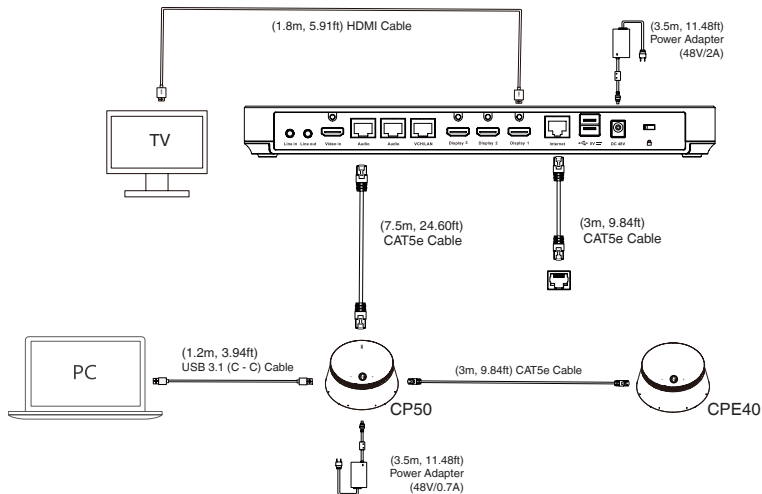

- Connect to Mobile Device:

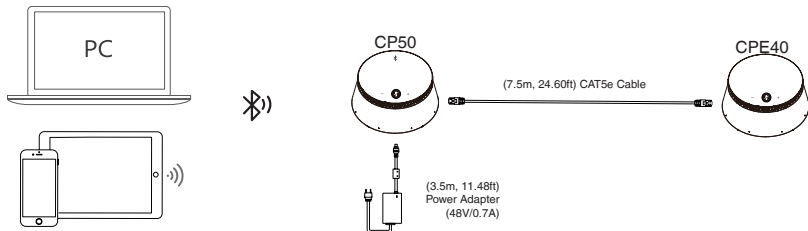


Firmware Upgrade

- Connect CP50 to a PC and use the Yealink RoomConnect software to upgrade the firmware.
- In a video conferencing endpoint: Connect CP50 to the endpoint via the VCH port, then upgrade the CP50 firmware through the endpoint's web interface.
- Connect CP50 to UVC85: Complete the firmware upgrade via the device management platform; Connect UVC85 to PC and use the Yealink RoomConnect software to upgrade the firmware.


For more information on how to upgrade the firmware, please refer to the upgrade documentation.

Lieferumfang


DE



CP50



(7,5m, 24,60ft)
CAT5e UTP
(RJ45 - RJ45) Kabel



(3,5m, 11,48ft)
Netzteil
(48 V/0,7 A)




(20 * 200 mm)
Kabelbinder



(1,2m, 3,94ft)
USB-Kabel 3.1 (C - C)



× 2
M2.0*5PWMHOZN3+
(W = 4,5)



Kabelmanagement-
Abdeckung



Kurzanleitung

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 113°F (0 to 45°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol

— is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous

substances in electrical and electronic equipment, and users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and avoid contact with water.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.

Battery Precautions

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.

- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to the your eyes or skin.
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Cleaning Requirements

Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connection with incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation de l'appareil est soumise aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique susceptible, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.

The equipment complies with FCC&IC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements ISED Canada établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

EU Regulatory Information

Power Frequency Bands and Power:

Bluetooth 2.4GHz<20 dBm

Contact Information

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R.C

Copyright©2026 Yealink Inc. All right reserved.

