

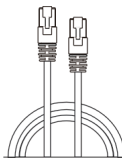
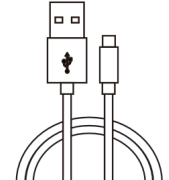
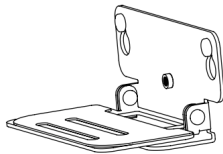




MeetingBar A25

Package Contents

Standard

				
MeetingBar A25	(3.5 m, 11.48 ft) Power Adapter	(3 m, 9.84 ft) CAT5e UTP (RJ45 - RJ45) Cable	(1.8 m, 5.91 ft) HDMI 2.0 Cable	
	 × 2	 × 2	 × 2	 × 1
(3.0m,9.84ft) USB 3.1 (A - C) Cable	φ 6*30 mm Polyamide	T4*30 mm	1/4 inch*12 mm	1/4 inch*13 mm
		 × 2	 × 5	
Mounting Bracket	Cable Cover	Screw M2 × 4 mm, CMH0ZN3+	(20 * 200 mm) Cable Ties	Quick Start Guide


Optional



VCR11 and
AAA Battery × 2



CTP25 Package

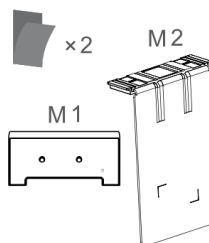

TV-Clip Mount



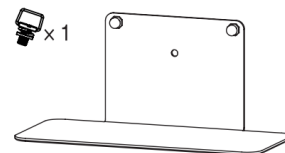



Table-top Stand




MeetingDisplay

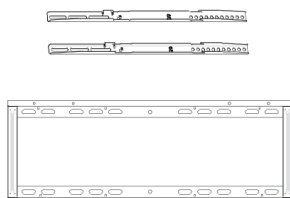

MD-WallMount

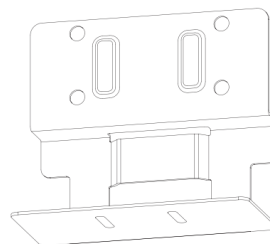


MD-AVBracket-S

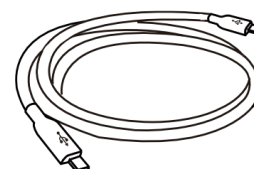

(1.8m, 5.91ft)
USB 3.1 (C - C) Cable


- ! We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.
- Put the magnetic ring on the HDMI cable to prevent electromagnetic interference.
- Operation of this equipment in a domestic environment may cause radio interference.
- It is recommended that MeetingDisplay be used with the MD-Wallmount and the MD-AVBracket-s bracket.

Connector Panel

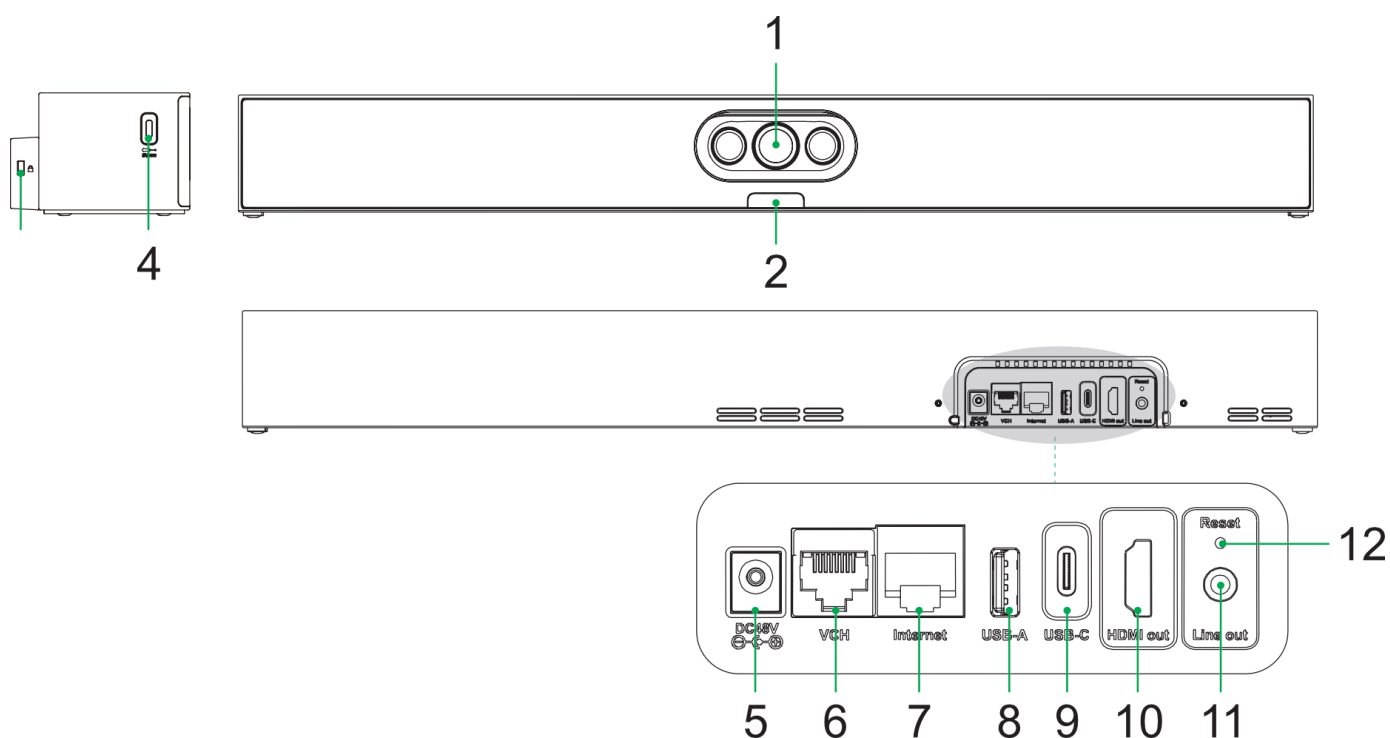

No.	Item	Description
1	Camera	A camera with an electric privacy shutter.
2	LED Indicator	Indicate the device status.
3	Security Slot	Connect a universal security cable to the device so that you can lock it down.
4	USB-C 2.0 (Side)	Connect to a Yealink Wireless Presentation Pod for pairing.
5	DC 48V	Connect to a power adapter.
6	VCH	• Connect to a Yealink CTP Touch Panel. • Connect to a PoE switch.
7	Internet	• Connect to a Yealink MeetingDisplay's LAN port to access the network, provided that the MeetingDisplay is connected to the Internet. • Connect directly to the network for Internet access.
8	USB-A 2.0	• Connect to a Yealink MeetingDisplay to synchronize configurations and integrate features. • Connect a USB accessory, such as a mouse.
9	USB-C 3.0 (Back)	Connect to a PC for content sharing.
10	HDMI-Out Port	Connect to a display for video image output.
11	Line-Out Port	Connect to a hearing aid device via a 3.5mm audio cable.
12	Reset Key	Reset to factory defaults.


Cable Connection

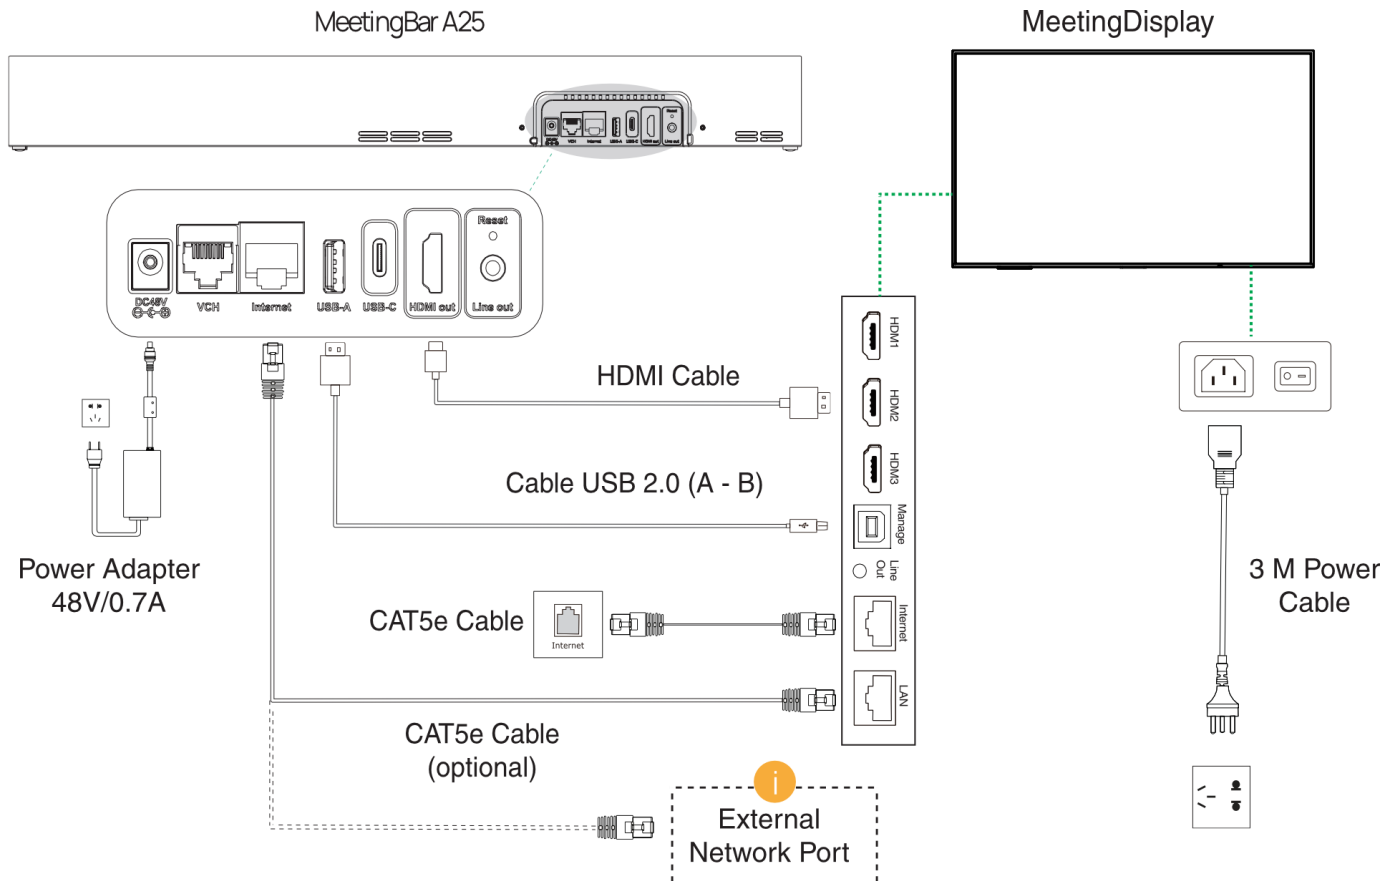


- USB 2.0 (A-B) cable is included in the MD-AVBracket-S's package.
- If the CAT5e cable from MeetingBar A25 is not connected to the LAN port of MeetingDisplay, then it should be connected to an external network port.

Installation


1. Install the MD-AVBracket-S

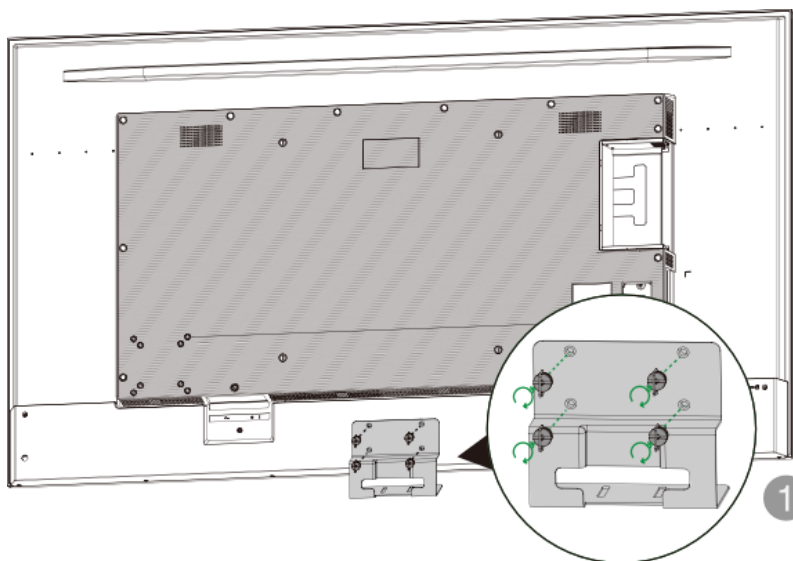



2. Place the MeetingBar A25

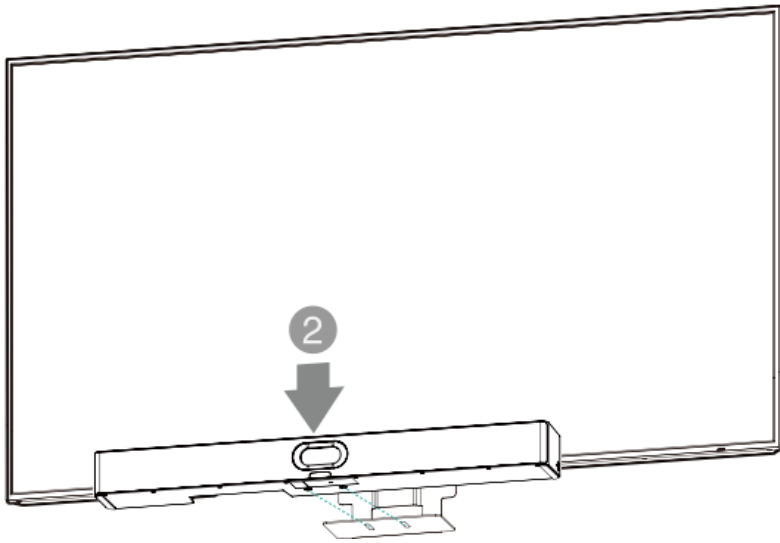

3. Fix the MeetingBar A25

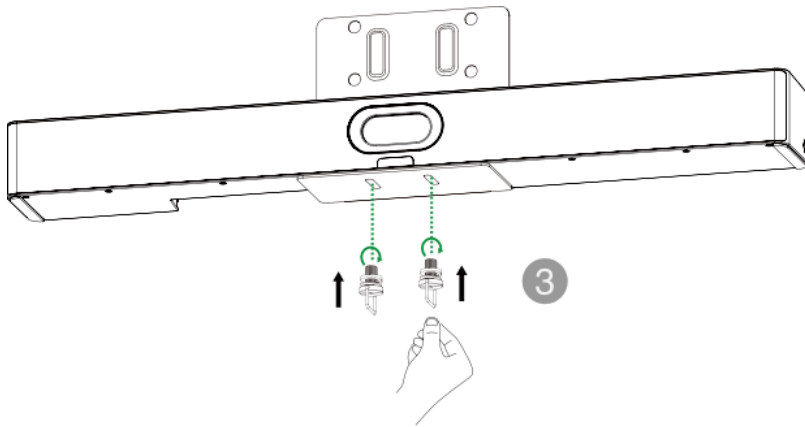

Effect Demonstration

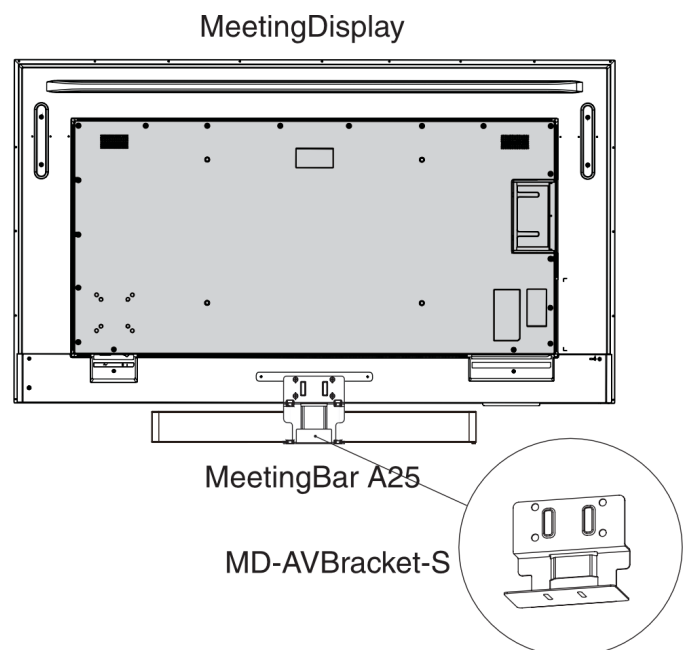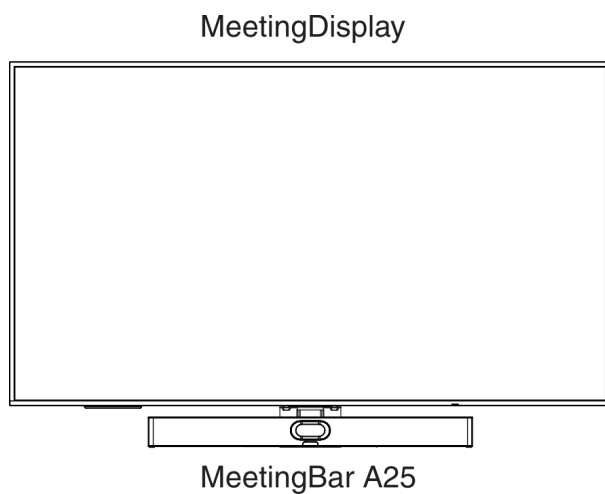



- You need to purchase MeetingDisplay and MD-AVBracket-S separately. For installation, please refer to the [MD-AVBracket-S Quick Start Guide](#) included in the corresponding package.
- Another 6 screws (1/4 inch × 12 mm) are included in the MD-AVBracket-S's package.